


TREND MICRO™ Cloud Edge 50/70 Quick Start Card

Trend Micro Cloud Edge is a next generation security solution for MSPs (Managed Service Provider) that combines on-premises and cloud-based security features. Deploy your Cloud Edge 50 and Cloud Edge 70 appliances on-premises and the MSP can remotely manage your network through the cloud.


1 Opening and Inspecting the Carton

Verify that the Cloud Edge appliance carton contains the following items:

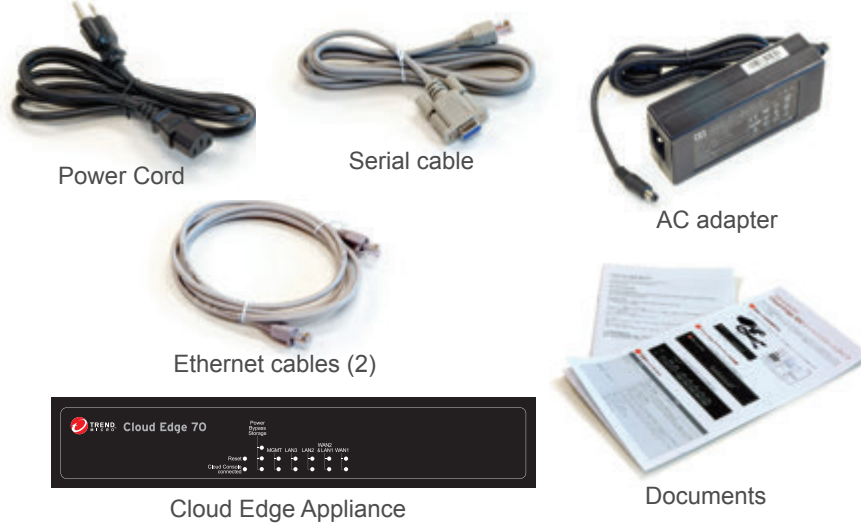


2 Examining the Cloud Edge Appliance

Cloud Edge Appliance Front Panel

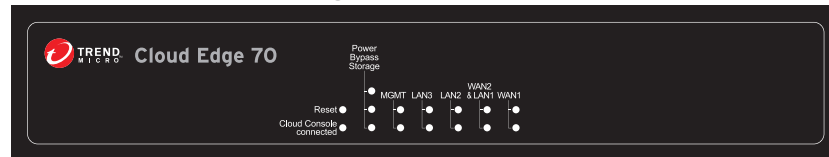


Cloud Edge Appliance Back Panel

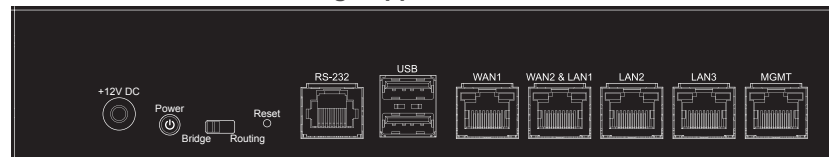

Note: The images shown are for the Cloud Edge 70. The Cloud Edge 50 panels differ slightly from the Cloud Edge 70 panels.

3 Deployment Modes

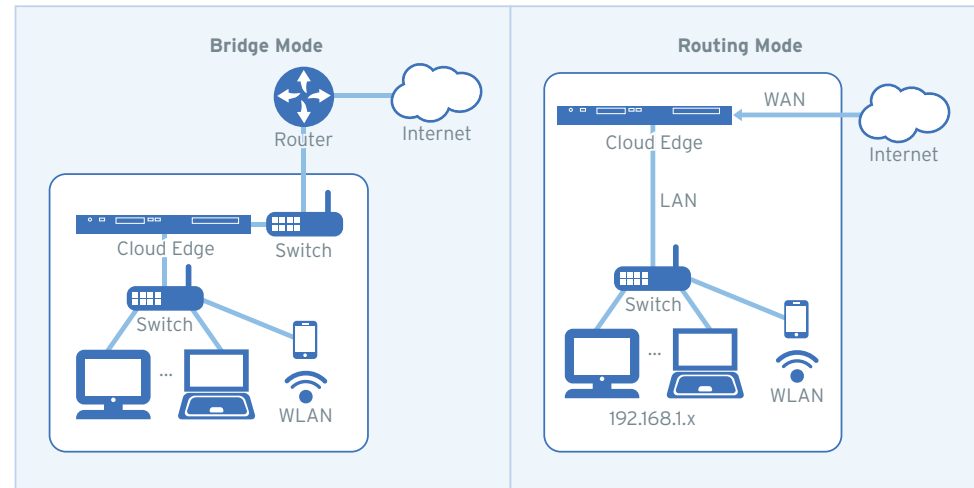


Mode	Description
Bridge	The Cloud Edge appliance acts as a transparent layer 2 device, providing scan and threat protection without interrupting traffic flow. Bridge mode does not require client, router, or switch modifications.
Routing	The Cloud Edge appliance is visible on the network and acts as a layer 3 routing device with traffic scanning and control capabilities.

4 Deployment Checklist

Requirement	Details
Ethernet cables (3 cables)	Connect to the MGMT port (management) and the WAN and LAN1 data ports.
IP addresses (1-2 addresses)	<p>Bridge Mode:</p> <ul style="list-style-type: none"> Obtain information for one internal address, either DHCP or static (IP address, netmask, and gateway). <p>Routing Mode:</p> <ul style="list-style-type: none"> Obtain the information about connecting to the WAN from your Internet Service Provider (ISP): DHCP, Static, or PPPoE. Obtain your IP address information for the internal LAN1 connection (DHCP or Static).
DNS settings	<p>Bridge Mode:</p> <ul style="list-style-type: none"> Your network DNS server IP addresses. <p>Routing Mode:</p> <ul style="list-style-type: none"> Use either automatic DNS settings assigned by the ISP's DHCP or obtain your network DNS server IP addresses.
Laptop with Ethernet port	<p>A computer that has the following software installed:</p> <ul style="list-style-type: none"> Adobe™ Flash™ 10 or later Supported web browser <ul style="list-style-type: none"> Firefox™ 43 or later Google™ Chrome 47 or later Internet Explorer™ 8-11

5 Setting up the hardware

1. Toggle the switch on the back panel (deployment mode).
2. Connect the Cloud Edge appliance to a power source.
3. Power on the Cloud Edge appliance.

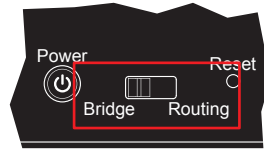

6 Connecting to the Network

1. Connect the Cloud Edge appliance WAN1 port to a wide area network (i.e. Internet).
2. Connect the Cloud Edge appliance LAN1 port to a local area network, such as a segment of your network.

7 Logging on the Web Console

1. Connect computer to the Cloud Edge appliance **MGMT** port.
2. Open a supported web browser.
3. Go to the following URL: `https://192.168.252.1:8443/`
4. Specify the logon credentials.
 - **User name:** admin
 - **Password:** adminCloudEdge
5. Press **Enter** or click **Log On**.

8 Performing the Initial Configuration

After logging in for the first time, the Quick Setup screen opens automatically.

Bridge Mode

Configure the br0 Interface Using Quick Setup

1. Under **Uplink configuration** section, specify the network address information for the br0 interface.
 - **DHCP**
 - **Static:** Specify IPv4 address, netmask, and gateway.
2. Specify the DNS server IP addresses.

This step is optional if DNS server addresses assigned by DHCP.
3. Under **System settings** section:
 - a. Specify a FQDN in the **Host name** field.
 - b. Configure time settings.
 - Automatically: Select **Enable NTP server** and enter the NTP server IP address.
 - Manually: Select **Manually set time** and enter time in the **Local time** field.
4. Click **Test Configuration** to verify the network uplink configuration.
5. Click **Save & Register**.

Routing Mode

Configure WAN Interface Using Quick Setup

1. Under **Uplink configuration** section, specify the network information for the WAN interface.
 - **DHCP**
 - **PPPoE:** Specify User name and Password.
 - **Static:** Specify IPv4 address, netmask, and gateway.

2. Specify the DNS server IP addresses.

This step is optional if DNS server addresses assigned by DHCP or PPPoE.

3. Under **System settings** section:

- a. Specify a FQDN in the **Host name** field.
- b. Configure time settings.

- Automatically: Select **Enable NTP server** and enter the NTP server IP address.
- Manually: Select **Manually set time** and enter time in the **Local time** field.

4. Click **Test Configuration** to verify the network uplink configuration.


5. Click **Save & Register**.

Configure LAN1 interface using On-Premises Console

1. Click on the **Cloud Edge On-Premises Console** link.
2. Go to **Network > Interfaces**.
3. Click the LAN1 interface, select **L3** type, and configure IP address settings.
 - **DHCP**
 - **Static:** Manually enter address information for IPv4 (IP address, netmask) or IPv6 (IP address, prefix length) and, optionally, a gateway address.
4. Click **Apply**.

9 Verifying Connectivity

The Green LED (Light-Emitting Diode) on the front panel shows the deployment status.

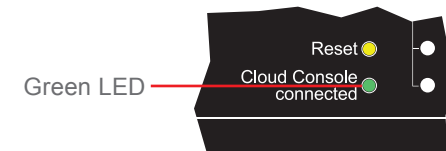

Green LED	Status
No light	The Cloud Edge appliance cannot communicate with the Internet.
Solid green light	The Cloud Edge appliance is registered and communicating with Cloud Edge Cloud Console.
Blinking green light	The Cloud Edge appliance is not registered or cannot communicate with Cloud Edge Cloud Console. Contact your managed service provider for assistance.

10 Contact Information

- Website: <http://www.trendmicro.com>
- List of worldwide offices and phone numbers: <http://www.trendmicro.com/us/about-us/contact/index.html>

© 2016 Trend Micro Incorporated. All Right Reserved. Trend Micro and the t-ball logo are trademarks or registered trademarks of Trend Micro Incorporated. All other company and/or product names may be trademarks or registered trademarks of their owners. Information contained in this document is subject to change without notice.

Item Code: APEQ17400/160511