


This appliance is a custom sandbox analysis server that enhances the targeted attack protection of Trend Micro and third-party security products. The appliance supports out-of-the-box integration with Trend Micro email and web security products, and can also be used to augment or centralize the sandbox analysis of other TippingPoint Advanced Threat Protection products.

1 Opening and Inspecting the Carton

Verify that the carton contains the following items:



2 Examining the Appliance

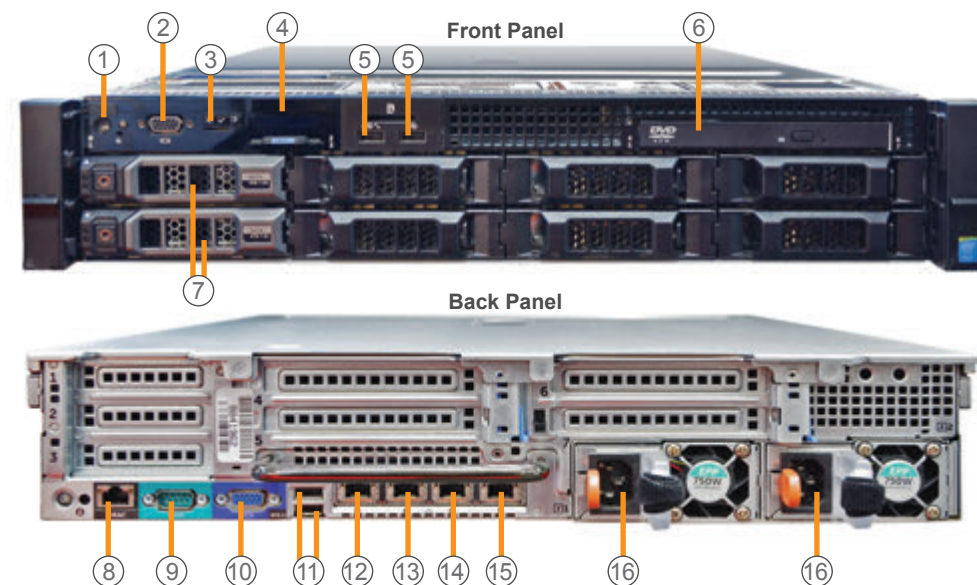

- | | | |
|-------------------------------|----------------------------|------------------------------|
| (1) Power-on indicator/button | (7) Hard drives | (13) Custom port eth1** |
| (2) Front video connector | (8) iDRAC port | (14) Custom port eth2** |
| (3) LCD menu buttons | (9) Serial connector | (15) Custom port eth3*** |
| (4) LCD panel | (10) Back video connector | (16) Power supply connectors |
| (5) USB 2.0 connectors | (11) USB 3.0 connectors | |
| (6) Optical drive | (12) Management port eth0* | |

* Management port eth0: Connects the appliance to the management network.

** Custom ports eth1, eth2, eth3: Connect the appliance to isolated networks that are reserved for sandbox analysis


*** Custom port eth3: If using high availability, connects the appliance to eth3 of an identical appliance. Only eth1 and eth2 can be used for sandbox analysis.

3 Recommended Network Environment

The appliance requires connection to a management network, which usually is the organization's intranet. After deployment, administrators can perform configuration tasks from any computer on the management network.

Trend Micro recommends using a custom network for sample analysis. Custom networks ideally are connected to the Internet but may be configured with its own set of proxy settings, proxy authentication, and connection restrictions. V@. provides the option to proxies for custom networks, as well as providing support for proxy authentication.

The networks must be independent of each other so that malicious samples in the custom network do not affect hosts in the management network.

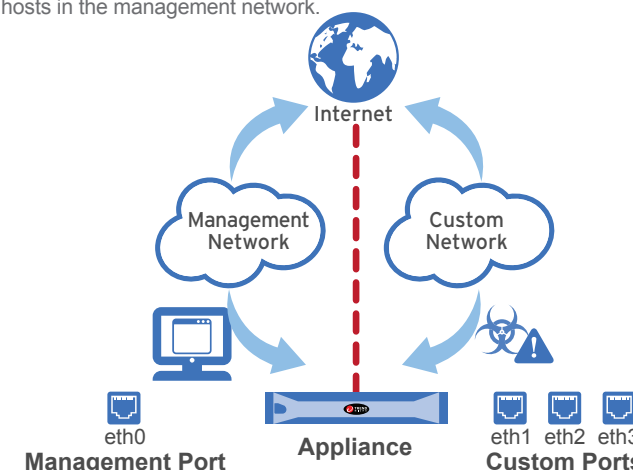

4 Deployment Checklist

Requirement	Details
Activation Code	Obtain from Trend Micro
Monitor and VGA cable	Connects to the VGA port of the appliance
USB keyboard	Connects to the USB port of the appliance
USB mouse	Connects to the USB port of the appliance
Ethernet cables	<ul style="list-style-type: none"> One cable connects the management port of the appliance to the management network. One cable connects a custom port to an isolated network that is reserved for sandbox analysis. If using high availability, one cable connects eth3 to eth3 on an identical appliance.
Internet-enabled computer	A computer with the following software installed: <ul style="list-style-type: none"> Microsoft™ Internet Explorer™ 9, 10 or 11, Microsoft™ Edge™, Mozilla™ Firefox™, or Google™ Chrome™.
IP addresses	<ul style="list-style-type: none"> One static IPv4 address in the management network. If sandbox instances require Internet connectivity, one extra IPv4 address for Virtual Analyzer. If using high availability, one extra virtual IP address.

5 Setting Up the Hardware

1. Mount the appliance in a standard 19-inch 4-post rack, or on a free-standing object, such as a sturdy desktop.

Note: When mounting the appliance, leave at least two inches of clearance on all sides for proper ventilation and cooling.

- Connect the appliance to a power source.
- Connect the monitor to the VGA port at the back of the appliance.

- Connect the keyboard and mouse to the USB ports at the back of the appliance.
- Connect the Ethernet cables to the management and custom ports.
- Power on the appliance.

6 Performing Initial Configuration

1. On the preconfiguration console logon screen, type the following default logon credentials:

- User name: **admin**
- Password: **Admin1234!**

Note: The typed password characters do not appear on the screen.

2. Select **Configure appliance IP address** and press **Enter**.

3. Specify the following network addresses.

- IPv4 address: Must not conflict with the Virtual Analyzer addresses (1.1.0.0 - 1.1.2.255) and custom network address
- Subnet mask
- IPv4 gateway: Must be in the same subnet as the IP address
- IPv4 DNS server 1

4. Press **Tab** to navigate to **Save**, and then press **Enter**.

For additional configuration procedures, see the Getting Started chapter in the Administrator's Guide. Download the document at:

<http://docs.trendmicro.com/en-us/enterprise/tippingpoint-advanced-threat-protection-analyzer.aspx>

7 Accessing the Management Console

1. Using a supported web browser, open the management console at: `https://<Appliance IP Address>/pages/login.php`

Note:

- Set the Internet Security level to Medium and enable ActiveX Binary and Script Behaviors.
- Use the IP address that you specified during the initial configuration.

2. On the logon screen, type the following default credentials:

- User name: **admin**
- Password: **Admin1234!**

3. Click **Log On**.

8 Contact Information

• **Website:**

<http://www.trendmicro.com>

• **List of worldwide offices and phone numbers:**

<http://www.trendmicro.com/us/about-us/contact/index.html>