

Fan installation and safety

Your spare fan replacement unit can only be used with TippingPoint S3000/S8000 Next Generation Firewall (NGFW) appliances and 2200T Threat Protection System (TPS) devices.

It cannot be used as a standalone product.

The Spare Fan kit includes the following items:

- Spare Fan
- Documentation Kit

Fan assembly

All S3000/S8000 Series NGFW appliances and 2200T TPS devices include three replaceable cooling fans.

WARNING! This accessory CANNOT be hot-swapped. The appliance MUST be powered off before removal or insertion of the fan.

Trend Micro
225 E. John Carpenter Freeway
Suite 1500
Irving, TX 75062
USA
(888) 762-8736

© 2016 Trend Micro Incorporated. All rights reserved.

Trend Micro makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Trend Micro shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Trend Micro. The information is provided "as is" without warranty of any kind and is subject to change without notice. The only warranties for Trend Micro products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. Trend Micro shall not be liable for technical or editorial errors or omissions contained herein.

TippingPoint, the TippingPoint logo, and Digital Vaccine are trademarks or registered trademarks of Trend Micro Incorporated. All other company and/or product names may be trademarks or registered trademarks of their respective owners. This document contains confidential information, trade secrets or both, which are the property of Trend Micro. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from Trend Micro or one of its subsidiaries.

A2 Edition, August 2016

Publication Part Number: 5200-1082 Rev A2



5200-1082

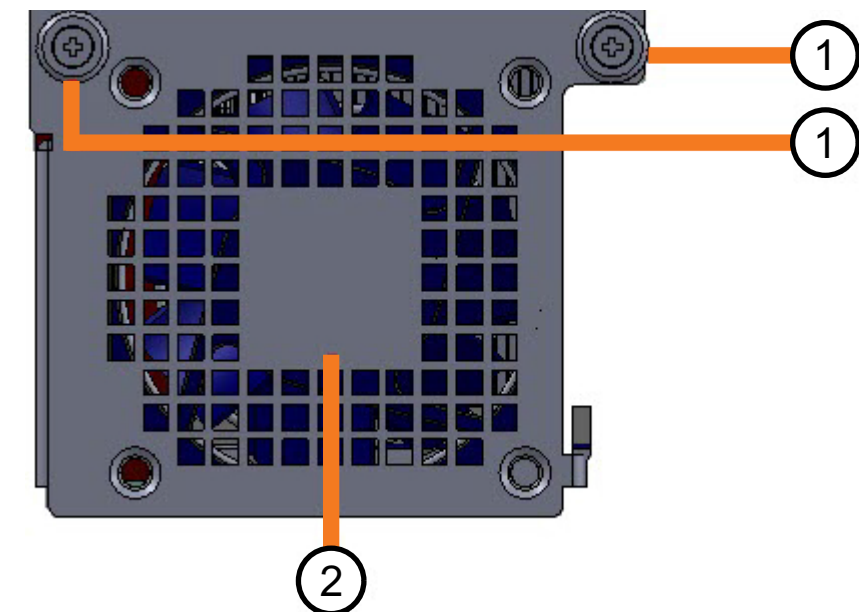


Figure 1-1 Fan module

- 1 Attachment Screw Knobs
- 2 Fan Assembly

Identify the faulty fan

Before you begin, determine which fan assembly is faulty and needs to be replaced. When a fan module fails or its RPM rate falls below a certain threshold, the system generates a warning or critical alarm message in its logs. Each fan is identified by its physical proximity to the power supply:

- Rear fan away from power supply
- Rear fan in the center
- Rear fan near the power supply

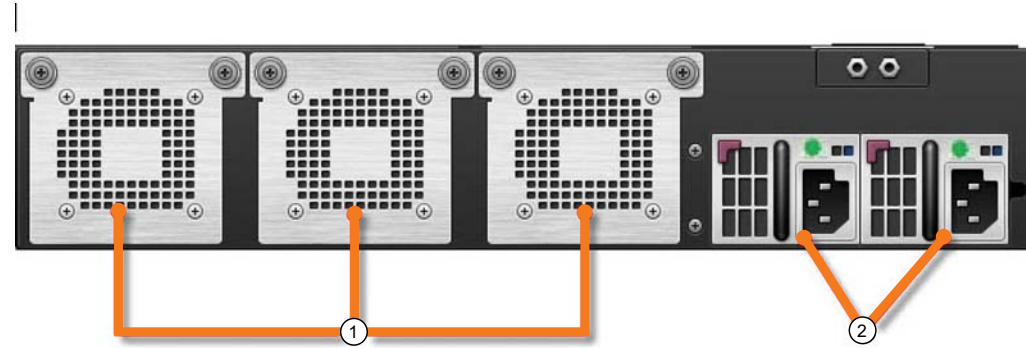


Figure 1-1 NGFW Appliance - back panel

- 1 Fans (3)
- 2 Power supplies (2)

You can verify the fan's performance using:

- The Local Security Manager (LSM) graphical user interface: **System Health > Monitor > Fan Speed**
- The command line interface (CLI): `show health fan`

Install the replacement fan

After you identify the faulty fan assembly, follow this procedure to replace the fan.

WARNING! This accessory CANNOT be hot-swapped. The appliance MUST be powered off before removal or insertion of the fan.

1. Press the Power button to power down the appliance.
2. Remove both power cords.
3. Loosen the top two attachment screw knobs. The screw knobs remain attached to the assembly.
4. Lift the assembly up slightly and pull it from its slot.
5. Set the faulty fan aside.
6. Remove the new fan assembly from the packaging.
7. Align the new fan assembly slightly higher than its open slot and then slide the unit down until it is seated in the connector.
8. Tighten the two attachment screw knobs securely.
9. Plug in the power cords.
10. Press the power button to turn on the appliance.

After you insert the fan module, the system verifies the fan RPM and displays it on the LSM (**System Health > Monitor > Fan Speed**).

Contact information

TippingPoint devices have a full set of documentation. For the most recent documentation updates, check the Threat Management Center (TMC) Web site at <https://tmc.tippingpoint.com>.

If you need technical support, call 1-866-681-8324 (1-866-681-TECH) or send an e-mail to tippingpoint.support@trendmicro.com.

Safety and compliance

This accessory complies with the following Safety Standards:

- UL 507
- UL 1007
- IEC/EN 60950-1
- CSA C22.2 No. 113-08

Reduction of hazardous substances

TippingPoint products comply with the RoHS Directive 2011/65/EU.



Trend Micro
Model Farm Road
Cork, Ireland
Eircode T12 VP44

Waste electrical and electronic equipment



The host product of this custom accessory complies with the labeling requirement of the Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC.

Turkish recycling notice



Türkiye Cumhuriyeti: EEE Yönetmeliğine Uygundur

Ukraine Compliance Statement

Україна: Обладнання відповідає вимогам Технічного регламенту щодо обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні, затвердженого постановою Кабінету Міністрів України від 3 грудня 2008 № 1057.

Ukraine: The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of December 3, 2008 No. 1057, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.