



TrendAI™

Deep Discovery Inspector

7.0

Installation and Deployment Guide

Breakthrough Protection Against APTs and Targeted Attacks

---

Trend Micro Incorporated reserves the right to make changes to this document and to the product described herein without notice. Before installing and using the product, review the readme files, release notes, and/or the latest version of the applicable documentation, which are available from the Trend Micro website at:

<https://docs.trendmicro.com>

Trend Micro, the Trend Micro t-ball logo, Deep Discovery Advisor, Deep Discovery Analyzer, and Deep Discovery Inspector are trademarks or registered trademarks of Trend Micro Incorporated. All other product or company names may be trademarks or registered trademarks of their owners.

Copyright © 2025. Trend Micro Incorporated. All rights reserved.

Document Part No.: APEM6810070/251027

Release Date: November 2025

Protected by U.S. Patent No.: 8595840; 8925074; 7707635; 8505094

This documentation introduces the main features of the product and/or provides installation instructions for a production environment. Read through the documentation before installing or using the product.

Detailed information about how to use specific features within the product may be available at the Trend Micro Online Help Center and/or the Trend Micro Knowledge Base.

## **Privacy and Personal Data Collection Disclosure**

Certain features available in Trend Micro products collect and send feedback regarding product usage and detection information to Trend Micro. Some of this data is considered personal in certain jurisdictions and under certain regulations. If you do not want Trend Micro to collect personal data, you must ensure that you disable the related features.

The following link outlines the types of data that Deep Discovery Inspector collects and provides detailed instructions on how to disable the specific features that feedback the information.

<https://success.trendmicro.com/data-collection-disclosure>

Data collected by Trend Micro is subject to the conditions stated in the Trend Micro Privacy Notice:

<https://www.trendmicro.com/privacy>

# Table of Contents

## Part I: Introduction

### Chapter 1: Introduction

About Deep Discovery Inspector .....	1-2
What's new .....	1-2
Features and benefits .....	1-3
Threat management capabilities .....	1-4
APT Attack Sequence .....	1-4
Host Severity .....	1-6
Advanced threat scan engine .....	1-8
Virtual analyzer .....	1-9
Deployment scenarios .....	1-9

## Part II: Hardware appliance installation and deployment

### Chapter 2: About your system

Package contents .....	2-2
The Deep Discovery Inspector appliance .....	2-3
Front panel .....	2-4
Front panel - 550/1500 appliance .....	2-4
Front panel - 530/1300 appliance .....	2-5
Front panel - 4300/9300 appliance .....	2-6
Front panel - 40G appliance .....	2-7
Back panel .....	2-8
Back panel - 550/1500 appliance .....	2-8
Back panel - 530/1300 appliance .....	2-10
Back panel - 4300/9300 appliance .....	2-11
Back Panel - 40G appliance .....	2-12

Network cards .....	2-14
Port order .....	2-14
Port order - 550/1500 appliance .....	2-14
Port order - 530/1300 appliance .....	2-15
Port order - 4300/9300 appliance .....	2-16
Port Order - 40G appliance .....	2-18
NIC indicators .....	2-19
NIC indicators - 550/1500 .....	2-19
NIC indicators - 530/1300 .....	2-20
NIC indicators - 4300/9300 .....	2-21
Data port indicators - 4300/9300 1 Gbps .....	2-21
Data NIC indicators - 4300/9300 10/25 Gbps .....	2-21
NIC indicators - 40G appliance .....	2-22
Supported add-on network interface cards .....	2-24
Status LED indicators .....	2-25
Power supply indicators .....	2-25
Setting up the hardware .....	2-26
Product specifications .....	2-27
550/1500 appliance specifications .....	2-28
530/1300 appliance specifications .....	2-28
4300/9300 appliance specifications .....	2-29
40G appliance specifications .....	2-30

### **Chapter 3: Hardware appliance deployment**

Deployment overview .....	3-2
Hardware appliance deployment planning .....	3-2
Deployment scenarios .....	3-3
Out-of-band .....	3-3
Mirroring trunk links .....	3-4
Multiple port monitoring .....	3-5
Network tap monitoring .....	3-5
Proxy monitoring .....	3-6
Redundant networks .....	3-8
Remote port or VLAN mirroring .....	3-8
Single port monitoring .....	3-9

VLAN-based port monitoring .....	3-11
VMware port mirroring .....	3-11
Inline .....	3-11
Transparent bridge .....	3-11
Hardware appliance installation requirements .....	3-13
Hardware appliance system requirements .....	3-14
Hardware appliance requirements .....	3-14
Preconfiguration console requirements .....	3-15
Management console requirements .....	3-15
Virtual analyzer image operating system requirements .....	3-16

## **Chapter 4: Installation on a hardware appliance**

Configuring options .....	4-2
Setting JavaScript options for Google Chrome .....	4-2
Setting JavaScript options for Mozilla Firefox .....	4-2
Deep Discovery Inspector hardware appliance installation ....	4-3
Installing Deep Discovery Inspector on hardware appliances with an optical drive .....	4-3
Installing Deep Discovery Inspector on hardware appliances without an optical drive .....	4-10
Restoring to factory mode .....	4-15

## **Chapter 5: Port mirroring on a VMware virtual distributed switch**

Creating a VMware vSphere distributed switch (VDS) .....	5-2
Deep discovery inspector hardware appliance with a VDS .....	5-5
Hardware appliance - configuring mirrored traffic monitoring from a VDS with encapsulated remote mirroring .....	5-5
Hardware appliance - configuring mirrored traffic monitoring from a VDS with remote mirroring .....	5-9

# **Part III: Virtual appliance installation and deployment**

## **Chapter 6: Virtual appliance deployment**

Deployment overview .....	6-2
Virtual appliance deployment planning .....	6-2
Deployment scenarios .....	6-3
VMware port mirroring .....	6-3
Virtual appliance installation requirements .....	6-3
Virtual appliance system requirements .....	6-4
Virtual host appliance requirements .....	6-4
Management console requirements .....	6-5

## **Chapter 7: Create a new virtual appliance**

Create a VMware ESXi virtual appliance .....	7-2
Requirements for a virtual machine in VMware ESXi .....	7-2
Configuring the VMware ESXi server network .....	7-2
Creating a virtual machine in VMware ESXi .....	7-7
Enabling hardware-assisted virtualization in VMware ESXi .....	7-13
Create a Microsoft Hyper-V virtual appliance .....	7-14
Creating a virtual machine in Microsoft Hyper-V .....	7-14
Configure traffic mirroring in Microsoft Hyper-V .....	7-36
Configuring external traffic mirroring in Microsoft Hyper-V .....	7-37
Configuring internal VM traffic mirroring in Microsoft Hyper-V .....	7-39

## **Chapter 8: Installation on a virtual appliance**

Configuring options .....	8-2
Setting JavaScript options for Google Chrome .....	8-2
Setting JavaScript options for Mozilla Firefox .....	8-2
Setting options for virtual appliance in ESXi .....	8-3
Deep Discovery Inspector virtual appliance installation .....	8-4

## Chapter 9: Port mirroring on a VMware virtual distributed switch

Creating a VMware vSphere distributed switch (VDS) .....	9-2
Deep discovery inspector virtual appliance with a VDS .....	9-5
Requirements for virtual appliances with a VDS .....	9-5
Virtual appliance - monitoring mirrored external network traffic using a VDS .....	9-7
Virtual appliance - configuring mirrored external network traffic monitoring with encapsulated remote mirroring .....	9-8
Virtual appliance - configuring mirrored external network traffic monitoring with remote mirroring ..	9-10
Virtual appliance - monitoring mirrored VM traffic from a VDS .....	9-14
Virtual appliance - monitoring mirrored traffic from different ESXi hosts .....	9-14
Virtual appliance - configuring mirrored VM traffic monitoring with encapsulated remote mirroring ....	9-15
Virtual appliance - configuring mirrored VM traffic monitoring with remote mirroring .....	9-20
Virtual appliance - monitoring mirrored traffic from the same ESXi host .....	9-26
Virtual appliance - configuring distributed port mirroring on a VDS .....	9-27

## Part IV: Post-installation tasks

### Chapter 10: Preconfiguration

Preconfiguration console .....	10-2
Preconfiguration console access .....	10-2
Accessing the preconfiguration console with a VGA port .....	10-3
Accessing the preconfiguration console with a serial port .....	10-3

Preconfiguration console main menu .....	10-4
Viewing appliance information and status .....	10-6
Modifying device settings .....	10-6
Modifying interface settings .....	10-8

## **Chapter 11: System tasks**

System tasks overview .....	11-2
Performing a diagnostic test .....	11-2
Performing a ping test .....	11-3
Restarting Deep Discovery Inspector .....	11-4
Changing the root password .....	11-5
Logging off .....	11-5
Configuring manual traffic bypass .....	11-6

## **Chapter 12: Troubleshoot**

Frequently asked questions (FAQs) .....	12-2
FAQs - appliance rescue .....	12-2
FAQs - configuration .....	12-3
FAQs - detections .....	12-3
FAQs - installation .....	12-3
FAQs - upgrade .....	12-4
FAQs - virtual analyzer image .....	12-4
Troubleshooting .....	12-5
Slow management console response .....	12-5
Detections .....	12-6
No detections on all detections screen .....	12-6
"unregistered service" server displays in all detections query .....	12-7
Unknown IP addresses display on a screen .....	12-7
Known safe objects flagged as malicious .....	12-7
"database is corrupt" alert displays .....	12-8
Virtual analyzer .....	12-8
Cannot upload OVA .....	12-8
No virtual analyzer response to file submissions .....	12-8
Virtual analyzer images .....	12-9
The installation media does not start .....	12-9

"found new hardware" wizard .....	12-10
An image displays a blue screen .....	12-10
Cannot connect to network services .....	12-11
Diagnostics .....	12-11
Inline deployment and TLS inspection .....	12-12
Network connectivity issue .....	12-13
TLS connection issue .....	12-14

## **Part V: Technical support**

### **Chapter 13: Troubleshooting resources**

Using the support portal .....	13-2
Threat encyclopedia .....	13-2

### **Chapter 14: Contacting Trend Micro**

Speeding up the support call .....	14-2
------------------------------------	------

### **Chapter 15: Sending suspicious content to TrendAI**

Email Reputation Services .....	15-2
File Reputation Services .....	15-2
Web Reputation Services .....	15-2

### **Chapter 16: Other resources**

Download center .....	16-2
-----------------------	------

### **Appendix A: Ports used by Deep Discovery Inspector**

### **Index**

Index .....	IN-1
-------------	------



# Preface

## Preface

Learn more about the following topics:

- *Documentation on page 2*
- *Audience on page 3*
- *Document Conventions on page 3*

## Documentation

The documentation set for Deep Discovery Inspector includes the following:

**TABLE 1. Product Documentation**

DOCUMENT	DESCRIPTION
Administrator's Guide	The Administrator's Guide contains detailed instructions on how to configure and manage Deep Discovery Inspector, and explanations on Deep Discovery Inspector concepts and features.
AWS Deployment Guide	The AWS Deployment Guide contains information about requirements and procedures for planning deployment, deploying, and troubleshooting Deep Discovery Inspector deployment on AWS.
Inline (LAN bypass) Network Interface Card Installation Guide	The Inline (LAN bypass) Network Interface Card Installation Guide contains information about requirements and procedures for installing an additional bypass network interface card on supported Deep Discovery Inspector appliances.
Installation and Deployment Guide	The Installation and Deployment Guide contains information about requirements and procedures for planning deployment, installing Deep Discovery Inspector, and using the Preconfiguration Console to set initial configurations and perform system tasks.
Syslog Content Mapping Guide	The Syslog Content Mapping Guide provides information about log management standards and syntaxes for implementing syslog events in Deep Discovery Inspector.
Quick Start Card	The Quick Start Card provides user-friendly instructions on connecting Deep Discovery Inspector to your network and on performing the initial configuration.
Readme	The Readme contains late-breaking product information that is not found in the online or printed documentation. Topics include a description of new features, known issues, and product release history.

DOCUMENT	DESCRIPTION
Online Help	Web-based documentation that is accessible from the Deep Discovery Inspector management console.  The Online Help contains explanations of Deep Discovery Inspector components and features, as well as procedures needed to configure Deep Discovery Inspector.
Support Portal	The Support Portal is an online database of problem-solving and troubleshooting information. It provides the latest information about known product issues. To access the Support Portal, go to the following website:  <a href="https://success.trendmicro.com">https://success.trendmicro.com</a>

View and download product documentation from the Trend Micro Online Help Center:

<https://docs.trendmicro.com/en-us/home.aspx>

## Audience

The Deep Discovery Inspector documentation is written for IT administrators and security analysts. The documentation assumes that the reader has an in-depth knowledge of networking and information security, including the following topics:





- Network topologies
- Database management
- Antivirus and content security protection

The documentation does not assume the reader has any knowledge of sandbox environments or threat event correlation.

## Document Conventions


The documentation uses the following conventions:

**TABLE 2. Document Conventions**

CONVENTION	DESCRIPTION
UPPER CASE	Acronyms, abbreviations, and names of certain commands and keys on the keyboard
<b>Bold</b>	Menus and menu commands, command buttons, tabs, and options
<i>Italics</i>	References to other documents
Monospace	Sample command lines, program code, web URLs, file names, and program output
<b>Navigation &gt; Path</b>	The navigation path to reach a particular screen For example, <b>File &gt; Save</b> means, click <b>File</b> and then click <b>Save</b> on the interface
 <b>Note</b>	Configuration notes
 <b>Tip</b>	Recommendations or suggestions
 <b>Important</b>	Information regarding required or default configuration settings and product limitations
 <b>WARNING!</b>	Critical actions and configuration options

# Part I

## Introduction

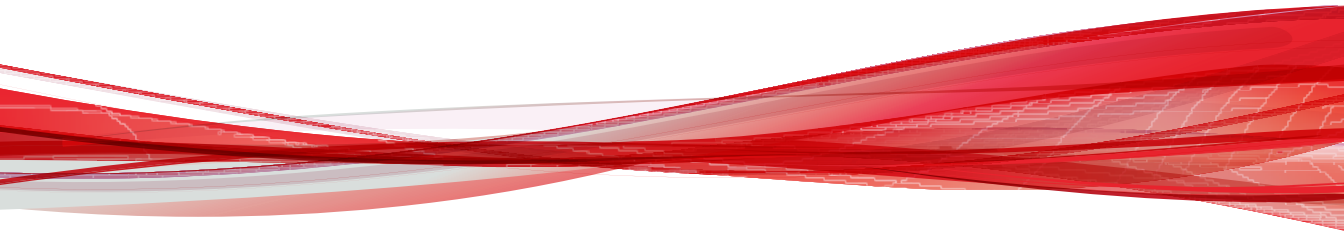



# Chapter 1

## Introduction

Learn about product features, capabilities, and security technology in the following topics:

- *About Deep Discovery Inspector on page 1-2*
- *Features and benefits on page 1-3*
- *Threat management capabilities on page 1-4*
- *APT Attack Sequence on page 1-4*
- *Host Severity on page 1-6*
- *Advanced threat scan engine on page 1-8*
- *Virtual analyzer on page 1-9*

## About Deep Discovery Inspector

Deep Discovery Inspector is a third-generation threat management solution designed and architected to deliver breakthrough targeted attack and advanced threat visibility, insight, and control. Deep Discovery Inspector provides IT administrators with critical security information, alerts, and reports.

Trend Micro developed Deep Discovery Inspector to meet the requirements of G1000 organizations and government around the world. Deep Discovery Inspector integrates global intelligence and scanning technology to catch traditional signature-based threats and more sophisticated threats requiring heuristic analysis.

## What's new

The following table describes the new features in Deep Discovery Inspector 7.0.

FEATURE	DESCRIPTION
JA4 fingerprinting support	Deep Discovery Inspector can now recognize JA4 fingerprints to detect anomalies in network traffic.
OT protocol identification and detection	Deep Discovery Inspector now identifies and detects operational technology (OT) protocols for the energy vertical, including PROFINET IO (PNIO-CM and PNIO-MMS).
SHA-256 file hash support	Deep Discovery Inspector now supports the SHA-256 file hash type for Virtual Analyzer Suspicious Objects.
Shadow proxy detection	Deep Discovery Inspector can now identify the real client IP addresses behind shadow proxies.
Active scanner for device discovery	An integrated active scanner enables device discovery when Deep Discovery Inspector operates as a Trend Vision One network sensor, providing greater network visibility.
Virtual Analyzer enhancements	Virtual Analyzer now supports threat analysis using Windows Server 2025, Windows 11 24H2, and Red Hat Enterprise Linux 9.0 sandbox images.

FEATURE	DESCRIPTION
Backup and restore configuration from Trend Vision One Network Inventory	Administrators can back up and restore Deep Discovery Inspector configurations directly from the Network Inventory app in Trend Vision One.
System logs visible in Trend Vision One	Deep Discovery Inspector system logs are now visible and searchable in the Trend Vision One console.
Multi-factor authentication	Administrators can require email one-time passcode (OTP) multi-factor authentication for Deep Discovery Inspector accounts, adding a verification step at logon.
User enumeration blocking	Deep Discovery Inspector now blocks user enumeration attempts to help prevent password-guessing attacks.
Configurable web console access control list	Administrators can configure an access control list (ACL) to restrict web console and SSH access to specific IP addresses or network ranges.
REST Web Service for configuration backup	A new REST Web Service allows external systems to download the Deep Discovery Inspector configuration backup over a REST API by using an API token.

## Features and benefits

Deep Discovery Inspector offers sophisticated detection capabilities using multiple advanced detection engines to present detailed information about custom and signature-based threats passing through various network protocols. Deep Discovery Inspector detects targeted attacks and advanced threats, and helps remediate targeted attacks with automated processes.

Deep Discovery Inspector includes the following features:

- [Threat management capabilities on page 1-4](#)

- [APT Attack Sequence on page 1-4](#)
- [Host Severity on page 1-6](#)
- [Advanced threat scan engine on page 1-8](#)
- [Virtual analyzer on page 1-9](#)

## Threat management capabilities

Deep Discovery Inspector detects and identifies evasive threats in real-time, and provides in-depth analysis and actionable intelligence needed to discover, prevent, and contain attacks against corporate data.

**TABLE 1-1. Threat Management Capabilities**

CAPABILITY	DESCRIPTION
Expanded APT and targeted attack detection	Deep Discovery Inspector detection engines deliver expanded APT and targeted attack detection including custom sandbox analysis. New discovery and correlation rules detect malicious content, communication, and behavior across every stage of an attack sequence.
Visibility, analysis, and action	Using an intuitive multi-level format, the Deep Discovery Inspector management console provides real-time threat visibility and analysis. This allows security professionals to focus on the real risks, perform forensic analysis, and rapidly implement containment and remediation procedures.
High capacity platforms	Deep Discovery Inspector features a high-performance architecture that meets the demanding and diverse capacity requirements of large organizations.  Deep Discovery Inspector features are useful for a company of any size, and are vital to larger organizations needing to reduce the risk of targeted attacks.

## APT Attack Sequence

Targeted attacks and advanced persistent threats (APTs) are organized, focused efforts that are custom-created to penetrate enterprises and government agencies for access to internal systems, data, and other assets.

Each attack is customized to its target, but follows a consistent life cycle to infiltrate and operate inside an organization.

In targeted attacks, the APT life cycle follows a continuous process of six key phases.

**TABLE 1-2. APT Attack Sequence**

PHASE	DESCRIPTION
Intelligence Gathering	Identify and research target individuals using public sources (for example, social media websites) and prepare a customized attack
Point of Entry	An initial compromise typically from zero-day malware delivered via social engineering (email/IM or drive-by download)  A backdoor is created and the network can now be infiltrated. Alternatively, a website exploitation or direct network hack may be employed.
Command & Control (C&C) Communication	Communications used throughout an attack to instruct and control the malware used  C&C communication allows the attacker to exploit compromised machines, move laterally within the network, and exfiltrate data.
Lateral Movement	An attack that compromises additional machines  Once inside the network, an attacker can harvest credentials, escalate privilege levels, and maintain persistent control beyond the initial target.
Asset/Data Discovery	Several techniques (for example, port scanning) used to identify noteworthy servers and services that house data of interest
Data Exfiltration	Unauthorized data transmission to external locations  Once sensitive information is gathered, the data is funneled to an internal staging server where it is chunked, compressed, and often encrypted for transmission to external locations under an attacker's control.

Deep Discovery Inspector is purpose-built for detecting APT and targeted attacks. It identifies malicious content, communications, and behavior that may indicate advanced malware or attacker activity across every stage of the attack sequence.

## Host Severity

In Deep Discovery Inspector, host severity is the impact on a host as determined from aggregated detections by Trend Micro products and services.

Investigating beyond event security, the host severity numerical scale exposes the most vulnerable hosts and allows you to prioritize and quickly respond.

Host severity is based on the aggregation and correlation of the severity of the events that affect a host. If several events affect a host and have no detected connection, the host severity will be based on the highest event severity of those events. However, if the events have a detected correlation, the host severity level will increase accordingly.

For example: Of five events affecting a host, the highest risk level is moderate. If the events have no correlation, the host severity level will be based on the moderate risk level of that event. However, if the events are correlated, then the host severity level will increase based on the detected correlation.

The host severity scale consolidates threat information from multiple detection technologies and simplifies the interpretation of overall severity. You can prioritize your responses based on this information and your related threat response policies.

**TABLE 1-3. Host Severity Scale**

CATEGORY	LEVEL	DESCRIPTION
<b>Critical</b> Host exhibits behavior that <b>definitely</b> indicates host is compromised	10	Host shows evidence of compromise including but not limited to the following: <ul style="list-style-type: none"><li>• Data exfiltration</li><li>• Multiple compromised hosts/servers</li></ul>

CATEGORY	LEVEL	DESCRIPTION
	9	Host exhibits an indication of compromise from APTs including but not limited to the following: <ul style="list-style-type: none"> <li>• Connection to an IP address associated with a known APT</li> <li>• Access to a URL associated with a known APT</li> <li>• A downloaded file associated with a known APT</li> <li>• Evidence of lateral movement</li> </ul>
	8	Host may exhibit the following: <ul style="list-style-type: none"> <li>• A high severity network event</li> <li>• Connection to a C&amp;C Server detected by Web Reputation Services</li> <li>• A downloaded file rated as high risk by Virtual Analyzer</li> </ul>
<b>Major</b> Host is targeted by a known malicious behavior or attack and exhibits behavior that <b>likely</b> indicates host is compromised	7	Host may exhibit the following: <ul style="list-style-type: none"> <li>• Inbound malware downloads; no evidence of user infection</li> <li>• An inbound Exploit detection</li> </ul>
	6	Host may exhibit the following: <ul style="list-style-type: none"> <li>• Connection to a dangerous site detected by Web Reputation Services</li> </ul>
	5	Host may exhibit the following: <ul style="list-style-type: none"> <li>• A downloaded medium- or low-risk potentially malicious file with no evidence of user infection</li> </ul>
	4	Host may exhibit the following: <ul style="list-style-type: none"> <li>• A medium severity network event</li> <li>• A downloaded file rated as medium risk by Virtual Analyzer</li> </ul>

CATEGORY	LEVEL	DESCRIPTION
<b>Minor</b>  Host exhibits anomalous or suspicious behavior that may be benign or indicate a threat	3	Host may exhibit the following: <ul style="list-style-type: none"> <li>• Repeated unsuccessful logon attempts or abnormal patterns of usage</li> <li>• A downloaded or propagated packed executable or suspicious file</li> <li>• Evidence of running IRC, TOR, or outbound tunneling software</li> </ul>
	2	Host may exhibit the following: <ul style="list-style-type: none"> <li>• A low severity network event</li> <li>• Evidence of receiving an email message that contains a dangerous URL</li> <li>• A downloaded file rated as low risk by Virtual Analyzer</li> </ul>
<b>Trivial</b>  Host exhibits normal behavior that may be benign or indicate a threat in future identification of malicious activities	1	Host may exhibit the following: <ul style="list-style-type: none"> <li>• An informational severity network event</li> <li>• Connection to a site rated as untested or to a new domain detected by Web Reputation Services</li> <li>• Evidence of a running disruptive application such as P2P</li> </ul>

## Advanced threat scan engine

Advanced Threat Scan Engine uses a combination of signature file-based scanning and heuristic rule-based scanning to detect and document exploits and other threats used in targeted attacks.

Major features include the following:

- Detection of zero-day threats
- Detection of embedded exploit code
- Detection rules for known vulnerabilities

- Enhanced parsers for handling file deformities

## Virtual analyzer

Virtual Analyzer is a secure virtual environment that manages and analyzes objects submitted by integrated products, administrators, and investigators. Custom sandbox images enable observation of files, URLs, registry entries, API calls, and other objects in environments that match your system configuration.

Virtual Analyzer performs static and dynamic analysis to identify an object's notable characteristics in the following categories:

- Anti-security and self-preservation
- Autostart or other system configuration
- Deception and social engineering
- File drop, download, sharing, or replication
- Hijack, redirection, or data theft
- Malformed, defective, or with known malware traits
- Process, service, or memory object change
- Rootkit, cloaking
- Suspicious network or messaging activity

During analysis, Virtual Analyzer rates the characteristics in context and then assigns a risk level to the object based on the accumulated ratings. Virtual Analyzer also generates analysis reports, suspicious object lists, PCAP files, and OpenIOC and STIX files that can be used in investigations.

## Deployment scenarios

Deep Discovery Inspector can be deployed as a hardware appliance or as a virtual appliance.

- **Hardware appliance:** Deep Discovery Inspector can be deployed either inline or out-of-band.

- **Inline:** Deep Discovery Inspector acts as a transparent bridge and can inspect decrypted TLS traffic. When deployed inline, only traffic flowing through the inline ports is inspected.




**Note**

Installing an additional inline (LAN bypass) network interface card is needed for inline deployment. For installation instructions and compatible Deep Discovery Inspector appliance models, refer to the *Inline (LAN Bypass) Network Interface Card Installation Guide*.


- **Out-of-band:** Deep Discovery Inspector monitors network traffic by connecting to the mirror port on a switch for minimal to no network interruption. When deployed out-of-band, only traffic mirrored to the data ports is inspected.
- **Virtual appliance:** Deep Discovery Inspector can only be deployed out-of-band. Deep Discovery Inspector monitors network traffic by connecting to the mirror port on a switch for minimal to no network interruption.

The figure below provides a high-level overview of supported deployments.

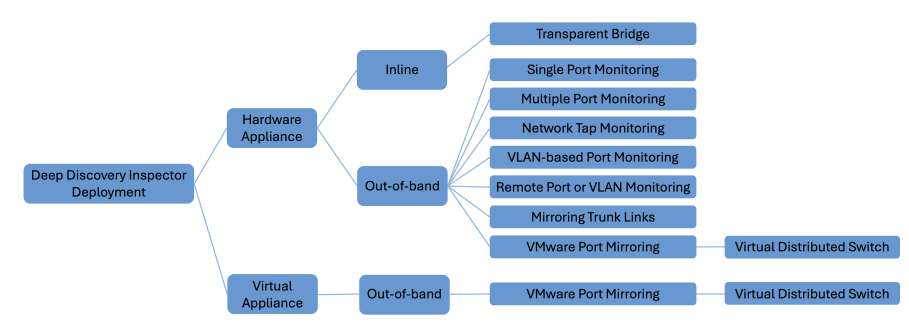

# **Part II**

## **Hardware appliance installation and deployment**

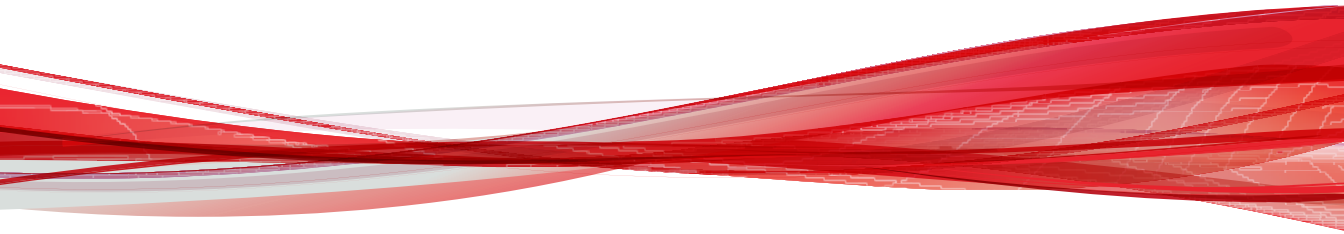



# Chapter 2

## About your system

Learn about the Deep Discovery Inspector appliance in the following topics:

- *Package contents on page 2-2*
- *The Deep Discovery Inspector appliance on page 2-3*
- *Setting up the hardware on page 2-26*
- *Product specifications on page 2-27*

## Package contents


Examine the Deep Discovery Inspector appliance package contents and hardware to correctly configure the appliance in your network.


The following illustration shows the items that are included in the Deep Discovery Inspector appliance package.



**FIGURE 2-1. Package Contents**

**TABLE 2-1. Deep Discovery Inspector Package Contents**

#	NAME	DESCRIPTION
1	Slide and rail sets (2)	<p>Secure the appliance (fixed mount) or use to secure and allow the appliance to slide in and out of a four-post rack (sliding mount).</p> <hr/> <p> <b>Note</b> The rail is assembled with the slide when the package is shipped. Remove the rail from the slide before mounting the appliance.</p>

#	NAME	DESCRIPTION
2	Trend Micro Installation DVD for Deep Discovery Inspector (1) Deep Discovery Inspector Quick Start Card	<p>The Installation DVD contains installers and the PDF documentation set, including the following:</p> <ul style="list-style-type: none"> <li>• Trend Micro Deep Discovery Inspector Administrator's Guide</li> <li>• Trend Micro Deep Discovery Inspector Installation and Deployment Guide</li> </ul> <hr/> <p> <b>Note</b> The Installation DVD is not available in some hardware models.</p> <hr/> <p>The Quick Start Card provides user-friendly instructions on connecting Deep Discovery Inspector to your network and on performing the initial configuration.</p>
3	Power cords (2)	Supply power to the appliance (length is 79 in/200 cm)
4	Deep Discovery Inspector (1)	The appliance

## The Deep Discovery Inspector appliance


Deep Discovery Inspector 7.0 supports the following hardware appliance models. You can view the model number on the front sticker of your physical appliance.

- 520
- 530
- 550
- 1100
- 1200
- 1300
- 1500

- 4100
- 4200
- 4300
- 9200
- 9300
- 40G

## Front panel

### Front panel - 550/1500 appliance

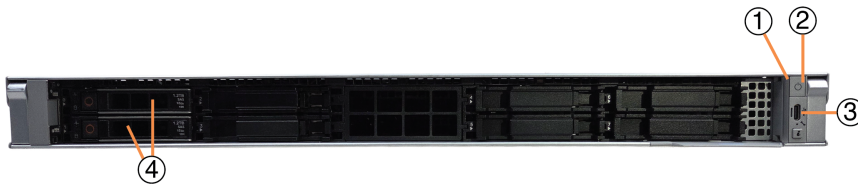


**FIGURE 2-2. Deep Discovery Inspector 550/1500 Front Panel**

The following table outlines the front panel features of the 550/1500 appliance.

#	Feature	Description
1	Status LED indicators	Displays system ID, status information, and system error messages  For details, see <a href="#">Status LED indicators on page 2-25</a> .

2	Power button/indicator	<ul style="list-style-type: none"> <li>Indicates if the system is on or off</li> </ul> <p>For details, see <a href="#">Power supply indicators on page 2-25</a>.</p> <ul style="list-style-type: none"> <li>Controls the power supply output to the appliance</li> </ul>
3	USB connector	Allows you to connect USB devices to the appliance
4	Hard drives (2)	2.5-inch, hot-swappable hard drives

### Front panel - 530/1300 appliance

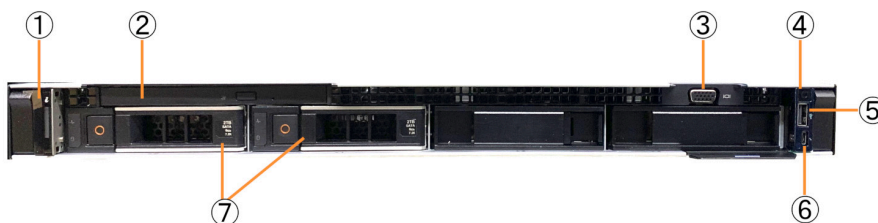

**FIGURE 2-3. Deep Discovery Inspector 530/1300 Front Panel**

The following table outlines the front panel features of the 530/1300 appliance.

#	FEATURE	DESCRIPTION
1	Status LED indicators	Displays system ID, status information, and system error messages
2	Optical drive	DVD drive
3	Video connector	Allows you to connect a VGA display to the appliance

#	FEATURE	DESCRIPTION
4	Power button/indicator	<ul style="list-style-type: none"> <li>Indicates if the system is on or off</li> <li>Controls the power supply output to the appliance</li> </ul>
5	USB connector	Allows you to connect USB devices to the appliance
6	iDRAC Direct port (Micro-AB USB)	Enables you to access the iDRAC Direct (Micro-AB) features
7	Hard drives (2)	3.5-inch, hot-swappable hard drives

### Front panel - 4300/9300 appliance



**FIGURE 2-4. Deep Discovery Inspector 4300/9300 Front Panel**

The following table outlines the front panel features of the 4300/9300 appliance.

#	FEATURE	DESCRIPTION
1	Status LED indicators	Displays system ID, status information, and system error messages
2	Front ID button/indicator	Not supported by Deep Discovery Inspector
3	Power button/indicator	<ul style="list-style-type: none"> <li>Indicates if the system is on or off</li> <li>Controls the power supply output to the appliance</li> </ul>

#	FEATURE	DESCRIPTION
4	USB connector	Allows you to connect USB devices to the appliance
5	Video connector	Allows you to connect a VGA display to the appliance
6	iDRAC Direct port (Micro-AB USB)	Enables you to access the iDRAC Direct (Micro-AB) features
7	Hard drives (4)	3.5-inch, hot-swappable hard drives

## Front panel - 40G appliance



**FIGURE 2-5. Deep Discovery Inspector 40G Front Panel**


The following table outlines the front panel features of the 40G appliance.

#	FEATURE	DESCRIPTION
1	Status LED indicators	Displays system ID, status information, and system error messages
2	Front ID button/indicator	Not supported by Deep Discovery Inspector

#	FEATURE	DESCRIPTION
3	Power button/indicator	<ul style="list-style-type: none"> <li>Indicates if the system is on or off</li> <li>Controls the power supply output to the appliance</li> </ul>
4	USB connector	Allows you to connect USB devices to the appliance
5	Video connector	Allows you to connect a VGA display to the appliance
6	iDRAC Direct port (Micro-AB USB)	Enables you to access the iDRAC Direct (Micro-AB) features
7	Hard drives (4)	3.5-inch, hot-swappable hard drives

## Back panel

### Back panel - 550/1500 appliance

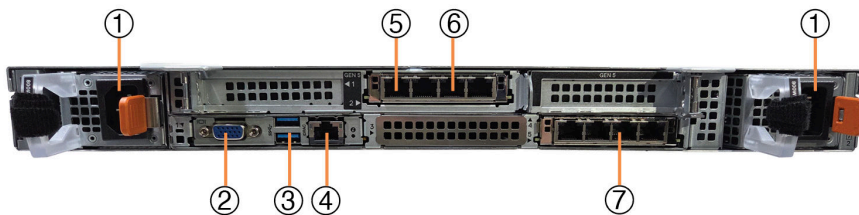


**FIGURE 2-6. Deep Discovery Inspector 550/1500 Back Panel**

The following table outlines the back panel features of the 550/1500 appliance.

#	Feature	Description
---	---------	-------------

1	Power supply connectors (2)	<p>Two 800-watt hot-plug power supply units:</p> <ul style="list-style-type: none"><li>• Main power supply</li><li>• Backup power supply</li></ul> <p>"Hot-plug" refers to the ability to replace the power supply while the appliance is running. Deep Discovery Inspector automatically and safely recognizes the change without operational interruption or risk.</p> <p>Use the power cord included in the package (for details, see <a href="#">Package contents on page 2-2</a>).</p>
2	Video connector	Allows you to connect a VGA display to the appliance
3	USB connectors (2)	Allows you to connect USB devices to the appliance
4	iDRAC port	Connects to a dedicated management port on an iDRAC card
5	Management port	Connects to a management network for communication and interaction with other products and services
6	1 Gbps data ports (3)	Integrated 1 Gbps NIC connectors
7	1 Gbps data ports (4)	Integrated 1 Gbps NIC connectors

## Back panel - 530/1300 appliance

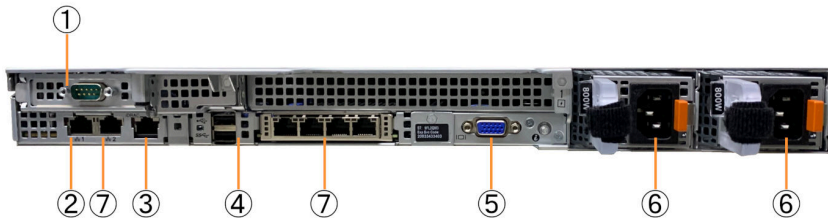


**FIGURE 2-7. Deep Discovery Inspector 530/1300 Back Panel**

The following table outlines the back panel features of the 530/1300 appliance.

#	FEATURE	DESCRIPTION
1	RS-232 serial connector	Connects to the serial port of a computer with an RS-232 type connection for preconfiguration tasks.
2	Management port	Connects to a management network for communication and interaction with other products and services
3	iDRAC port	Connects to a dedicated management port on an iDRAC card
4	USB connectors (2)	Allows you to connect USB devices to the appliance
5	Video connector	Allows you to connect a VGA display to the appliance

#	FEATURE	DESCRIPTION
6	Power supply connectors (2)	<p>Two 800-watt hot-plug power supply units:</p> <ul style="list-style-type: none"> <li>• Main power supply</li> <li>• Backup power supply</li> </ul> <p>"Hot-plug" refers to the ability to replace the power supply while the appliance is running. Deep Discovery Inspector automatically and safely recognizes the change without operational interruption or risk.</p> <p>Use the power cord included in the package (for details, see <a href="#">Package contents on page 2-2</a>).</p>
7	1 Gbps data ports (5)	Integrated 1 Gbps NIC connectors

### Back panel - 4300/9300 appliance

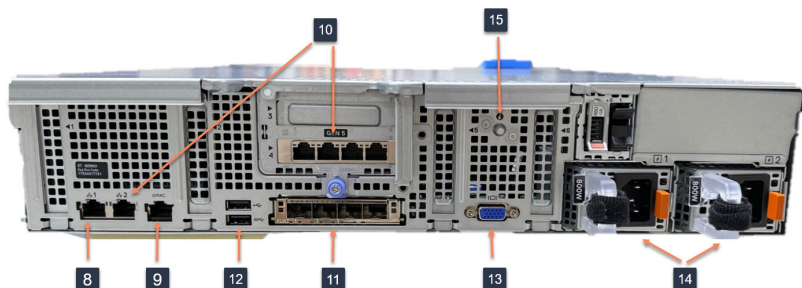


**FIGURE 2-8.** Deep Discovery Inspector 4300/9300 Back Panel

The following table outlines the back panel features of the 4330/9300 appliance.

#	FEATURE	DESCRIPTION
8	Management port	Connects to a management network for communication and interaction with other products and services
9	iDRAC port	Connects to a dedicated management port on an iDRAC card
10	1 Gbps data ports (5)	Integrated 10/100/1000 Mbps Base-T NIC connectors
11	10/25 Gbps data ports (4)	10/25 Gbps NIC connectors
12	USB connectors (2)	Allows you to connect USB devices to the appliance
13	Video connector	Allows you to connect a VGA display to the appliance
14	Power supply connectors (2)	<p>Two hot-plug power supply units:</p> <ul style="list-style-type: none"> <li>• Main power supply</li> <li>• Backup power supply</li> </ul> <p>"Hot-plug" refers to the ability to replace the power supply while the appliance is running. Deep Discovery Inspector automatically and safely recognizes the change without operational interruption or risk.</p> <p>For information about the wattage of the power supplies, check the appliance's labels.</p> <p>Use the power cord included in the package (for details, see <a href="#">Package contents on page 2-2</a>).</p>
15	Appliance ID button / appliance status indicator	Not supported by Deep Discovery Inspector

## Back Panel - 40G appliance

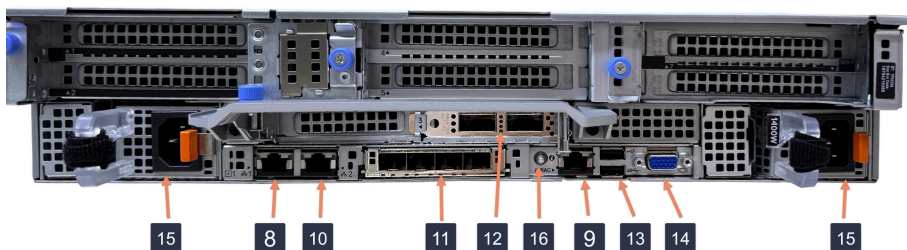

**FIGURE 2-9. Deep Discovery Inspector 40G Back Panel**

The following table outlines the back panel features of the 4330/9300 appliance.

#	FEATURE	DESCRIPTION
8	Management port	Connects to a management network for communication and interaction with other products and services
9	iDRAC port	Connects to a dedicated management port on an iDRAC card
10	1 Gbps data ports (5)	Integrated 10/100/1000 Mbps Base-T NIC connectors
11	10/25 Gbps data ports (4)	10/25 Gbps NIC connectors
12	100 Gbps data ports (2)	100 Gbps NIC connectors
13	USB connectors (2)	Allows you to connect USB devices to the appliance
14	Video connector	Allows you to connect a VGA display to the appliance

#	FEATURE	DESCRIPTION
15	Power supply connectors (2)	<p>Two hot-plug power supply units:</p> <ul style="list-style-type: none"> <li>• Main power supply</li> <li>• Backup power supply</li> </ul> <p>"Hot-plug" refers to the ability to replace the power supply while the appliance is running. Deep Discovery Inspector automatically and safely recognizes the change without operational interruption or risk.</p> <p>For information about the wattage of the power supplies, check the appliance's labels.</p> <p>Use the power cord included in the package (for details, see <a href="#">Package contents on page 2-2</a>).</p>
16	Appliance ID button / appliance status indicator	Not supported by Deep Discovery Inspector



## Network cards

### Port order

#### Port order - 550/1500 appliance



The following table outlines the port order of the network cards in the 550/1500 appliance.

NIC	SLOT	PORT ORDER
Quad_Port_1GbE_Copper  (Included with device)	<ul style="list-style-type: none"> <li>Slot 2</li> <li>Slot 5</li> </ul>	
Dual_Port_10GbE_Fiber-SR_Bypass_Card  (User-supplied, inline (LAN bypass) network interface card)	<ul style="list-style-type: none"> <li>Slot 4</li> </ul>	

**Note**






Deep Discovery Inspector supports only one inline (LAN bypass) network interface card.

**Tip**

To see information about the card slots, go to **Administration > System Settings > Network Interface** in the Deep Discovery Inspector management console.

**Port order - 530/1300 appliance**

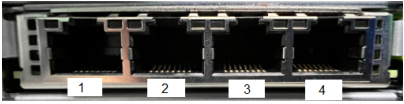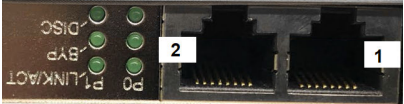The following table outlines the port order of the network cards in the 530/1300 appliance.


NIC	SLOT	PORT ORDER
Dedicated_Quad_Port_1GbE_Copper	Dedicated	
Dual_Port_1GbE_Copper_Bypass_Card	Slot 1	
Dual_Port_10GbE_Fiber-SR_Bypass_Card	Slot 1	
Dual_Port_1GbE_Copper	Slot 1	
Dual_Port_1GbE_Fiber	Slot 1	



**Tip**

To see information about the card slots, go to **Administration > System Settings > Network Interface** in the Deep Discovery Inspector management console.


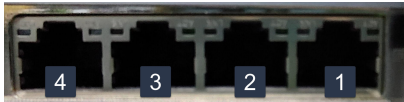

**Port order - 4300/9300 appliance**

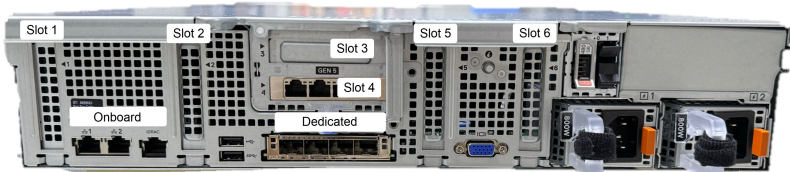


**Important**

- Slot 1 is a RAID controller.
- Slot 5 and slot 6 are not available for use on the 4300 appliance.

The following table outlines the port order of the network cards in the 4300/9300 appliance.

NIC	SLOT	PORT ORDER
Dedicated_Quad_Port_10/25GbE_SFP28	Dedicated	
Quad_Port_1GbE_Copper	<ul style="list-style-type: none"> <li>• Slot 3</li> <li>• Slot 4</li> </ul>	
	<ul style="list-style-type: none"> <li>• Slot 2</li> <li>• Slot 5 (9300 only)</li> <li>• Slot 6 (9300 only)</li> </ul>	


NIC	SLOT	PORT ORDER
Dual_Port_10GbE_Fiber-SR_Bypass_Card	Slot 2	






**Tip**

To see information about the card slots, go to **Administration > System Settings > Network Interface** in the Deep Discovery Inspector management console.

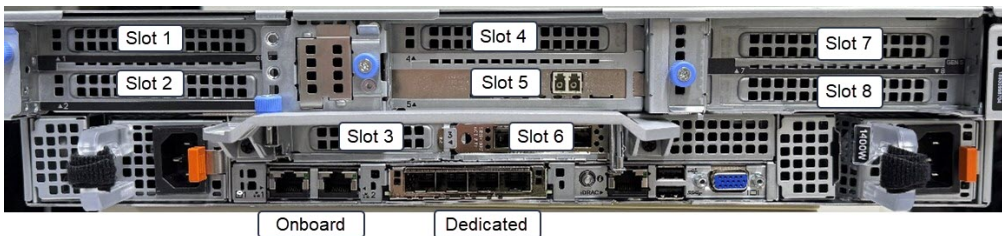**Port Order - 40G appliance**



The following table outlines the port order of the network cards in the 40G appliance.

NIC	SLOT	PORT ORDER
Dedicated_Quad_Port_10/25GbE_SFP28	Dedicated	
Dual_Port_100GbE_QSFP	Slot 6	
	Slot 3	




### Tip

To see information about the card slots, go to **Administration > System Settings > Network Interface** in the Deep Discovery Inspector management console.

## NIC indicators

### NIC indicators - 550/1500

Each port has indicators showing the current state of the port.

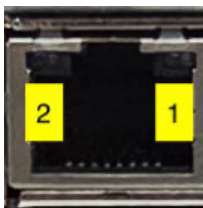


The following table describes the NIC indicators in the 550/1500 appliance.

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>• Off: No network connection.</li> <li>• Green, flashing: Network data is being sent or received.</li> </ul>
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>• Yellow: 10 Mbps or 100 Mbps</li> <li>• Green: 1000 Mbps</li> </ul>

### NIC indicators - 530/1300

For out-of-band deployment, Deep Discovery Inspector 530/1300 has five user-configurable copper-based Ethernet NIC ports. All accept integrated 10/100/1000 Mbps connectors.

Each port has an indicator showing the current state of the port.

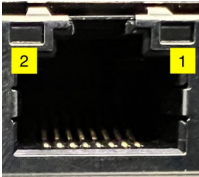

The following table describes the NIC indicators in the 530/1300 appliance.


INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>• Off: No network connection.</li> <li>• Green, flashing: Network data is being sent or received.</li> </ul>

INDICATOR	DESCRIPTION	INDICATOR PATTERN
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>Yellow: 10 Mbps or 100 Mbps</li> <li>Green: 1000 Mbps</li> </ul>

## NIC indicators - 4300/9300

### Data port indicators - 4300/9300 1 Gbps

Each port has an indicator showing the current state of the port.

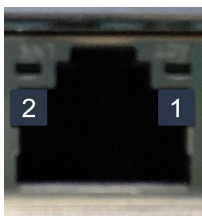


The following table describes the 1 Gbps port indicators in the 4300/9300 appliance.

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>Off: No network connection.</li> <li>Green, flashing: The port is sending or receiving data.</li> </ul>
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>Yellow: 10 Mbps or 100 Mbps</li> <li>Green: 1000 Mbps</li> </ul>

### Data NIC indicators - 4300/9300 10/25 Gbps

Each port has an indicator showing the current state of the port.

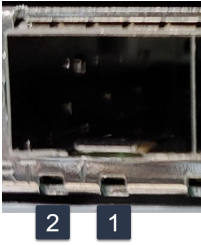


The following table describes the 10/25 Gbps NIC indicators in the 4300/9300 appliance.

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>• Off: No network connection.</li> <li>• Green, flashing: The port is sending or receiving data.</li> </ul>
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>• Yellow: 10 Gbps</li> <li>• Green: 25 Gbps</li> </ul>

### NIC indicators - 40G appliance

Each port has an indicator showing the current state of the port.


#### Onboard ports

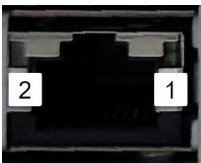

The following table describes the NIC indicators for the onboard ports:

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>• Off: No network connection.</li> <li>• Green, flashing: Network data is being sent or received.</li> </ul>
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>• Yellow: 10 Mbps or 100 Mbps</li> <li>• Green: 1000 Mbps</li> </ul>

### Dedicated slot

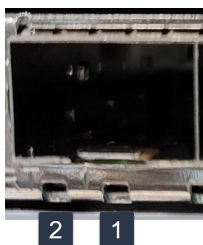

The following table describes the NIC indicators for the ports in the dedicated slot.

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates the connection status and data activity status.	<ul style="list-style-type: none"> <li>• Off: No network connection.</li> <li>• Green, flashing: The port is sending or receiving data.</li> </ul>
2	Indicates the data transmission speed.	<ul style="list-style-type: none"> <li>• Yellow: 10 Gbps</li> <li>• Green: 25 Gbps</li> </ul>

## 100 Gbps ports (Slot 6)



The following table describes the NIC indicators for the 100G ports in slot 6:

INDICATOR	DESCRIPTION	INDICATOR PATTERN
1	Indicates data activity status of the right port.	<ul style="list-style-type: none"> <li>• Off: No activity.</li> <li>• Blinking: The port is active.</li> </ul>
A	Indicates data activity status of the left port.	
2	Indicates the data transmission speed and connection status of the right port.	<ul style="list-style-type: none"> <li>• Amber: Below 100 Gbps</li> <li>• Green: 100 Gbps</li> <li>• Off: No network connection</li> </ul>
B	Indicates the data transmission speed and connection status of the left port.	

## Supported add-on network interface cards

Learn about the network interface cards (NIC) you can install on your Deep Discovery Inspector appliance.

### 530/550/1300/1500

- 1G copper network interface card
- 1G fiber network interface card

### 4300/9300

- 1G/10G copper network interface card
- 1G/10G fiber network interface card

**40G**

- 1G/10G copper network interface card
- 1G/10G/100G fiber network interface card

**Important**

When installing add-on network interface cards in the Deep Discovery Inspector 40G appliance, populate the card slots starting with slot 1.

**Status LED indicators**


The following table outlines the status LED indicators.

INDICATOR PATTERN	DESCRIPTION
Solid blue	Indicates that the system is powered on and is healthy.
Blinking blue	Indicates that the system ID mode is active, which is used to visually identify a specific server in a rack or data center.
Blinking amber	Indicates that the system is experiencing a fault.

**Power supply indicators**

The following table outlines the power supply status indicators.

INDICATOR PATTERN	DESCRIPTION
Not lit	Power is not connected
Green	A valid power source is connected to the power supply and the power supply is operational
Flashing green	When hot-adding a power supply, indicates the power supply is mismatched with the other power supply (in terms of efficiency, feature set, health status, and supported voltage)  Replace the power supply that has the flashing indicator with a power supply that matches the capacity of the other installed power supply.

INDICATOR PATTERN	DESCRIPTION
Flashing amber	<p data-bbox="474 256 874 280">Indicates a problem with the power supply</p> <hr data-bbox="474 315 1092 318"/> <p data-bbox="474 331 1083 521"> <b>Important</b> When correcting a power supply mismatch, replace only the power supply with the flashing indicator. Swapping the opposite power supply to make a matched pair can result in an error condition and an unexpected system shutdown.</p> <p data-bbox="552 550 1076 639">To change from a high output configuration to a low output configuration or vice versa, first power down the system.</p> <p data-bbox="552 669 1063 789">AC power supplies support both 220 V and 110 V input voltages. When two identical power supplies receive different input voltages, they may output different wattages and trigger a mismatch.</p> <p data-bbox="552 818 1087 873">If two power supplies are used, they must be of the same type and have the same maximum output power.</p>

## Setting up the hardware

### Procedure

1. Mount the appliance in a standard 19-inch 4-post rack, or on a free-standing object, such as a sturdy desktop.



#### Note

When mounting the appliance, leave at least two inches of clearance on all sides for proper ventilation and cooling.

2. Connect the appliance to a power source.

Deep Discovery Inspector has two power supply units. One unit acts as the main power supply and the other as a backup.

3. Connect the monitor to the VGA port at the back panel.

See [Back panel on page 2-8](#) for a diagram.

4. Connect the keyboard and mouse to the USB ports on the back panel.
5. Connect the management port to your network.
6. Power on the appliance.

The power button is found on the front panel of the appliance, behind the bezel. See [Front panel on page 2-4](#) for a diagram.

A screen similar to the following appears:

```

                                                    F2 = System Setup
                                                    Lifecycle Controller Disabled
                                                    F11 = BIOS Boot Manager
                                                    F12 = PXE Boot
Two 2.00 GHz Six-core Processors, Bus Speed:7.20 GT/s, L2/L3 Cache:1.5 MB/15 MB
System running at 2.00 GHz
System Memory Size: 48.0 GB, System Memory Speed: 1333 MHz, Voltage: 1.35V

Dell Serial ATA AHCI BIOS Version 1.0.2
Copyright (c) 1988-2012 Dell Inc.
Port E: PLDS DVD-ROM DS-8D3SH

Initializing Intel(R) Boot Agent GE v1.3.76
PXE 2.1 Build 090 (WFM 2.0)
Press Ctrl+S to enter the Setup Menu._
```

**FIGURE 2-10. Power-on self-test (POST)**

### Next steps

If applicable, perform initial preconfiguration using the Preconfiguration Console. For details, see [Preconfiguration on page 10-1](#).

## Product specifications

Standard Deep Discovery Inspector appliances have the following specifications.

Contact Trend Micro if the appliance you are using does not meet these hardware specifications.



### Important

Hardware vendors and specifications may vary for customers in China, Japan, and other regions.

## 550/1500 appliance specifications

The following table outlines the product specifications of the Deep Discovery Inspector 550/1500 appliance:

FEATURE	SPECIFICATIONS
Rack size	1U 19-inch standard rack
Availability	Raid 1 configuration
Storage size	2 x 2.4 TB 2.5-inch SATA
Connectivity	<ul style="list-style-type: none"> <li>• Management: 1 x 1 GB/100/10Base copper</li> <li>• Data: 7 x 1 GB/100/10Base copper</li> </ul>
Dimensions (WxDxH)	482.0 mm (19.0 inches) x 815.14 mm (32.09 inches) x 42.8 mm (1.69 inches)
Maximum weight	19.11 kg (42.1 lb)
Operating temperature	10°C to 35°C at 10% to 80% relative humidity (RH)
Power	800W, 100-240 VAC 50/60 Hz

## 530/1300 appliance specifications

The following table outlines the product specifications of the Deep Discovery Inspector 530/1300 appliance:

FEATURE	SPECIFICATIONS
Rack size	1U 19-inch standard rack
Availability	Raid 1 configuration
Storage size	2 x 2 TB 3.5-inch SATA
Connectivity	<ul style="list-style-type: none"> <li>• Management: 1 x 1 GB/100/10Base copper</li> <li>• Data: 5 x 1 GB/100/10Base copper</li> </ul>
Dimensions (WxDxH)	482.0 mm (18.97 inches) x 748.79 mm (29.48 inches) x 42.8 mm (1.68 inches)
Maximum weight	18.62 kg (41.05 lb)
Operating temperature	10°C to 35°C at 10% to 80% relative humidity (RH)
Power	800W, 100-240 VAC 50/60 Hz

### 4300/9300 appliance specifications

The following table outlines the product specifications of the Deep Discovery Inspector 4300/9300 appliance:

FEATURE	SPECIFICATIONS
Rack size	2U 19-inch standard rack
Availability	Raid 10 configuration
Storage size	4 x 2 TB 3.5-inch SATA
Connectivity	<ul style="list-style-type: none"> <li>• Management: 1 x 1 GB/100/10Base copper</li> <li>• Data: <ul style="list-style-type: none"> <li>• 4 x 10/25 GB SFP28 DAC, Optics, And AOC's</li> <li>• 5 x 1 GB/100/10Base copper</li> </ul> </li> </ul>
Dimensions (WxDxH)	482.0 mm (18.97 inches) x 685.78 mm (26.99 inches) x 86.8 mm (3.41 inches)
Maximum weight	25.84 kg (54.96 lb)

FEATURE	SPECIFICATIONS
Operating temperature	10°C to 35°C at 10% to 80% relative humidity (RH)
Power	800W (4300) / 1100W (9300), 100-240 VAC 50/60 Hz

## 40G appliance specifications

The following table outlines the product specifications of the Deep Discovery Inspector 40G appliance:

FEATURE	SPECIFICATIONS
Rack size	2U 19-inch standard rack
Availability	Raid 10 configuration
Storage size	4 x 2 TB 3.5-inch SATA
Connectivity	<ul style="list-style-type: none"> <li>• Management: 1 x 1 GB/100/10Base copper</li> <li>• Data: <ul style="list-style-type: none"> <li>• 4 x 10/25 GB SFP28 DAC, Optics, And AOC's</li> <li>• 2 x 100GBase-SR/LR</li> </ul> </li> </ul>
Dimensions (WxDxH)	482.0 mm (18.97 inches) x 736.29 mm (28.98 inches) x 86.8 mm (3.41 inches)
Maximum weight	36.1 kg (79.58 lbs)
Operating temperature	10°C to 35°C (50°F to 95°F) with no direct sunlight on the equipment
Power	Redundant Power Supply 1400W 100-240 VAC 50/60 Hz

# Chapter 3

## Hardware appliance deployment

Learn tips, suggestions, and requirements for installing a Deep Discovery Inspector hardware appliance in the following sections.

## Deployment overview

---

### Procedure

1. Plan the deployment.  
See [Hardware appliance deployment planning on page 3-2](#).
  2. Review the installation requirements.  
See [Hardware appliance installation requirements on page 3-13](#).
  3. Review the system requirements.  
See [Hardware appliance system requirements on page 3-14](#).
  4. Install Deep Discovery Inspector.  
See [Installation on a hardware appliance on page 4-1](#).
  5. Preconfigure Deep Discovery Inspector.  
See [Preconfiguration on page 10-1](#).
- 

## Hardware appliance deployment planning

Plan how to best deploy Deep Discovery Inspector by doing the following:

- Determine the segments of your network that need protection.
- Plan for network traffic, considering the location of appliances critical to your operations such as email, web, and application servers.
- Determine both the number of appliances needed to meet your security needs and their locations on the network
- Conduct a pilot deployment on a test segment of your network.
- Redefine your deployment strategy based on the results of the pilot deployment.
- Use the following examples to plan a customized Deep Discovery Inspector deployment.

## Deployment scenarios

When deployed as a hardware appliance, Deep Discovery Inspector can be deployed either inline or out-of-band.

- **Inline:** Deep Discovery Inspector acts as a transparent bridge and can inspect decrypted TLS traffic. When deployed inline, only traffic flowing through the inline ports is inspected.




### Note

Installing an additional inline (LAN bypass) network interface card is needed for inline deployment. For installation instructions and compatible Deep Discovery Inspector appliance models, refer to the *Inline (LAN Bypass) Network Interface Card Installation Guide*.

- **Out-of-band:** Deep Discovery Inspector monitors network traffic by connecting to the mirror port on a switch for minimal to no network interruption. When deployed out-of-band, only traffic mirrored to the data ports is inspected.

The figure below provides a high-level overview of supported deployments as a hardware appliance.

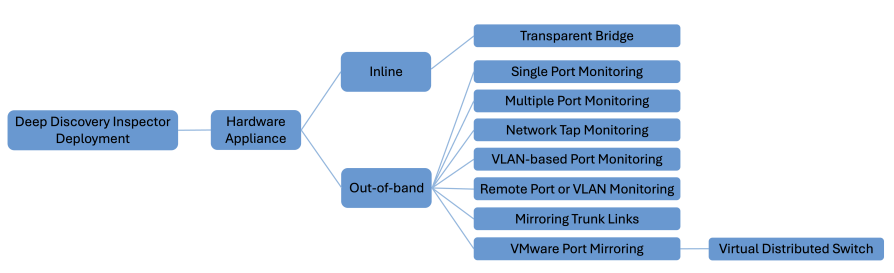


## Out-of-band

When deployed out-of-band, Deep Discovery Inspector monitors network traffic by connecting to the mirror port on a switch for minimal to no network interruption.


## Mirroring trunk links

When multiple VLANs encapsulate the same physical link, mirror the source port from a trunk link. Make sure that the switch mirrors the correct VLAN tag to Deep Discovery Inspector for both directions.

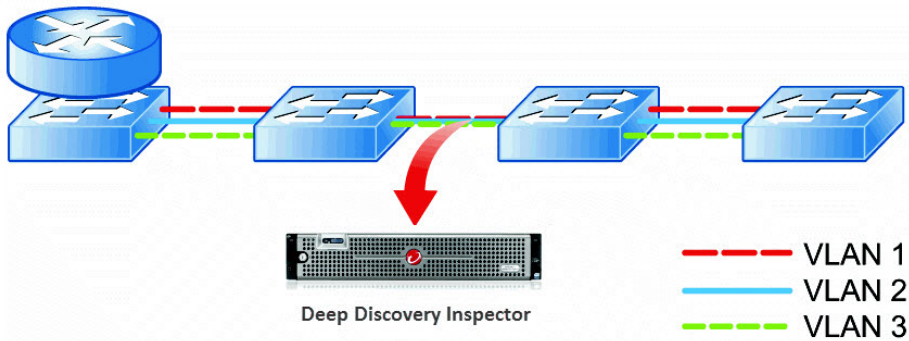

## Multiple port monitoring

Deep Discovery Inspector can monitor different network segments using different data ports. Deep Discovery Inspector data ports are connected to the mirror ports of access or distribution switches.

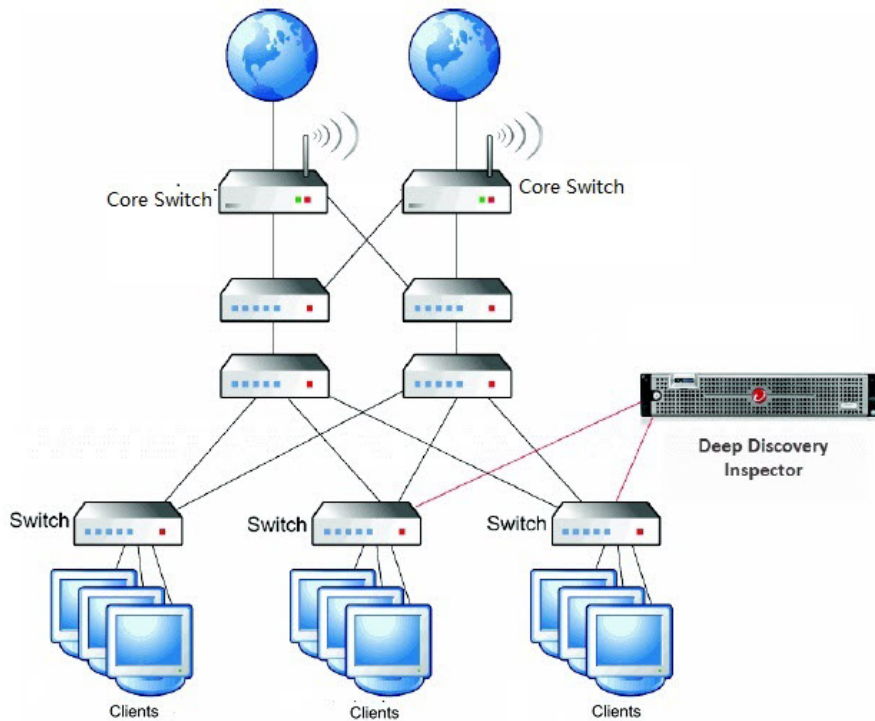


## Network tap monitoring

Network taps monitor the data flowing across the network from interconnected switches, routers, and clients. Multiple Deep Discovery Inspector appliances can be connected to a network tap.



**Note**


If using network taps, make sure that they copy DHCP traffic to Deep Discovery Inspector instead of filtering DHCP traffic.

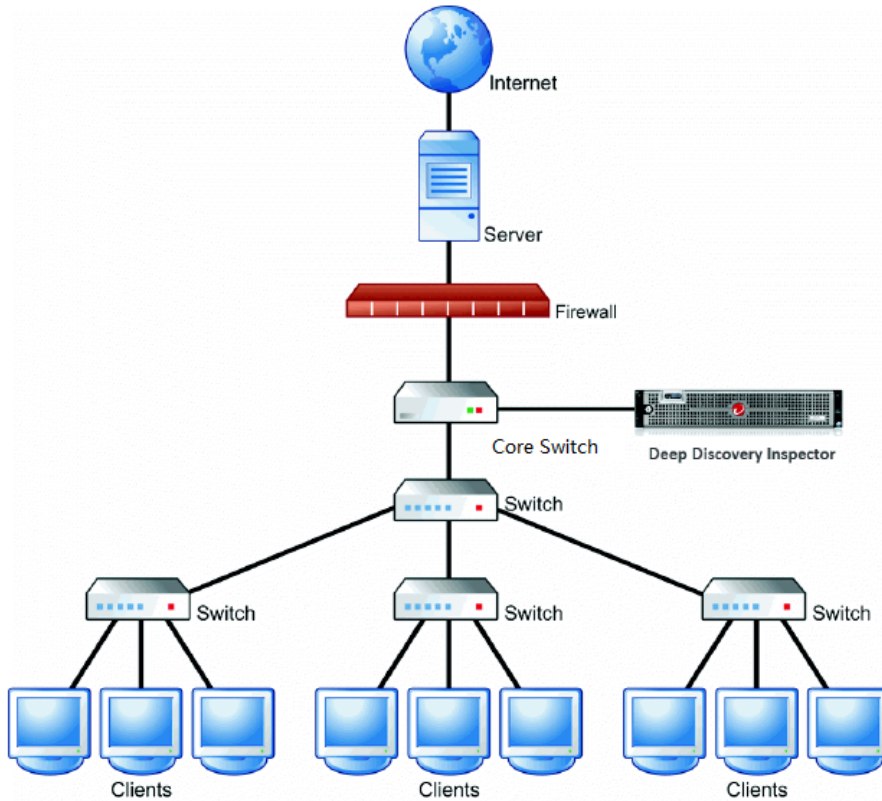

### Proxy monitoring


When configuring Deep Discovery Inspector in proxy environments outside the proxy server, enable XFF on the proxy server.

To avoid false alarms when configuring Deep Discovery Inspector in proxy environments inside or outside the proxy server, add HTTP Proxy as a registered service on Deep Discovery Inspector.

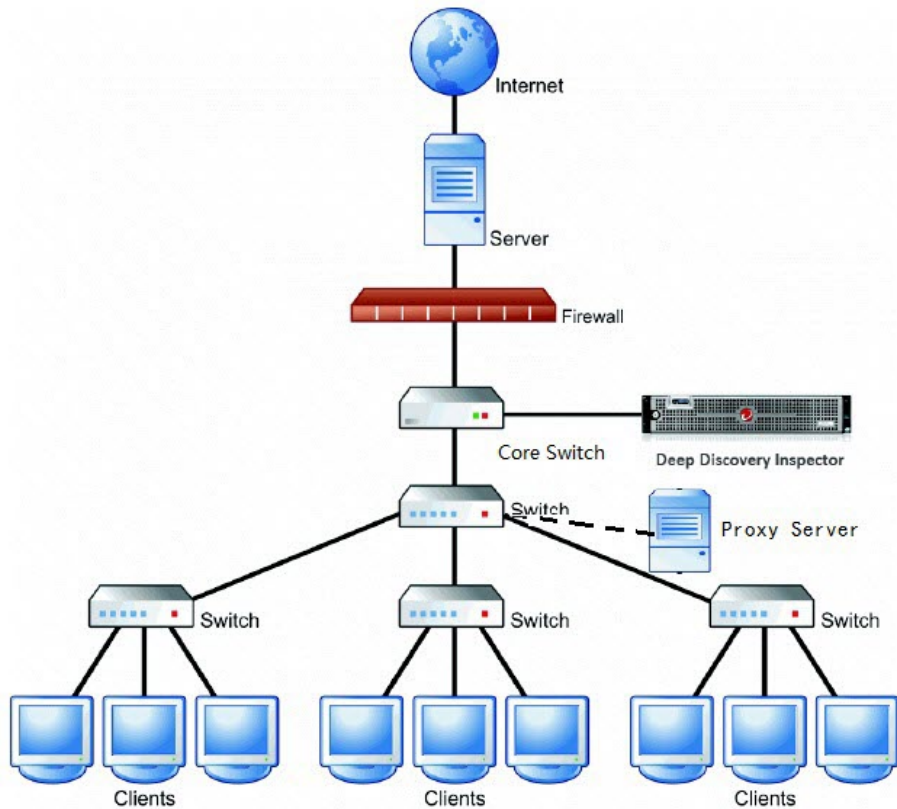

## Redundant networks

Many enterprise environments use redundant networks to provide high availability. When available, an asymmetric route connects Deep Discovery Inspector to redundant switches.

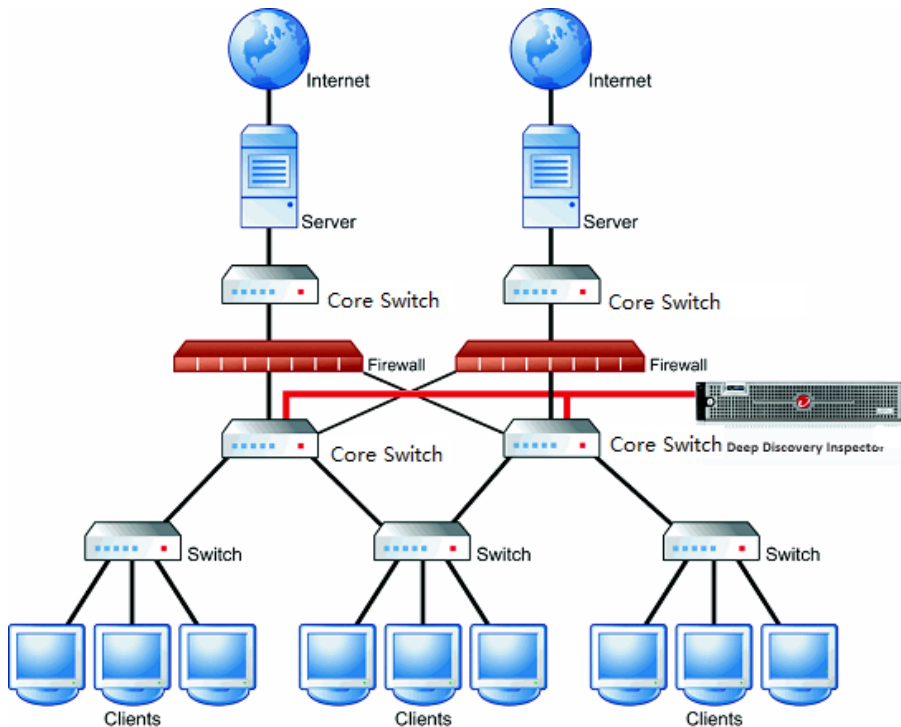


## Remote port or VLAN mirroring

Use remote mirroring in the following conditions:

- Monitoring switches
- Local switches do not have enough physical ports
- Port speed on local switches do not match (GB versus MB)

**Note**

In this diagram, the dotted line displays the remote mirror, and the solid line displays the direct mirror.

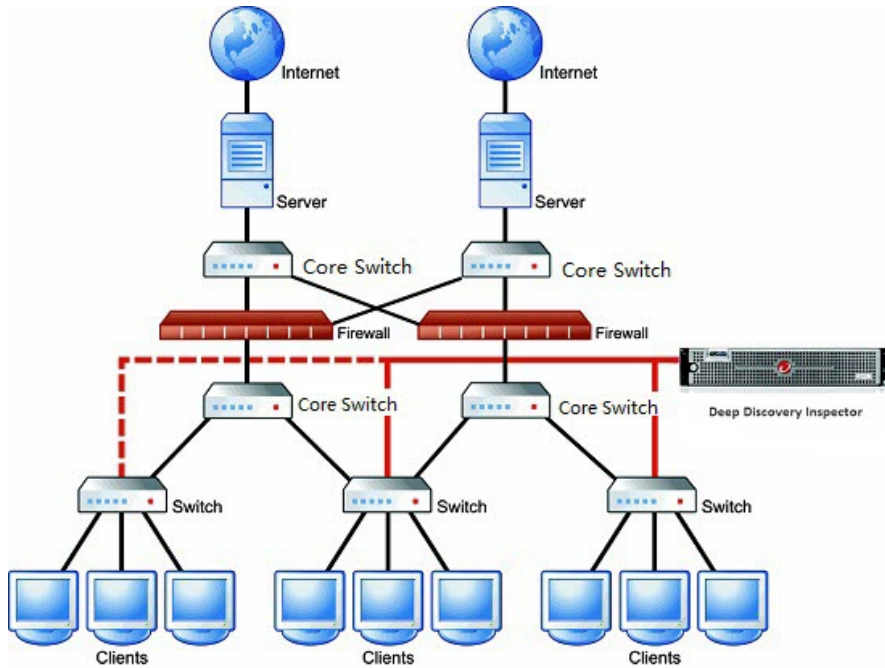


## Single port monitoring

The Deep Discovery Inspector data port connects to the mirror port of the core switch, which mirrors the traffic through the port to the firewall.

(Optional) Configure the mirror port to mirror inbound/outbound traffic from single or multiple source ports.

**Note**

Mirrored traffic should not exceed the capacity of the network interface card.

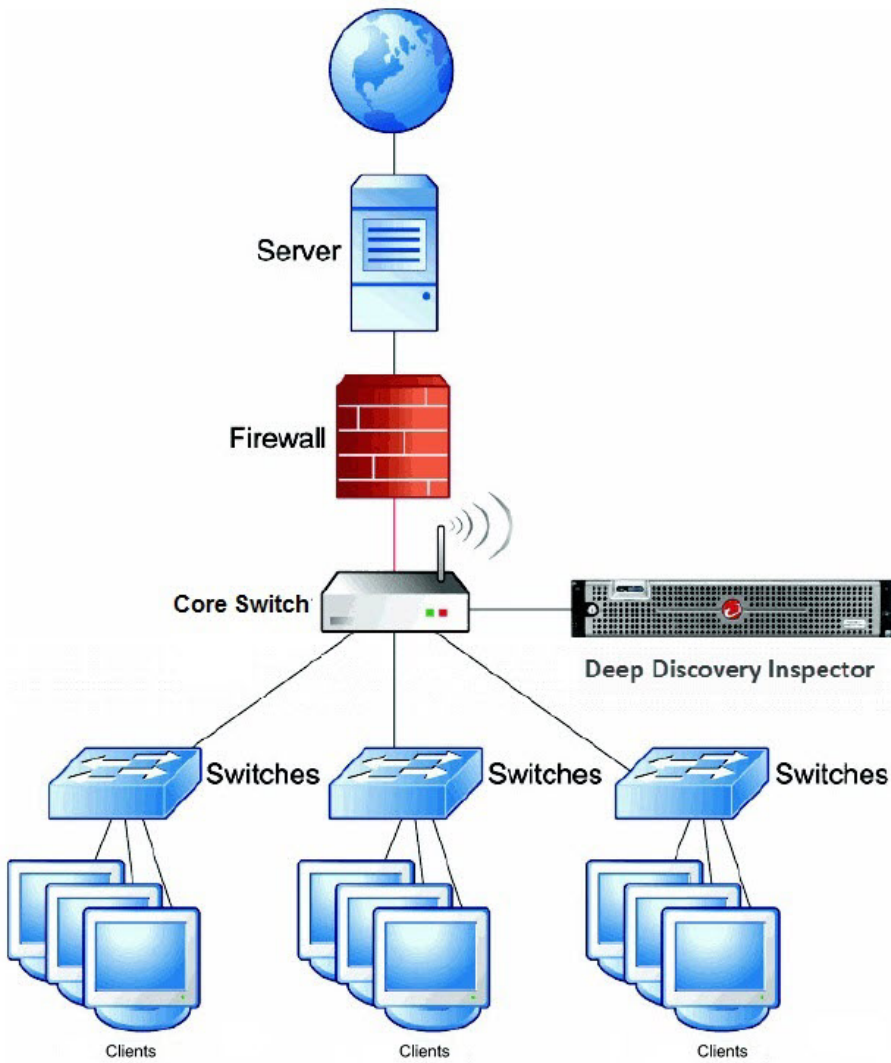

## VLAN-based port monitoring

VLAN-based port mirroring allows users to choose to monitor traffic on all ports belonging to a particular VLAN. In this scenario, connect Deep Discovery Inspector to a switch if the mirror configuration is VLAN-based.

## VMware port mirroring

Use VMware port mirroring when traffic passes through a virtual distributed switch.

For more details, see [Port mirroring on a VMware virtual distributed switch on page 5-1](#).

## Inline

When deployed inline, Deep Discovery Inspector acts as a transparent bridge and can inspect decrypted TLS traffic.



### Note

Installing an additional inline (LAN bypass) network interface card is needed for inline deployment. For installation instructions and compatible Deep Discovery Inspector appliance models, refer to the *Inline (LAN Bypass) Network Interface Card Installation Guide*.

---


Traffic cannot be blocked by Deep Discovery Inspector. When Deep Discovery Inspector is deployed inline, traffic is only inspected or not inspected.

## Transparent bridge

Transparent bridge deployment is suitable when you want to use Deep Discovery Inspector as an inline device. Transparent bridge deployment is required for TLS traffic inspection.

When deployed as a transparent bridge, Deep Discovery Inspector acts as a layer 2 bridge between network devices and is transparent on the network

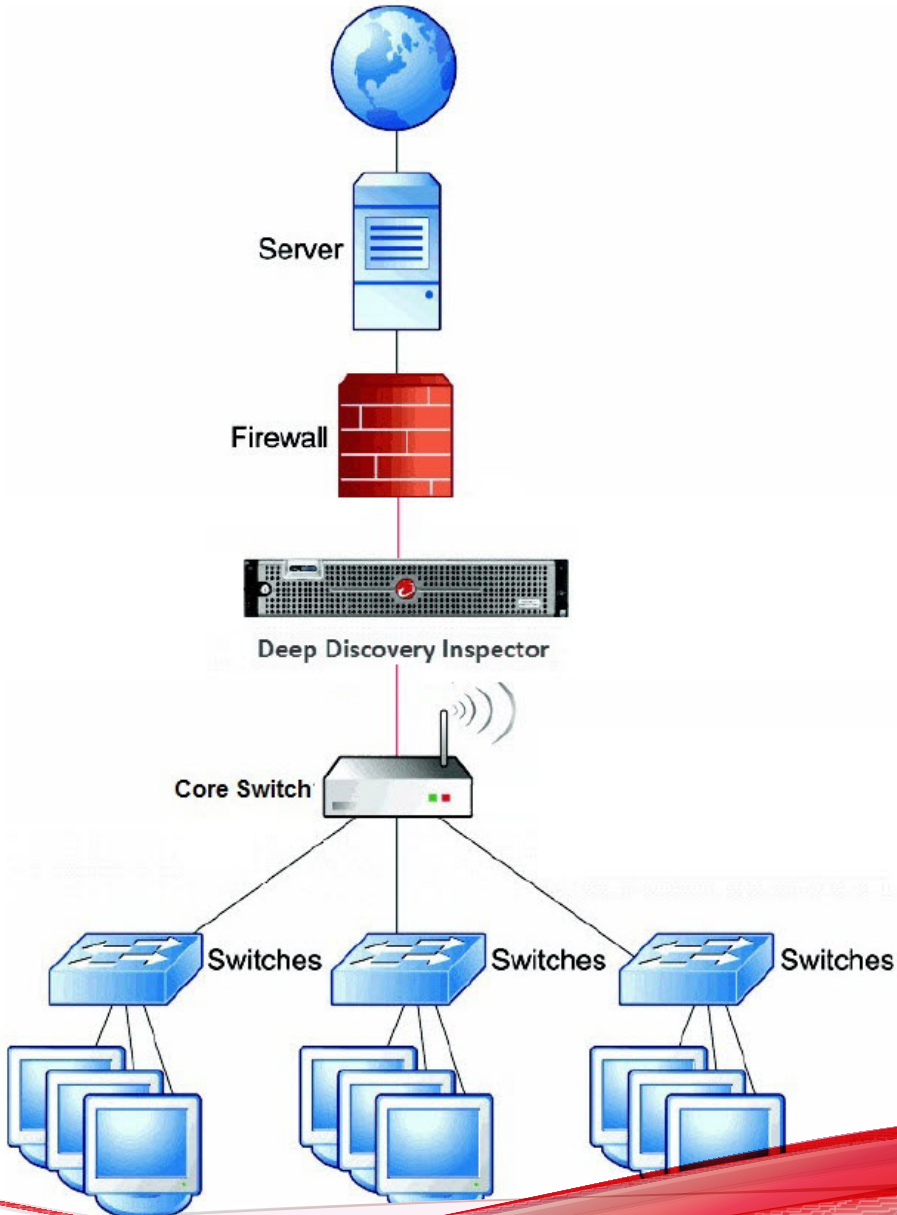

and you do not need to reconfigure your network as you need only place the appliance in the network path that you want to monitor.



## Hardware appliance installation requirements

Ensure the following before installing Deep Discovery Inspector.

REQUIREMENT	DESCRIPTION
Match port speeds	<p>The destination port speed should be the same as the source port speed to ensure equal port mirroring. If the destination port is unable to handle the faster speed of the source port, the destination port may drop some data.</p> <p>For Deep Discovery Inspector 530/1300 and 550/1500, the speed of inline ports is downgraded if not matched.</p> <p>For Deep Discovery Inspector 4200/9200, the inline ports are disabled if not matched.</p>
Configure Virtual Analyzer data ports	<p>When enabling an internal Virtual Analyzer, select one of the following network options and make sure the data ports are configured as follows:</p> <ul style="list-style-type: none"> <li>• No Network Virtual Analyzer does not exchange data with the Internet.</li> <li>• Custom Network Virtual Analyzer uses an additional specified data port to exchange data with the Internet.</li> <li>• Management Network Virtual Analyzer uses a management port to exchange data with the Internet.</li> </ul> <p>For details, see <i>Internal Virtual Analyzer</i> in the <i>Deep Discovery Inspector Administrator's Guide</i>.</p>

REQUIREMENT	DESCRIPTION
Monitor all data	<p>Deep Discovery Inspector monitors all inbound and outbound network traffic.</p> <hr/> <p> <b>Note</b> For better performance when installing Deep Discovery Inspector, Trend Micro recommends using a plug-in NIC rather than an onboard NIC as a data port.</p> <hr/> <p> <b>Note</b> To ensure Deep Discovery Inspector captures traffic from both directions, configure the mirror port, and make sure that traffic in both directions is mirrored to the port.</p>

## Hardware appliance system requirements

Deep Discovery Inspector requires the following:

- [Hardware appliance requirements on page 3-14](#)
- [Preconfiguration console requirements on page 3-15](#)
- [Management console requirements on page 3-15](#)
- [Virtual analyzer image operating system requirements on page 3-16](#)

## Hardware appliance requirements

Trend Micro provides the Deep Discovery Inspector appliance hardware. No other hardware is supported.

Installing an additional inline (LAN bypass) network interface card is needed for inline deployment. For installation instructions and compatible Deep Discovery Inspector appliance models, refer to the *Inline (LAN Bypass) Network Interface Card Installation Guide*.

## Preconfiguration console requirements

The Deep Discovery Inspector Preconfiguration Console is a terminal communications program used to configure the network and system settings that are required to access the Deep Discovery Inspector management console.

For details, see [Preconfiguration console on page 10-2](#)

Access to the Preconfiguration Console requires the following:

- VGA connections:
  - Monitor with a VGA port
  - USB keyboard
  - VGA cable
- Serial connections:
  - Computer with a serial port
  - RS-232 serial cable
  - Serial communication application (HyperTerminal)

## Management console requirements

Deep Discovery Inspector provides a built-in online management console for viewing system status, configuring and viewing threat detections and logs, running reports, administering Deep Discovery Inspector, updating components, and obtaining help.

For details, see *Management Console* in the *Deep Discovery Inspector Administrator's Guide*.

The Deep Discovery Inspector management console supports the following web browsers:

- Google™ Chrome™
- Mozilla™ FireFox™

- Microsoft™ Edge

Recommended resolution rate: 1280x800

## Virtual analyzer image operating system requirements

Windows operating systems and other Microsoft products are available separately from Microsoft and Microsoft channel partners.



### **Important**

Trend Micro does not provide any Microsoft Windows operating systems or Microsoft Office products required for installation on Virtual Analyzer images or sandbox instances you create in Deep Discovery Inspector. You must provide the operating system and Microsoft Office installation media and appropriate licensing rights necessary for you to create any sandboxes.

---

# Chapter 4

## Installation on a hardware appliance

Learn the steps for installing Deep Discovery Inspector as a hardware appliance in the following sections.

## Configuring options

Set the following options to enable Deep Discovery Inspector management console navigation.

- [Setting JavaScript options for Google Chrome on page 4-2](#)
- [Setting JavaScript options for Mozilla Firefox on page 4-2](#)

### Setting JavaScript options for Google Chrome

---

#### Procedure

1. On the browser, go to **Settings**.
  2. Click **Show advanced settings...**
  3. Under **Privacy**, click **Content settings...**
  4. Under **JavaScript**, click **Allow all sites to run JavaScript (recommended)**.
  5. Click **Done**.
- 

### Setting JavaScript options for Mozilla Firefox

---

#### Procedure

1. For Firefox versions lower than 23, do the following.
  - a. On the browser, go to the **Options > Content** tab.
  - b. Verify that **Enable JavaScript** is selected.
  - c. Click **OK**.
2. For Firefox version 23 or higher, do the following.
  - a. In the address bar, type `about:config` and press ENTER.
  - b. Click **I'll be careful, I promise!**.

- c. Verify that the **Value** of **Preference Name javascript.enabled** is set to **true**.
- 

## Deep Discovery Inspector hardware appliance installation

- Trend Micro provides a bare metal server with Deep Discovery Inspector pre-installed.
- Trend Micro provides Deep Discovery Inspector packaged as an ISO file on an installation DVD.

Install the Deep Discovery Inspector software on a bare metal server that meets the requirements listed in [Hardware appliance installation requirements on page 3-13](#).

### Installing Deep Discovery Inspector on hardware appliances with an optical drive

---

#### Procedure

1. Back up any pre-existing data on the target hard drive before installing Deep Discovery Inspector.

The installation process formats and repartitions the hard drive and removes all existing data.



#### Tip

If you are reinstalling Deep Discovery Inspector, you can back up your current settings by going to **Administration** > **System Maintenance** > **Backup / Restore** in the Deep Discovery Inspector management console.

---

2. Connect a VGA screen to the video connector of the appliance.
3. Insert the Deep Discovery Inspector installation DVD into the CD/DVD drive.

4. Turn on the appliance.

The **BIOS** screen appears.


```
F2 = System Setup
F10 = Lifecycle Controller (Config iDRAC, Update FW, Install OS)
F11 = Boot Manager
F12 = PXE Boot

Initializing Intel(R) Boot Agent XE v2.3.34.2
PXE 2.1 Build 092 (WfM 2.0)

Initializing Serial ATA devices...
-
```

5. Press F11.

The **Boot Manager** appears.

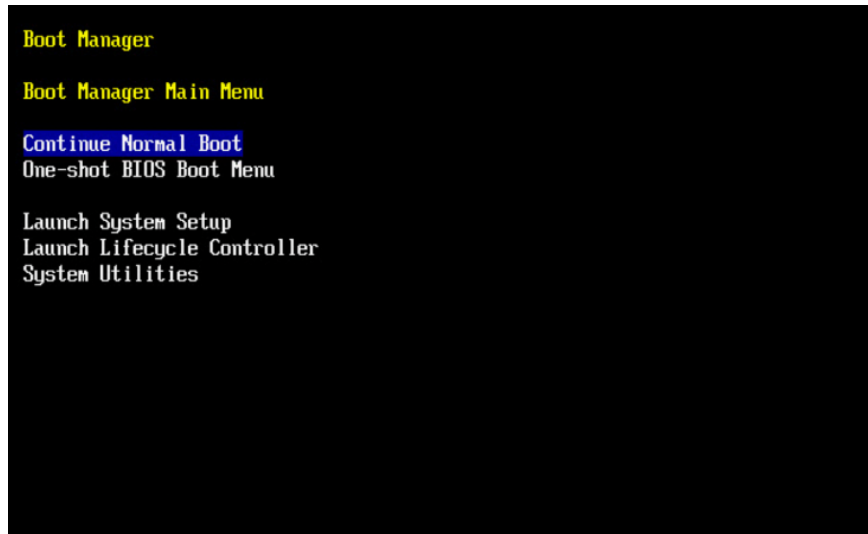

6. Select **BIOS Boot Menu** and press ENTER.




---

**Important**

When installing Deep Discovery Inspector through a serial connection, press ESC and simultaneously press **SHIFT** and 1 to enter the BIOS Boot Manager.


---

The **BIOS Boot Manager** appears.

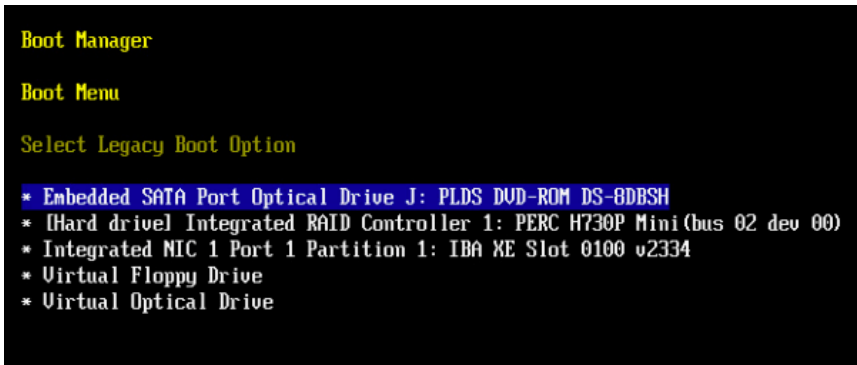

7. Select **TSSTcorp DVD-ROM SN-108BB** and press ENTER.

The installation screen appears.

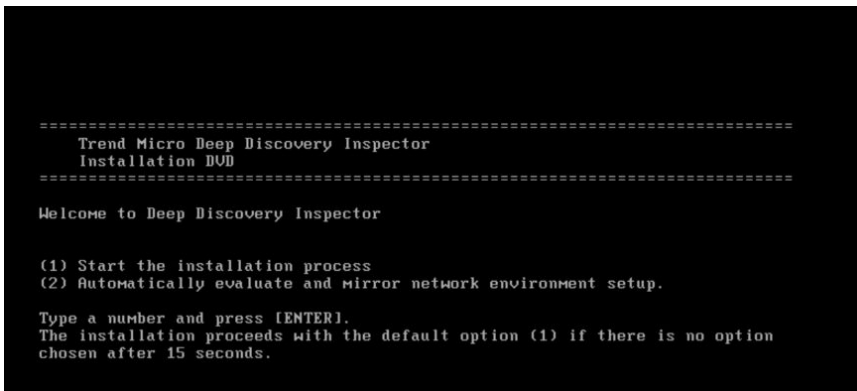

8. Press ENTER.



**Important**

When installing Deep Discovery Inspector through a serial connection, type `serial` and press ENTER

The **System Information** screen appears.

```
===== System Information =====
Platform: Trend Micro Deep Discovery Inspector 1300
BIOS: Trend Micro 1.6.5 (04/15/2022)
CPU: Intel Xeon 2400 MHz x 32
MEMORY: 32 GB
NIC: 6
=====

===== Main Menu =====
(0) Show system information
(1) Show NIC information
(2) Install Deep Discovery Inspector
(3) System requirements check is currently enabled. Press 3 to disable.
(4) Installation log will not be exported before reboot. Press 4 if you want to
export logs.
(5) Reboot

Type a number and press ENTER:
-
```

9. For trial deployments, type **3** and press **ENTER** to skip the system requirements check.

**Note**

By default, the installer checks system requirements before installing Deep Discovery Inspector to confirm that the appliance has the necessary resources to run the product.

10. If you need to obtain installation logs for troubleshooting, type **4** and press **ENTER**.
11. Start the installation by typing **2** and pressing **ENTER**.

The **Management Port Selection** screen appears.

Deep Discovery Inspector automatically detects the active link cards (indicated by **Link UP**) available for use as a management port.


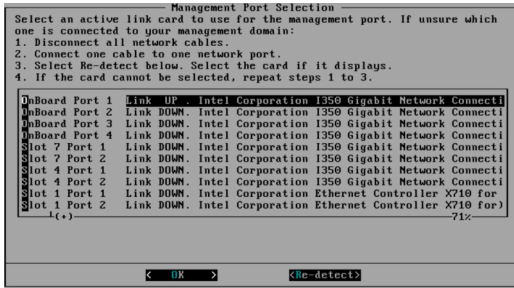


FIGURE 4-1. Management Port Selection



### Important

You cannot select ports from an inline NIC as the management port.

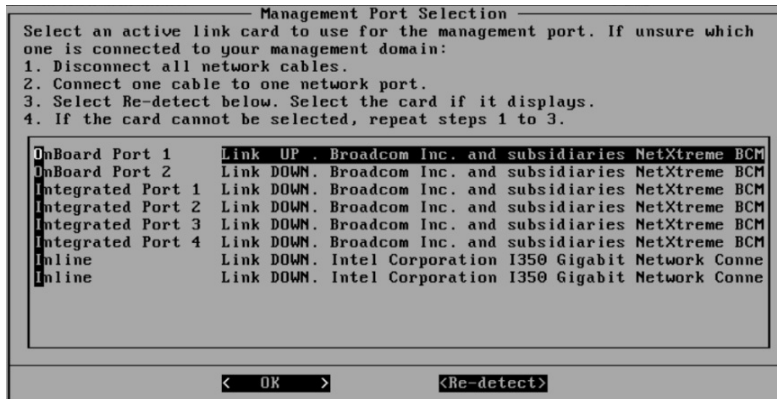

12. Verify that the network port status and the actual port status match.

If a status conflict exists, select **Re-detect** and press ENTER.

13. Check which active link card connects to the management domain by doing the steps listed on the **Management Port Selection** screen.

14. Select an active link card and press ENTER.

The installation continues and completes.

15. If you enabled installation log export on the **System Information** screen, save the installation logs.

- a. Select a storage device and press ENTER.

If your storage device is not listed, Go to **Re-detect** and press **ENTER** to refresh the list.

- b. When the installation log file name appears, press ENTER.

Record the file name for future reference. The file name uses the following format:

```
install.log.YYYY-MM-DD-hh-mm-ss
```

**Tip**

Trend Micro recommends saving exported installation logs to **sda11**.

---

The system automatically restarts and the Preconfiguration Console appears. If used, the installation DVD ejects from the CD/DVD drive.

16. (Optional) Remove the DVD to prevent reinstallation.

17. Configure the Deep Discovery Inspector network settings.

- Access the preconfiguration console and change the device settings.

For details, see [Preconfiguration on page 10-1](#).

- Open the management console and change the appliance IP settings.

For details, see the *Get Started* chapter of the *Deep Discovery Inspector Administrator's Guide*.

---

## Next steps

See the *Deep Discovery Inspector Administrator's Guide* for details about configuring and administering Deep Discovery Inspector.



### Tip

Trend Micro recommends that you configure iDRAC (Integrated Dell Remote Access) on the appliance to allow remote system management and troubleshooting.

---

## Installing Deep Discovery Inspector on hardware appliances without an optical drive

---

### Procedure

1. Back up any pre-existing data on the target hard drive before installing Deep Discovery Inspector.

The installation process formats and repartitions the hard drive and removes all existing data.



### Tip

If you are reinstalling Deep Discovery Inspector, you can back up your current settings by going to **Administration > System Maintenance > Backup / Restore** in the Deep Discovery Inspector management console.

---

2. Download the Deep Discovery Inspector installation ISO from the Business Success Portal at <https://success.trendmicro.com/dcx/s/license>.
3. Enable the iDRAC Direct USB port in the **Integrated Devices** screen of the BIOS of the Deep Discovery Inspector appliance.
4. Connect your computer to the Deep Discovery Inspector appliance using a USB to micro-USB cable and access the iDRAC interface over the USB port.

For more information, see the dell documentation at <https://www.dell.com/support/kbdoc/en-us/000130077/>.

5. Use the virtual media function on iDRAC9 to launch the Deep Discovery Inspector installer.

For more information, see the dell documentation at <https://www.dell.com/support/kbdoc/en-us/000124001/>.

The installation screen appears.

```
=====
Trend Micro Deep Discovery Inspector
Installation DVD
=====

Welcome to Deep Discovery Inspector

(1) Start the installation process
(2) Automatically evaluate and mirror network environment setup.

Type a number and press [ENTER].
The installation proceeds with the default option (1) if there is no option
chosen after 15 seconds.
```

6. Press ENTER.

**Important**

When installing Deep Discovery Inspector through a serial connection, type `serial` and press ENTER

---

The **System Information** screen appears.

```
===== System Information =====
Platform: Trend Micro Deep Discovery Inspector 1300
BIOS: Trend Micro 1.6.5 (04/15/2022)
CPU: Intel Xeon 2400 MHz x 32
MEMORY: 32 GB
NIC: 6
=====

===== Main Menu =====
(0) Show system information
(1) Show NIC information
(2) Install Deep Discovery Inspector
(3) System requirements check is currently enabled. Press 3 to disable.
(4) Installation log will not be exported before reboot. Press 4 if you want to
export logs.
(5) Reboot

Type a number and press ENTER:
-
```

7. For trial deployments, type **3** and press **ENTER** to skip the system requirements check.

**Note**

By default, the installer checks system requirements before installing Deep Discovery Inspector to confirm that the appliance has the necessary resources to run the product.

8. If you need to obtain installation logs for troubleshooting, type **4** and press **ENTER**.
9. Start the installation by typing **2** and pressing **ENTER**.

The **Management Port Selection** screen appears.

Deep Discovery Inspector automatically detects the active link cards (indicated by **Link UP**) available for use as a management port.


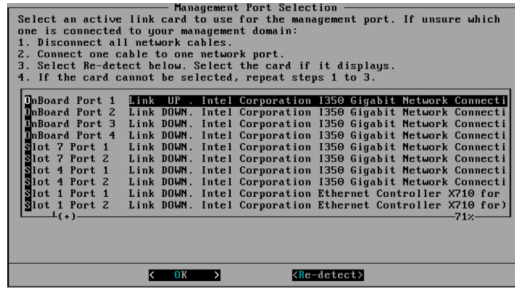


FIGURE 4-2. Management Port Selection



### Important

You cannot select ports from an inline NIC as the management port.

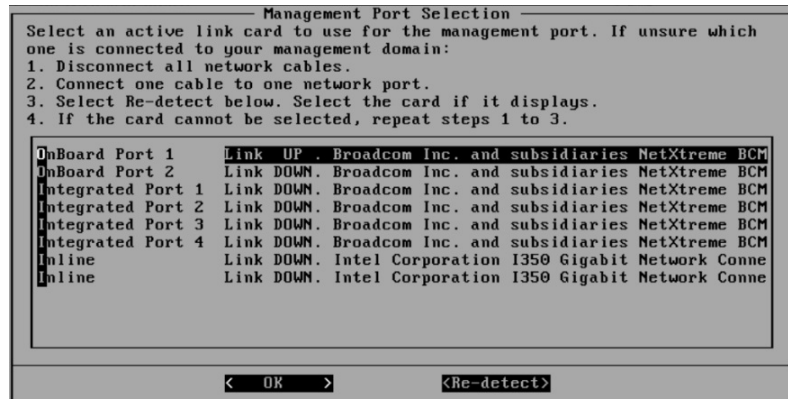

10. Verify that the network port status and the actual port status match.

If a status conflict exists, select **Re-detect** and press ENTER.

11. Check which active link card connects to the management domain by doing the steps listed on the **Management Port Selection** screen.

12. Select an active link card and press ENTER.

The installation continues and completes.

13. If you enabled installation log export on the **System Information** screen, save the installation logs.

- a. Select a storage device and press ENTER.

If your storage device is not listed, Go to **Re-detect** and press **ENTER** to refresh the list.

- b. When the installation log file name appears, press ENTER.

Record the file name for future reference. The file name uses the following format:

```
install.log.YYYY-MM-DD-hh-mm-ss
```



**Tip**

Trend Micro recommends saving exported installation logs to **sda11**.

---

The system automatically restarts and the Preconfiguration Console appears. If used, the installation DVD ejects from the CD/DVD drive.

14. (Optional) Remove the DVD to prevent reinstallation.

15. Configure the Deep Discovery Inspector network settings.

- Access the preconfiguration console and change the device settings.

For details, see [Preconfiguration on page 10-1](#).

- Open the management console and change the appliance IP settings.

For details, see the *Get Started* chapter of the *Deep Discovery Inspector Administrator's Guide*.

---

## Next steps

See the *Deep Discovery Inspector Administrator's Guide* for details about configuring and administering Deep Discovery Inspector.



### Tip

Trend Micro recommends that you configure iDRAC (Integrated Dell Remote Access) on the appliance to allow remote system management and troubleshooting.

---

## Restoring to factory mode

Reset Deep Discovery Inspector by restoring the default settings that shipped with the product.

---

### Procedure

1. Power on Deep Discovery Inspector with a monitor connected to a VGA port.

When Deep Discovery Inspector is starting and before the Preconfiguration Console opens, the **Press ESC key to enter the menu** prompt appears. If no action is performed, the system will automatically boot within 10 seconds.

2. Press the ESC key to enter the boot system options menu.
3. Using the arrow key, select **Restore to factory mode** and press ENTER.

Deep Discovery Inspector restarts and the Preconfiguration Console opens.

---



## Chapter 5

### Port mirroring on a VMware virtual distributed switch

Deep Discovery Inspector can monitor mirrored traffic using virtual distributed switches. Learn how to create a virtual distributed switch and configure Deep Discovery Inspector hardware appliances to monitor mirrored traffic in the following sections.

- *[Creating a VMware vSphere distributed switch \(VDS\) on page 5-2](#)*
- *[Deep discovery inspector hardware appliance with a VDS on page 5-5](#)*

## Creating a VMware vSphere distributed switch (VDS)

---

### Procedure

1. Create a new virtual distributed switch.
  - a. Log in to the vSphere Web Client.
  - b. Click **Networking**.
  - c. In the left panel, select your data center.
  - d. In the right panel, click the **Create a new distributed switch** icon.  
The **New Distributed Switch** window appears.
  - e. Type a name for the switch and then click **Next**.
  - f. Select the distributed switch version and then click **Next**.
  - g. For **Number of uplinks**, set at least **2** if your SPAN traffic is on a dedicated NIC. Otherwise, set this value to **1**.



#### Note

Trend Micro recommends using a dedicated NIC.

---

- h. For **Network I/O Control**, select one of the following options.
  - **Disabled:** If your SPAN traffic on a dedicated NIC.



#### Note

Trend Micro recommends using a dedicated NIC.

---

- **Enabled:** If your SPAN traffic is on the same NIC as your monitored traffic.
- i. Uncheck **Create a default port group**.
  - j. Click **Next**.



- a. Right-click the virtual switch you created in the previous steps, and then select **Add and Manage Hosts**.

The **Add and Manage Hosts** window appears.

- b. For **Select task**, select **Add host and manage host networking (advanced)**.
- c. Click **Next**.
- d. For **Select hosts**, click + **New hosts** to add managed ESXi hosts.
- e. Click **Next**.
- f. For **Select network adapter tasks**, add a checkmark to **Manage physical adapters** and **Migrate virtual machine networking**.
- g. Click **Next**.
- h. For **Manage physical network adapters**, manage the physical network adapters according to your network environment.
- i. Click **Next**.
- j. For **Analyze impact**, specify **No impact**.
- k. Click **Next**.
- l. For **Migrate VM networking**, migrate the VM networking according to your network environment.
- m. Click **Next**.
- n. For **Ready to complete**, click **Finish**.

The **Add and Manage Hosts** window closes.

- o. Click the virtual switch you created in the previous steps, click the **Configure** tab, and then click **Topology** to verify the virtual switch topology that you configured.
-


## Deep discovery inspector hardware appliance with a VDS

Deep Discovery Inspector hardware appliances can monitor mirrored traffic from a virtual distributed switch using encapsulated remote mirroring or remote mirroring. Learn how to configure Deep Discovery Inspector and the virtual distributed switch in the following sections.

- [Hardware appliance - configuring mirrored traffic monitoring from a VDS with encapsulated remote mirroring on page 5-5](#)
- [Hardware appliance - configuring mirrored traffic monitoring from a VDS with remote mirroring on page 5-9](#)

### Hardware appliance - configuring mirrored traffic monitoring from a VDS with encapsulated remote mirroring

Encapsulated Remote Mirroring enables you to monitor traffic on multiple network interfaces or VLANs and send the monitored traffic to one or more destinations.

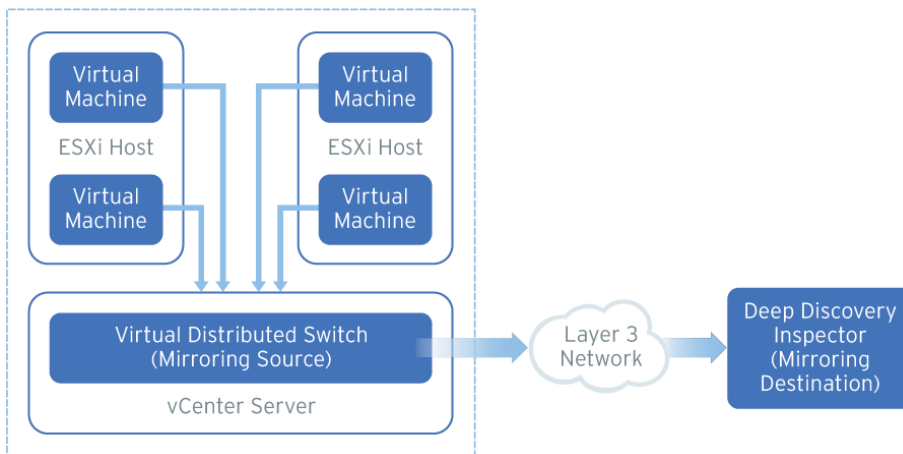

**FIGURE 5-1. Mirrored Traffic Monitoring from a VDS with Encapsulated Remote Mirroring**

By default, encapsulated remote mirroring on the virtual switch uses the management VMkernel port of the ESXi host as the encapsulation source IP address.

In the steps below, the mirroring source and mirroring destination are the following:


- Mirroring source: Virtual distributed switch that forwards mirrored traffic
- Mirroring destination: Deep Discovery Inspector

---

## Procedure

1. Configure the mirroring source to forward encapsulated remote mirrored traffic.
  - a. Log in to the vSphere Web Client.
  - b. Select your virtual distributed switch in the left column and then click **Configure**.
  - c. Click **Port Mirroring**.

The **Port mirroring** screen appears.

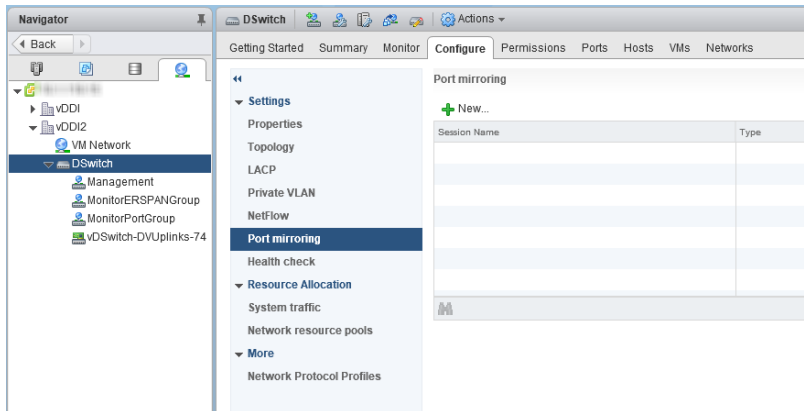

- d. Click **New...**

The **Add Port Mirroring Sessions** window appears.

The screenshot shows the 'DSwitch - Add Port Mirroring Session' dialog box. On the left, a sidebar lists five steps: 1. Select session type (highlighted), 2. Edit properties, 3. Select sources, 4. Select destinations, and 5. Ready to complete. The main area is titled 'Select session type' and contains the instruction 'Select the type of the port mirroring session.' Below this are four radio button options: 'Distributed Port Mirroring' (disabled), 'Remote Mirroring Source' (disabled), 'Remote Mirroring Destination' (disabled), and 'Encapsulated Remote Mirroring (L3) Source' (selected). A fifth option, 'Distributed Port Mirroring (legacy)', is also present but disabled. At the bottom right, there are four buttons: 'Back', 'Next', 'Finish', and 'Cancel'.

e. Select **Encapsulated Remote Mirroring (L3) Source**.

f. Click **Next**.

The **Edit properties** screen appears.

The screenshot shows the 'DSwitch - Add Port Mirroring Session' dialog box at Step 2: Edit properties. The sidebar now shows '1 Select session type' with a checkmark and '2 Edit properties' highlighted. The main area is titled 'Edit properties' and contains the instruction 'Specify a name and the properties of the port mirroring session.' The 'Name' field contains 'erspan'. The 'Status' dropdown is set to 'Enabled'. The 'Session type' is 'Encapsulated Remote Mirroring (L3) Source'. The 'Encapsulation type' dropdown is set to 'GRE'. The 'Session ID' is '0'. Under 'Advanced properties', the 'Mirrored packet length (Bytes)' checkbox is checked, with a value of '60'. The 'Sampling rate' is '1'. There is a large empty text area for 'Description'. At the bottom right, there are four buttons: 'Back', 'Next', 'Finish', and 'Cancel'.

g. In **Name**, type a session name.

- h.** For **Status**, select **Enabled**.
- i.** For **Encapsulation type**, select the encapsulation type.



**Note**

Using **ERSPAN THREE** may cause issues. Trend Micro recommends using **GRE** or **ERSPAN TWO**

---

- j.** Click **Next**.

The **Select sources** screen appears.

- k.** Click the plus icon

(



) to add the source virtual machines that you want to monitor.

- l.** Click **Next**.

The **Select destinations** screen appears.

- m.** Click the plus icon to add an IP address as a destination.



**Note**

The destination IP address is the address that you configure on Deep Discovery Inspector in the next step.

---

- n.** Click **Next**.


The **Ready to complete** screen appears.

- o.** Verify that the settings are correct and then click **Finish**.

- 2.** Configure the mirroring destination to receive encapsulated remote mirrored traffic.

- a.** In the Deep Discovery Inspector console, go to **Administration > System Settings > Network Interface**.

The **Network Interface** screen appears.

- b. Locate a data port, and then click the right arrow (  ) at the beginning of the row.
- c. Select **Encapsulated Remote Mirroring**.
- d. Specify the encapsulated remote mirroring destination address.




### Important

The encapsulated remote mirroring destination address must be routable from the management VMkernel port of the ESXi host.

- e. Click **Save**.

## Hardware appliance - configuring mirrored traffic monitoring from a VDS with remote mirroring

Remote mirroring enables you to monitor traffic on one switch through a device on another switch and send the monitored traffic to one or more destinations.

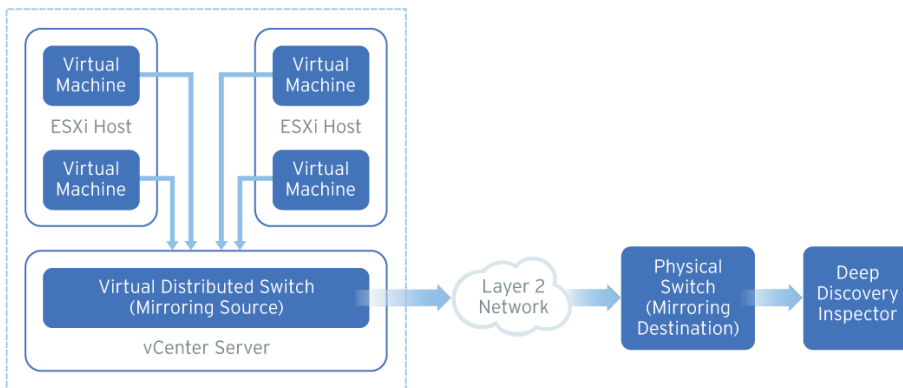

**FIGURE 5-2. Mirrored Traffic Monitoring from a VDS with Remote Mirroring**

Remote mirroring requires that you configure a remote mirroring VLAN on your physical switches. If you cannot configure a remote mirroring VLAN, consider using encapsulated remote mirroring as an alternative.

In the steps below, the mirroring source and mirroring destination are the following:

- Mirroring source: Virtual distributed switch that forwards mirrored traffic
- Mirroring destination: Physical switch that receives mirrored traffic and that can route the traffic to Deep Discovery Inspector


Before you begin, verify that the uplink ports of the ESXi hosts that receive traffic are linked to the physical switch trunk port.

---

## Procedure


1. Configure the mirroring source to forward remote mirrored traffic to the destination.
  - a. Log in to the vSphere Web Client.
  - b. Select your virtual distributed switch in the left column and then click **Configure**.
  - c. Click **Port Mirroring**.

The **Port mirroring** screen appears.

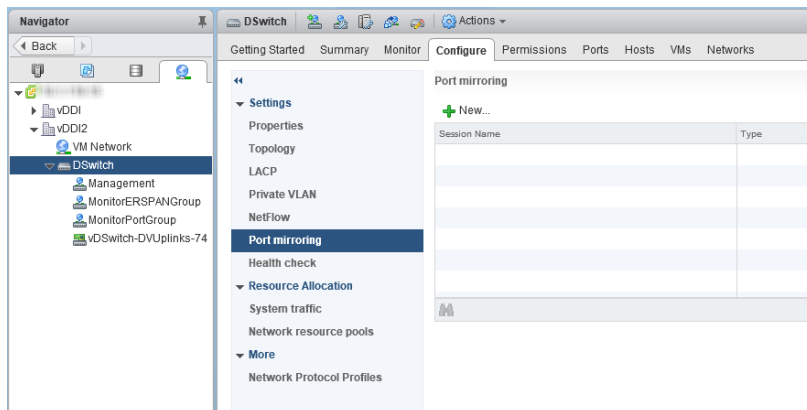

- d. Click **New...**


The **Add Port Mirroring Sessions** window appears.

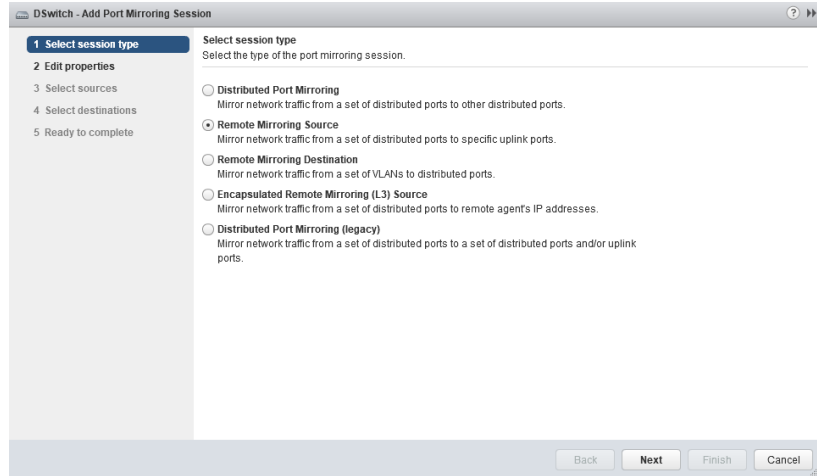

- e. Select **Remote Mirroring Source**.

- f. Click **Next**.

The **Edit properties** screen appears.

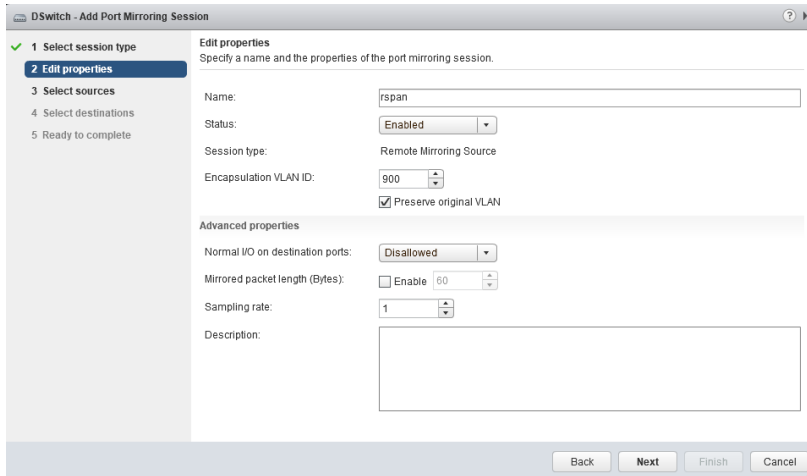


- g. In **Name**, type a session name.
- h. For **Status**, select **Enabled**.
- i. In **Encapsulation VLAN ID**, specify the VLAN ID.



**Note**

This is the remote mirroring VLAN ID configured on the VDS.


- j. Click **Next**.  
The **Select sources** screen appears.
- k. Click the plus icon  
(  
  
 ) to add the source virtual machines that you want to monitor.
- l. Click **Next**.  
The **Select destinations** screen appears.
- m. Add uplink in **Available uplinks** to **Selected uplinks**.

- n. Click **Next**.  
The **Ready to complete** screen appears.
  - o. Verify that the settings are correct and then click **Finish**.
2. Configure the mirroring destination to forward encapsulated remote mirrored traffic to Deep Discovery Inspector.
-



# **Part III**

## **Virtual appliance installation and deployment**

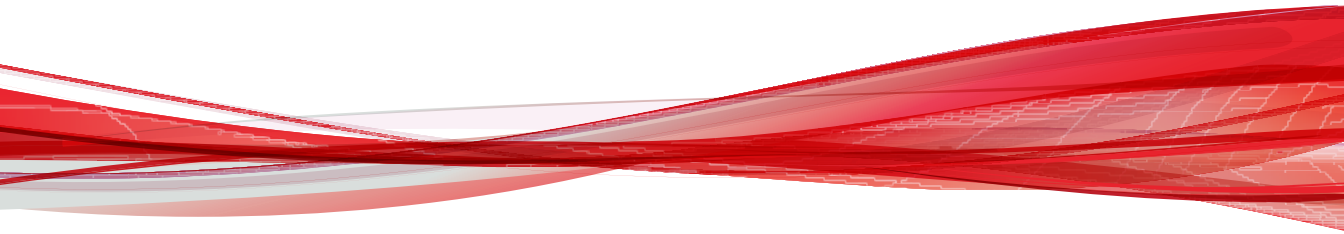



# Chapter 6

## Virtual appliance deployment

Learn tips, suggestions, and requirements for installing a Deep Discovery Inspector virtual appliance in the following sections.

## Deployment overview

---

### Procedure

1. Plan the deployment.  
See *Virtual appliance deployment planning on page 6-2*.
  2. Review the installation requirements.  
See *Virtual appliance installation requirements on page 6-3*.
  3. Review the system requirements.  
See *Virtual appliance system requirements on page 6-4*.
  4. Create a virtual appliance.  
See *Create a new virtual appliance on page 7-1*.
  5. Install Deep Discovery Inspector.  
See *Deep Discovery Inspector virtual appliance installation on page 8-4*.
  6. Preconfigure Deep Discovery Inspector.  
See *Preconfiguration on page 10-1*.
- 

## Virtual appliance deployment planning

Plan how to best deploy Deep Discovery Inspector by doing the following:


- Determine the segments of your network that need protection.
- Plan for network traffic, considering the location of appliances critical to your operations such as email, web, and application servers.
- Determine both the number of appliances needed to meet your security needs and their locations on the network
- Conduct a pilot deployment on a test segment of your network.
- Redefine your deployment strategy based on the results of the pilot deployment.

- Use the following examples to plan a customized Deep Discovery Inspector deployment.

## Deployment scenarios

When deployed as a virtual appliance: Deep Discovery Inspector can only be deployed out-of-band. Deep Discovery Inspector monitors network traffic by connecting to the mirror port on a switch for minimal to no network interruption.

The figure below provides a high-level overview of supported deployment as a virtual appliance.



## VMware port mirroring


Use VMware port mirroring when traffic passes through a virtual distributed switch.

For more details, see [Port mirroring on a VMware virtual distributed switch on page 9-1](#).

## Virtual appliance installation requirements

Ensure the following before installing Deep Discovery Inspector.

REQUIREMENT	DESCRIPTION
Match port speeds	The destination port speed should be the same as the source port speed to ensure equal port mirroring. If the destination port is unable to handle the faster speed of the source port, the destination port may drop some data.

REQUIREMENT	DESCRIPTION
Monitor all data	<p>Deep Discovery Inspector monitors all inbound and outbound network traffic.</p> <hr/> <p> <b>Note</b> To ensure Deep Discovery Inspector captures traffic from both directions, configure the mirror port, and make sure that traffic in both directions is mirrored to the port.</p>

## Virtual appliance system requirements

Deep Discovery Inspector requires the following:

- [Virtual host appliance requirements on page 6-4](#)
- [Management console requirements on page 3-15](#)

## Virtual host appliance requirements

You can install Deep Discovery Inspector on:

- VMware ESXi 7.0 or 8.0
- Microsoft Hyper-V on Windows Server 2019 or 2022
- KVM

Deep Discovery Inspector virtual appliances do not support nested virtual machines. When using a Deep Discovery Inspector virtual appliance with Virtual Analyzer, only external Virtual Analyzers and Sandbox as a Service are supported.

Trend Micro recommends the following minimum specifications based on the throughput of your licensed model.

THROUGHPUT (MBPS)	VIRTUAL CPUS *	VIRTUAL MEMORY (GB)	VIRTUAL DISK (GB)	VIRTUAL NICs **	SANDBOX AS A SERVICE SUPPORT
250	6	32	500	2	Yes
500	6	32	500	2	Yes
1000	12	32	1000	3	Yes

**Note**

- \* Virtual CPUs require a minimum speed of 2.5 GHz with hyper-threading support, Virtualization Technology (VT), and 64-bit architecture.
- \*\* Trend Micro recommends using the VMXNET 3 network adapter on ESXi, and the VirtIO or E1000 network adapters on KVM.

## Management console requirements

Deep Discovery Inspector provides a built-in online management console for viewing system status, configuring and viewing threat detections and logs, running reports, administering Deep Discovery Inspector, updating components, and obtaining help.

For details, see *Management Console* in the *Deep Discovery Inspector Administrator's Guide*.

The Deep Discovery Inspector management console supports the following web browsers:

- Google™ Chrome™
- Mozilla™ FireFox™
- Microsoft™ Edge

Recommended resolution rate: 1280x800



# Chapter 7

## Create a new virtual appliance

Learn how to create a virtual appliance using VMware ESXi or Microsoft Hyper-V in the following sections:

- [Create a VMware ESXi virtual appliance on page 7-2](#)
- [Create a Microsoft Hyper-V virtual appliance on page 7-14](#)

For details about the minimum virtual host appliance system requirements and supported hypervisors, see [Virtual host appliance requirements on page 6-4](#).

## Create a VMware ESXi virtual appliance

Learn how to create a virtual appliance using VMware ESXi in the following topics:

- [Requirements for a virtual machine in VMware ESXi on page 7-2](#)
- [Configuring the VMware ESXi server network on page 7-2](#)
- [Creating a virtual machine in VMware ESXi on page 7-7](#)
- [Enabling hardware-assisted virtualization in VMware ESXi on page 7-13](#)

## Requirements for a virtual machine in VMware ESXi

---



### Important

You must separately license VMware ESXi and such use is subject to the terms and conditions of the VMware license agreement for that product.

---

To install Deep Discovery Inspector in a VMware ESXi server, ensure that your server has:

- VMware ESXi server version 7.0 or 8.0 .
- Two or more NICs on the VMware ESXi server: one manager network, and at least one data network.

For details, see [Configuring the VMware ESXi server network on page 7-2](#).

- Virtualization Technology (VT) enabled on your VMware host and in the VMware vSphere configuration.

For details about the VMware vSphere configuration, see [Enabling hardware-assisted virtualization in VMware ESXi on page 7-13](#).

## Configuring the VMware ESXi server network


Use a browser to connect the ESXi server.

## Procedure

1. Sign into the VMware ESXi server.



2. Go to **Networking > Virtual switches**. Observe the initial state.

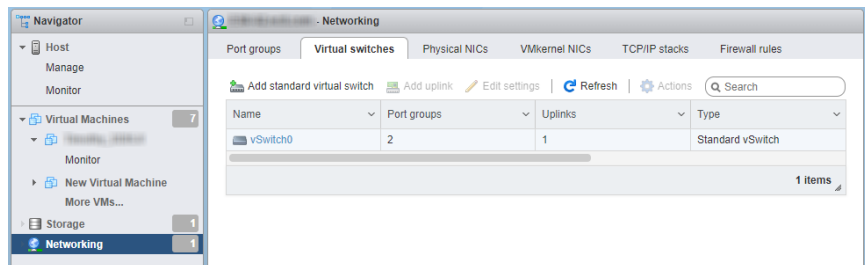

3. Click **Add standard virtual switches** and configure the settings.


- a. For **vSwitch Name**, type **Data Network**.
- b. For **MTU**, type **1600**.
- c. For **Uplink 1**, select a NIC card for a **Data Network**.
- d. Expand **Security** and configure the settings.
  1. For **Promiscuous mode**, select **Reject**.
  2. For **MAC address changes**, select **Accept**.
  3. For **Forged transmits**, select **Accept**.

The screenshot shows a dialog box titled "Add standard virtual switch - Data Network". It contains the following fields and settings:


Add uplink	
vSwitch Name	Data Network
MTU	1600
Uplink 1	vmnic5 - Down
Link discovery	Click to expand
Security	
Promiscuous mode	<input type="radio"/> Accept <input checked="" type="radio"/> Reject
MAC address changes	<input checked="" type="radio"/> Accept <input type="radio"/> Reject
Forged transmits	<input checked="" type="radio"/> Accept <input type="radio"/> Reject

Buttons: Add, Cancel

- e. Click **Add**.

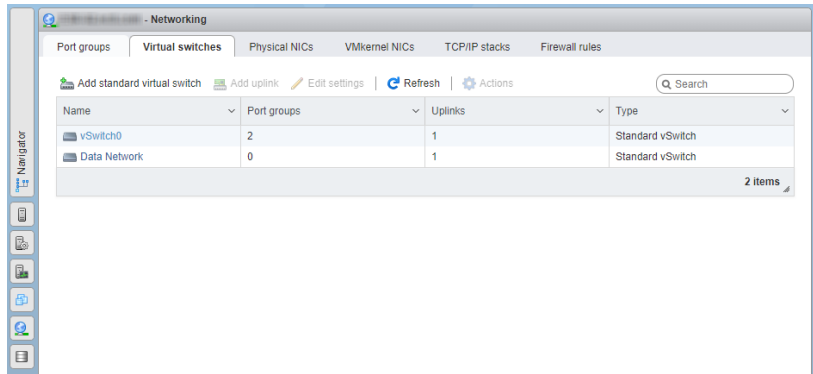

4. Click on the **Port groups** tab and observe the initial state.
5. Click **Add port group** and configure the settings.

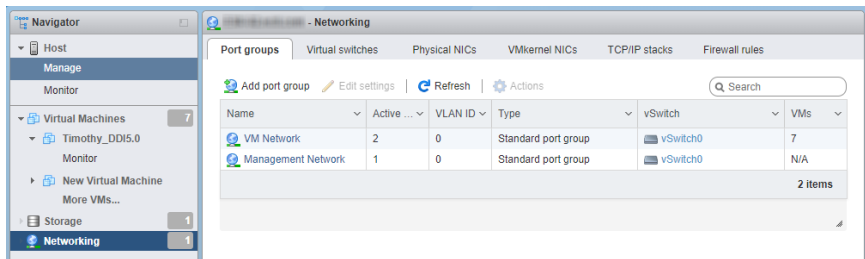

- a. For **Name**, type **Data Port Group**.
- b. For **VLAN ID**, type **4095**.
- c. For **Virtual switch**, select a **Data Network**.

Add port group - Data Port Group	
Name	Data Port Group
VLAN ID	4095
Virtual switch	Data Network
Security	Click to expand


Add Cancel

- d. Expand **Security** and configure the settings.
  1. For **Promiscuous mode**, select **Accept**.
  2. For both **Mac Address changes** and **Forged transmits**, select **Inherit from vSwitch**.

Add port group - Data Port Group	
Name	Data Port Group
VLAN ID	4095
Virtual switch	Data Network
Security	
Promiscuous mode	<input checked="" type="radio"/> Accept <input type="radio"/> Reject <input type="radio"/> Inherit from vSwitch
MAC address changes	<input type="radio"/> Accept <input type="radio"/> Reject <input checked="" type="radio"/> Inherit from vSwitch
Forged transmits	<input type="radio"/> Accept <input type="radio"/> Reject <input checked="" type="radio"/> Inherit from vSwitch

Add Cancel


6. Click **Add**.
7. In the **Port groups** tab, click **Data port group** and verify that it is connected to the **Data Network**.

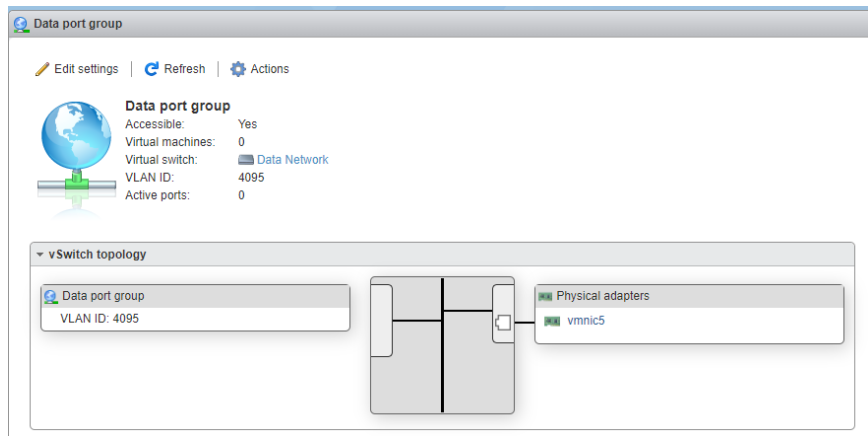

## Creating a virtual machine in VMware ESXi

### Procedure

1. Click **Virtual machines** and then click **Create / Register VM**.
2. On the **Select creation type** screen, click **Create a new virtual machine** and then click **Next**.

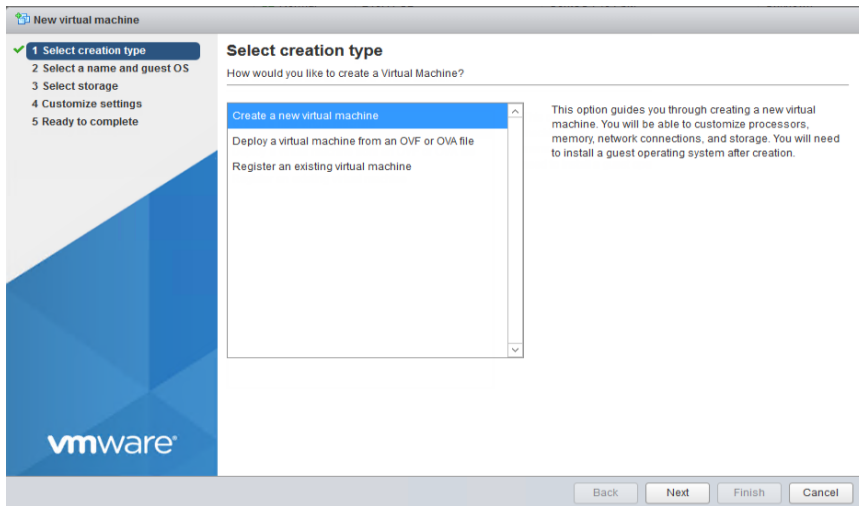

3. On the **Select a name and guest OS** screen, configure the settings.
  - a. For **Name**, type **New Virtual Machine**.
  - b. For **Compatibility**, select **ESXi 7.0**.
  - c. For **Guest OS family**, select **Linux**.
  - d. For **Guest OS version**, select **CentOS 7 (64-bit)**.

New virtual machine - New Virtual machine (ESXi 7.0 U1 virtual machine)

1 Select creation type  
**2 Select a name and guest OS**  
 3 Select storage  
 4 Customize settings  
 5 Ready to complete

### Select a name and guest OS

Specify a unique name and OS

Name

Virtual machine names can contain up to 80 characters and they must be unique within each ESXi instance.

Identifying the guest operating system here allows the wizard to provide the appropriate defaults for the operating system installation.

Compatibility

Guest OS family

Guest OS version

Back Next Finish Cancel

4. Click **Next**.
5. On the **Select storage screen**, select the destination storage where the virtual machine resides and click **Next**.

New virtual machine - New Virtual machine (ESXi 7.0 U1 virtual machine)

1 Select creation type  
 2 Select a name and guest OS  
**3 Select storage**  
 4 Customize settings  
 5 Ready to complete

### Select storage

Select the storage type and datastore

Standard  Persistent Memory


Select a datastore for the virtual machine's configuration files and all of its' virtual disks.

Name	Capacity	Free	Type	Thin pro...	Access
datastore1	6.42 TB	5.9 TB	VMFS6	Supported	Single

1 Items


Back Next Finish Cancel

6. Configure the settings on the **Customize settings** screen.
  - a. For **CPU**, select the CPU amount based on the throughput of your Virtual Deep Discovery Inspector license.
    - For 250 or 500 Mbps throughput, select at least **6 CPUs**
    - For 1000 Mbps throughput, select at least **12 CPUs**
  - b. For **Memory**, select at least **32 GB** of memory for the virtual machine.
  - c. For **Hard disk**, select the hard disk size based on the throughput of your Virtual Deep Discovery Inspector license.
    - For 250 or 500 Mbps throughput, select at least **500 GB**
    - For 1000 Mbps throughput, select at least **1000 GB**
  - d. For **SCSI Controller 0**, select **LSI Logic Parallel**.
  - e. For **Network**, configure the amount of NICs based on the throughput of your Virtual Deep Discovery Inspector license.
    - For 250 or 500 Mbps throughput, configure at least 2 NICs
    - For 1000 Mbps throughput, configure at least 3 NICs
    1. Set the VMware ESXi server **VM Network** as the Deep Discovery Inspector Management Network (NIC 1).
    2. Set the **Data port group** as the Deep Discovery Inspector Data Network (NIC 2).

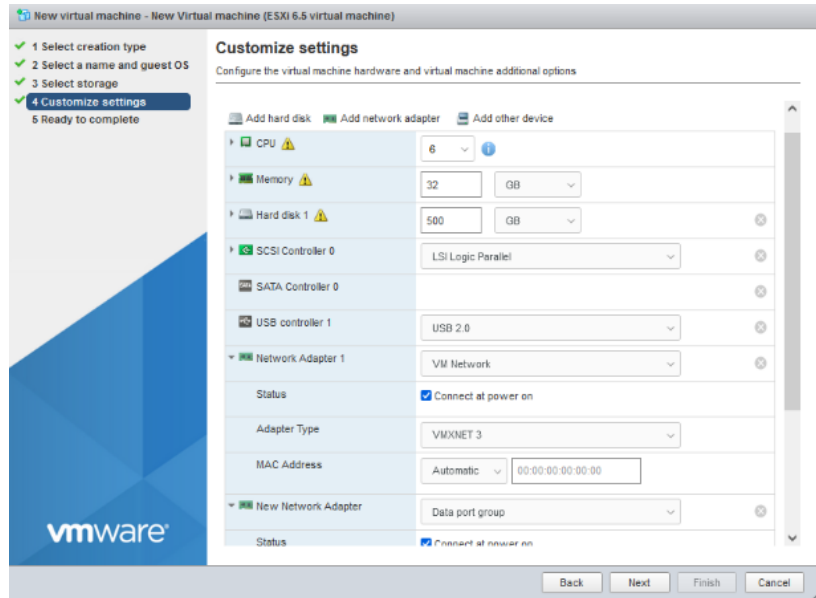**Note**

Trend Micro recommends using the VMXNET 3 network adapter on ESXi 7.0 or 8.0.


- Click **Next**.
- On the **Ready to complete** screen, review the settings and click **Finish**.

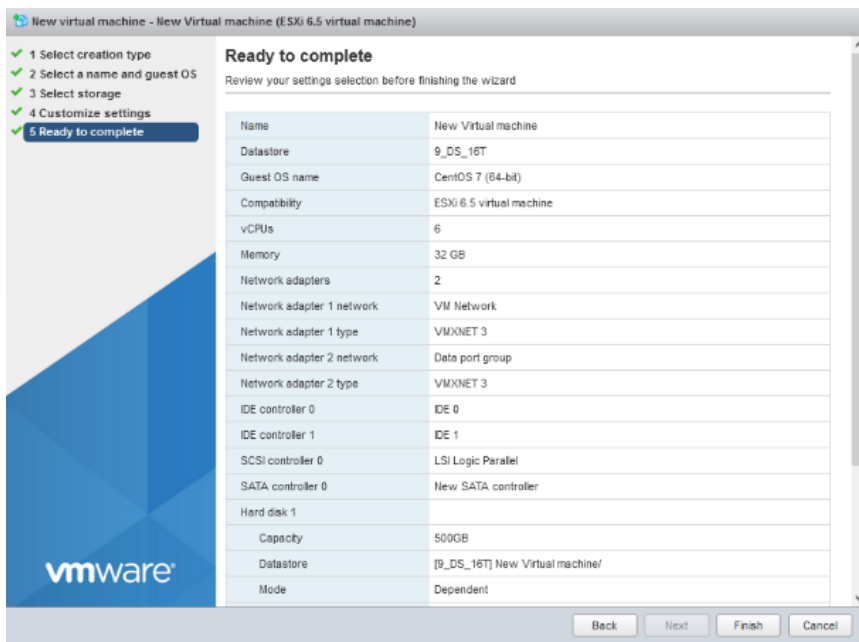

9. Enable hardware-assisted virtualization in the VMware Sphere Web Client.

For details, see [Enabling hardware-assisted virtualization in VMware ESXi on page 7-13](#).

10. In the VMWare vSphere web client, right-click the virtual machine and select **Edit Settings**.
11. Go to **VM Options > Boot Options**.
12. Ensure **Firmware** is set to **BIOS**.

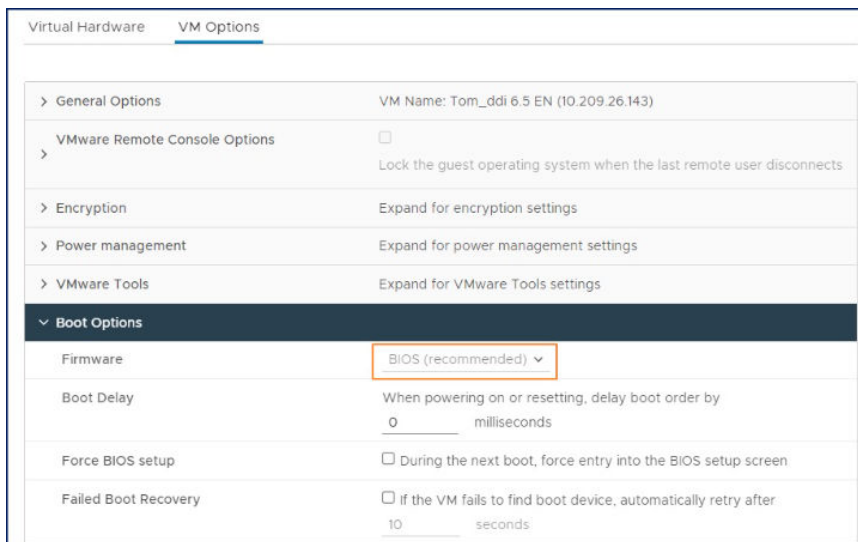

## Enabling hardware-assisted virtualization in VMware ESXi

### Procedure

1. Verify that Virtualization Technology (VT) is enabled on the VMware host.



#### Tip

The Virtualization Technology setting is typically in the BIOS settings and the location varies based on the system vendor. The feature may be named AMD-V, VT, VT-x, Vanderpool Technology, Virtualization Technology, VMX, or Virtual Machine Extensions.

2. In the VMware vSphere Web Client, right-click the virtual machine and select **Edit Settings**.
3. On to the **Virtual Hardware** tab, expand **CPU**.

4. Enable **Expose hardware-assisted virtualization to guest OS**.
  5. Click **OK**.
- 

## Create a Microsoft Hyper-V virtual appliance

Learn how to create a virtual appliance using Microsoft Hyper-V in the following topics:

- [Creating a virtual machine in Microsoft Hyper-V on page 7-14](#)
- [Configure traffic mirroring in Microsoft Hyper-V on page 7-36](#)

## Creating a virtual machine in Microsoft Hyper-V

---



### Important

Deep Discovery Inspector virtual appliances installed on a Microsoft Hyper-V virtual machines do not support UEFI generation 2.

---




### Important

Deep Discovery Inspector only supports installation on Hyper-V virtual machines running on Windows Server 2019 or 2022.


---

## Procedure

1. Create virtual management and data switches.
  - a. In Hyper-V Manager, go to **Action > Virtual Switch Manager**.  
The **Virtual Switch Manager** window appears.

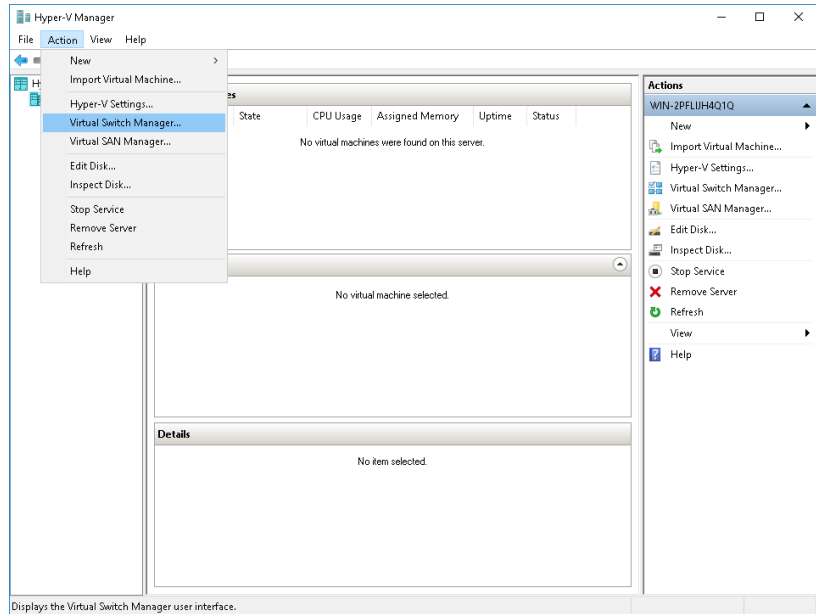


- b.** In the left column, click **New Virtual network switch**.  
The **Create virtual switch** screen appears.
- c.** For the switch type to create, select **External**.

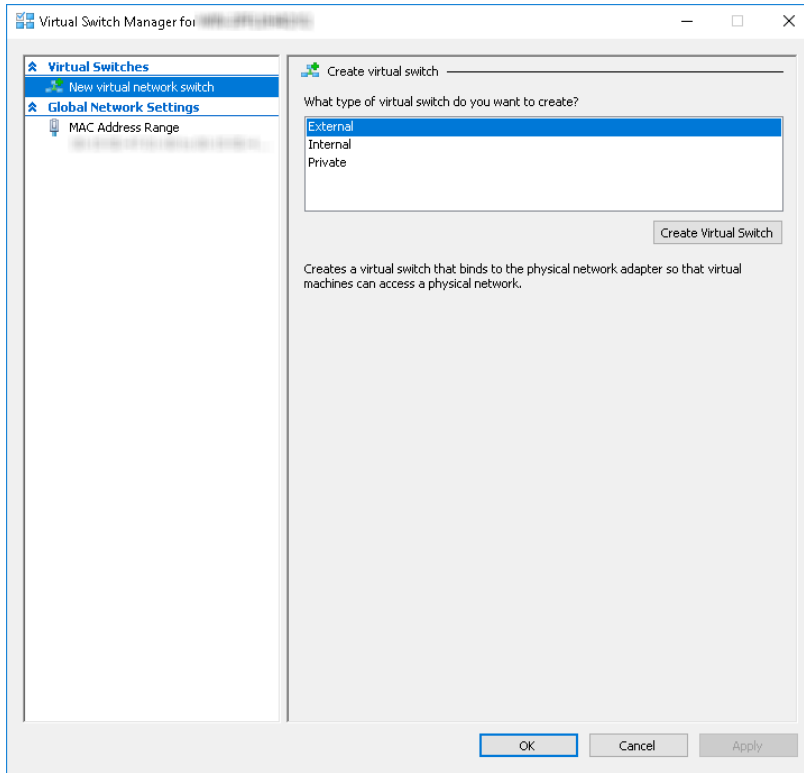

- d. Click **Create Virtual Switch**.


The **Virtual Switch Properties** screen appears.

- e. For **Name**, type **Management Switch**.
- f. For **Connection type**, select **External Network** and then select a NIC card to use for the management network.

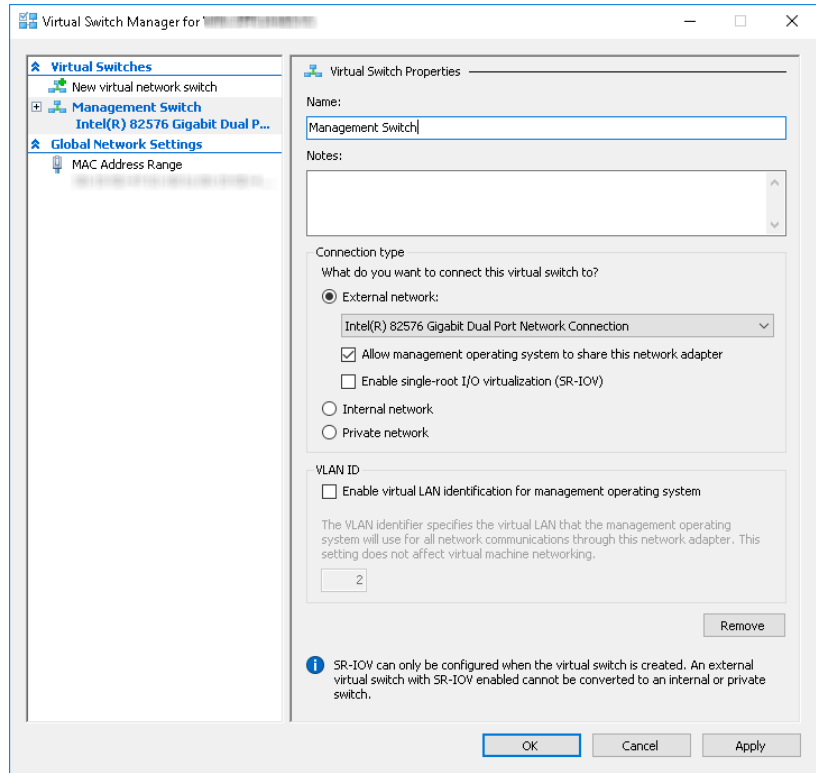


g. Click **Apply**.

The **Apply Networking Changes** confirmation window appears.

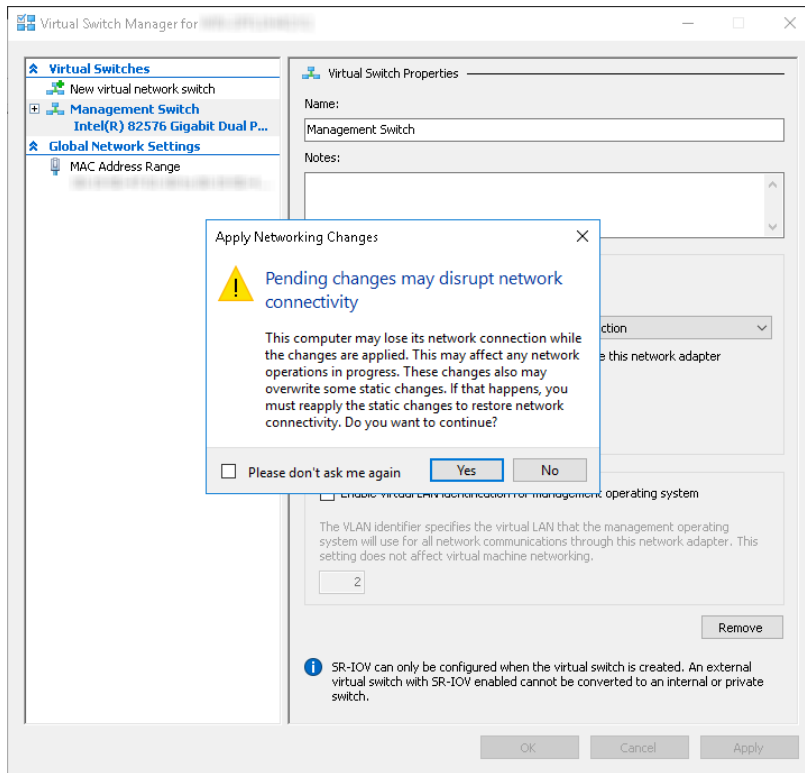


- h. Read the warning and then click **Yes**.
- i. In the left column, click **New Virtual network switch**.  
The **Create virtual switch** screen appears.
- j. For the switch type to create, select **External**.
- k. Click **Create Virtual Switch**.  
The **Virtual Switch Properties** screen appears.
- l. For **Name**, type **Data Switch**.
- m. For **Connection type**, select **External Network** and then select a NIC card to use for the data network.

- n. Click **Apply**.  
The **Apply Networking Changes** confirmation window appears.
  - o. Read the warning and then click **Yes**.  
The confirmation window closes.
  - p. Click **OK**.
2. Create a virtual machine.
- a. In Hyper-V Manager, go to **Action > New > Virtual Machine**.

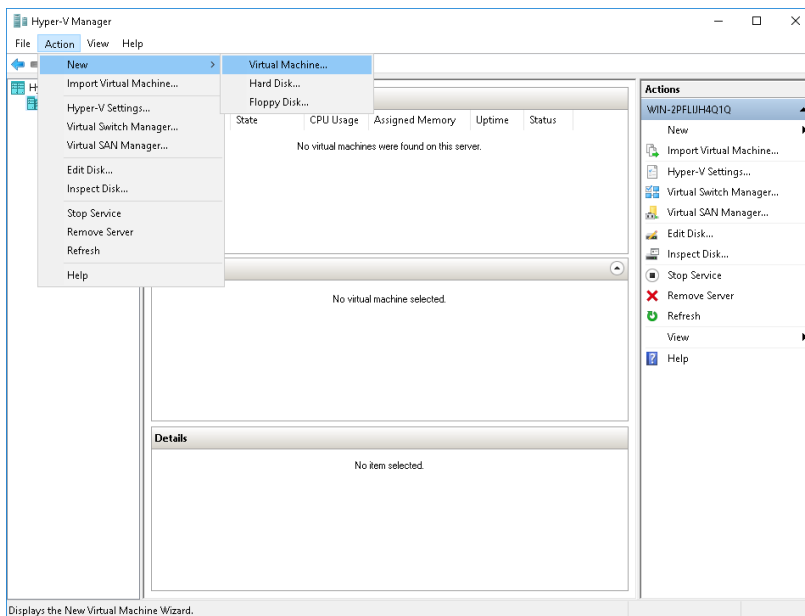

The **New Virtual Machine Wizard** window with the **Before You Begin** screen appears.


- b. Click **Next**.  
The **Specify Name and Location** screen appears.
- c. For **Name**, type **Deep Discovery Inspector**.

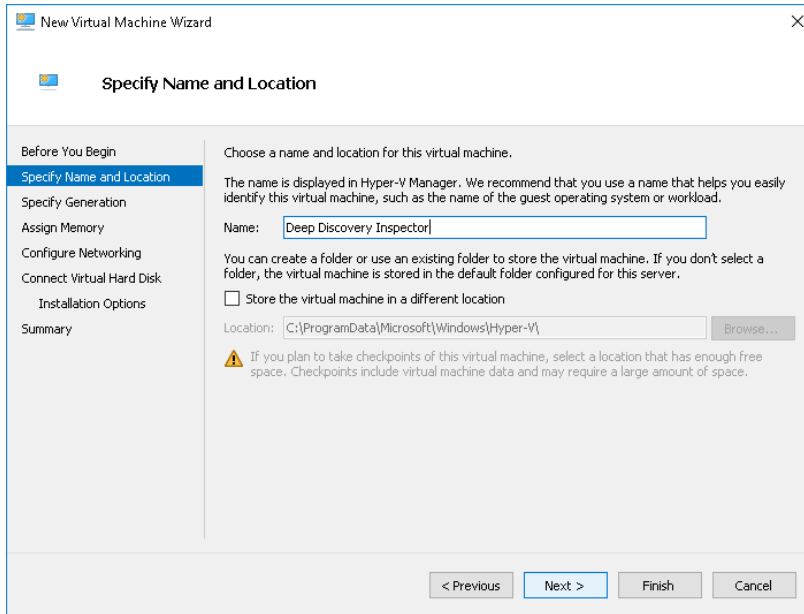

d. Click **Next**.

The **Specify Generation** screen appears.


e. Select **Generation 1**.

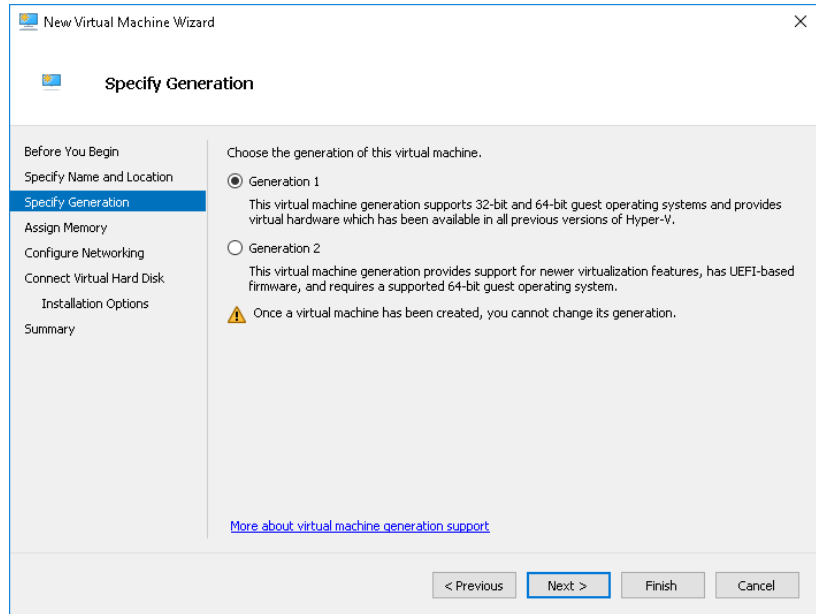

f. Click **Next**.

The **Assign Memory** screen appears.


g. For **Startup memory**, assign at least **32768 MB** (32 GB).

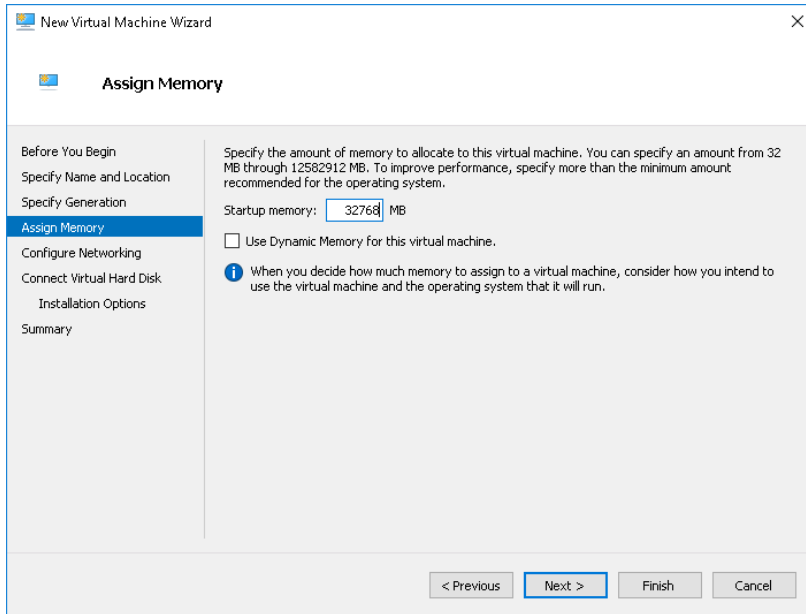

**h.** Click **Next**.

The **Configure Networking** screen appears.


**i.** For **Connection**, select **Management Switch**.

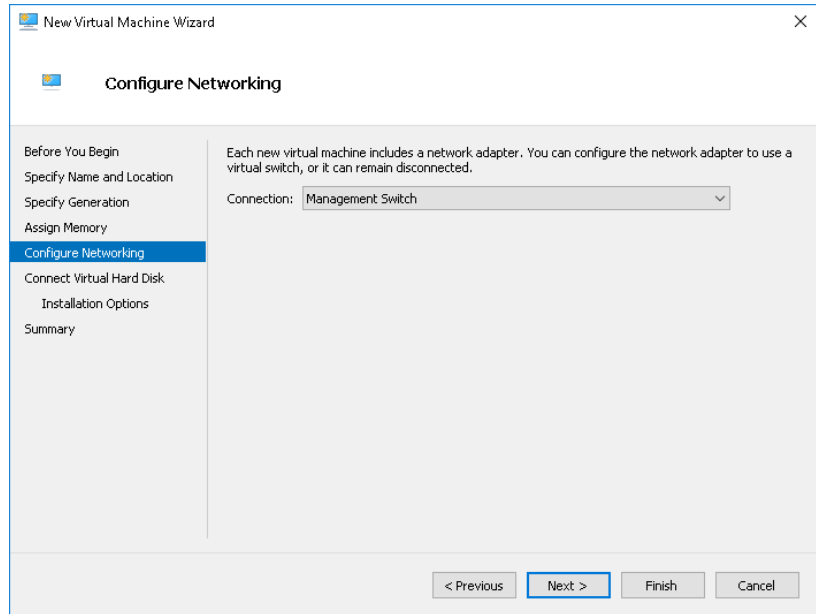

**j.** Click **Next**.

The **Connect Virtual Hard Disk** screen appears.

**k.** Select **Attach a virtual hard disk later**.

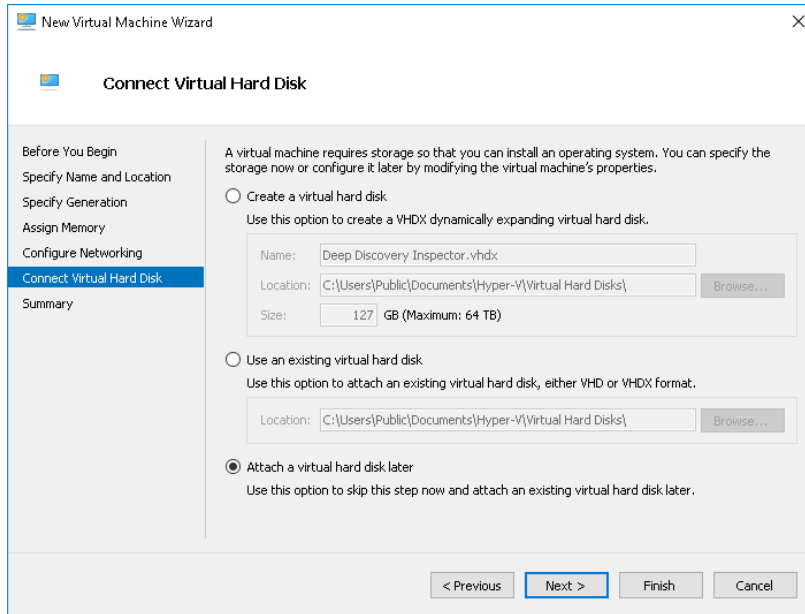


**l.** Click **Next**.

The **Completing the New Virtual Machine Wizard** screen appears.

**m.** Verify that the virtual machine configuration is correct and then click **Finish**.

**3.** Create a virtual hard disk.

**a.** In Hyper-V Manager, select the Deep Discovery Inspector virtual machine and then go to **Action > New > Hard Disk**.

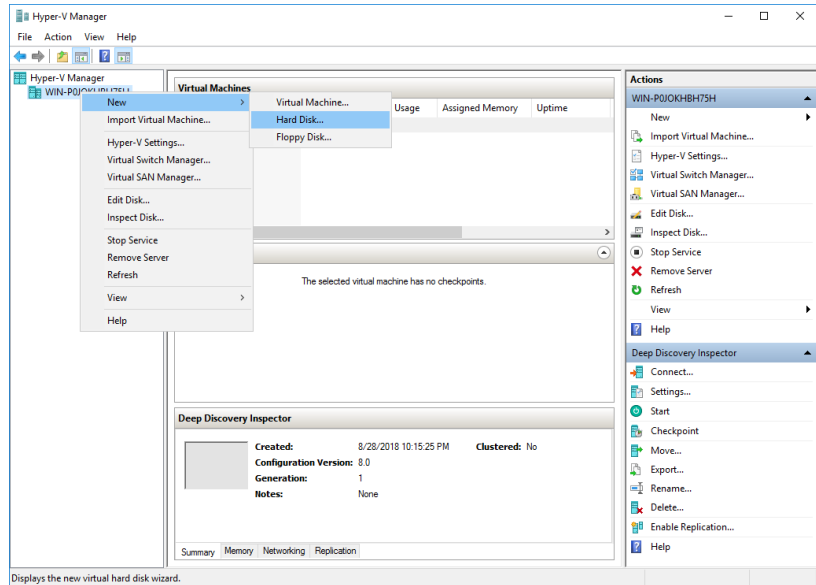


The **New Virtual Hard Disk Wizard** window with the **Before You Begin** screen appears.

b. Click **Next**.

The **Choose Disk Format** screen appears.


c. Select **VHDX**.

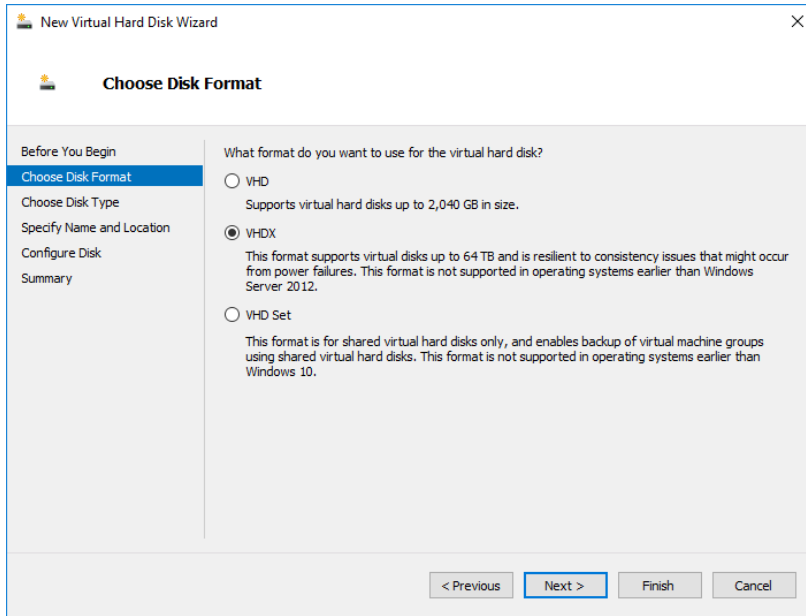

d. Click **Next**.

The **Choose Disk Type** screen appears.


e. Select **Fixed size**.

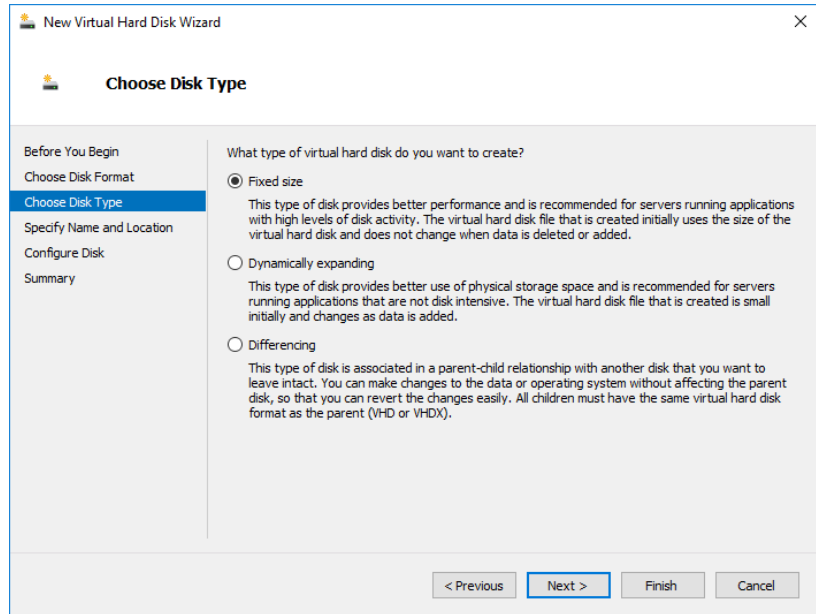

f. Click **Next**.

The **Specify Name and Location** screen appears.

g. For **Name**, type `Deep Discovery Inspector.vhdx`.

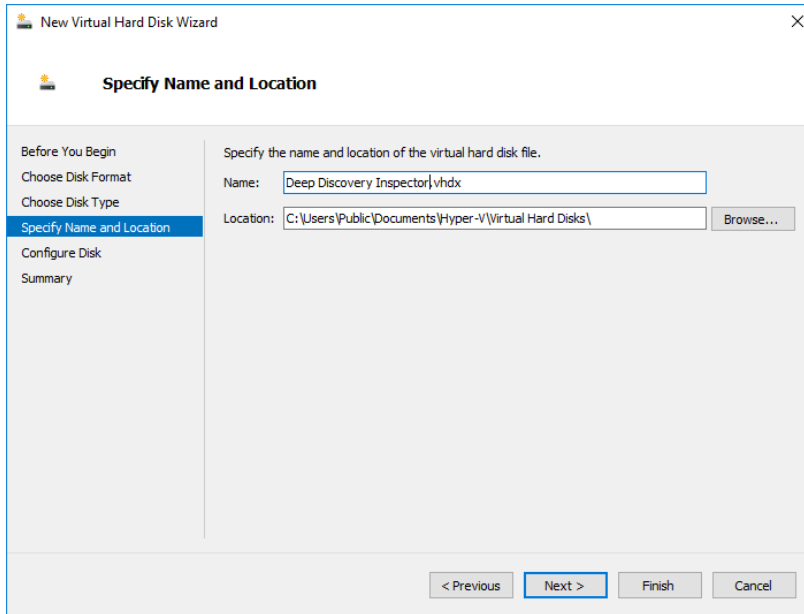


**h.** Click **Next**.

The **Configure Disk** screen appears.

**i.** Select **Create a New blank virtual hard disk**.

**j.** For **Size**, specify the following based on your Deep Discovery Inspector model.

- For the 250 or 500 Mbps throughput models, specify at least **500 GB**.
- For the 1000 Mbps throughput model, specify at least **1000 GB**.

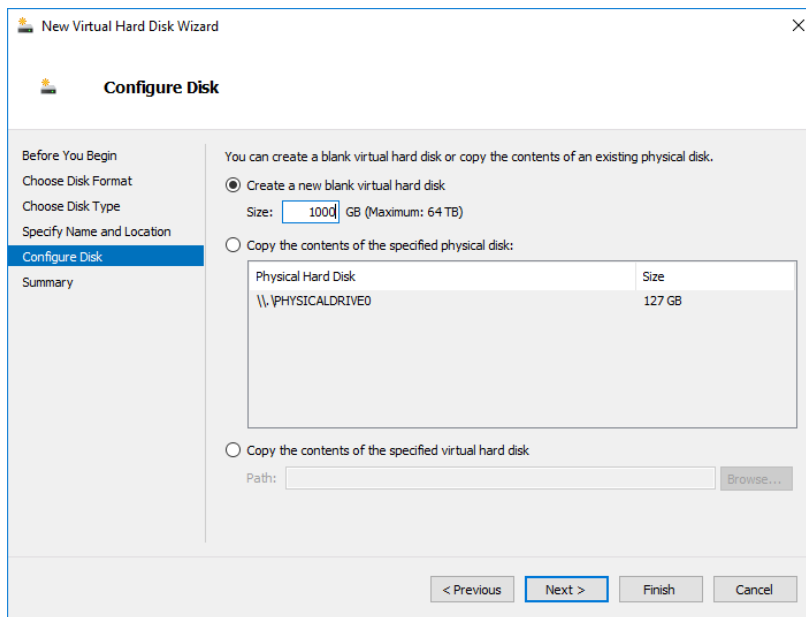

- k. Click **Next**.


The **Completing the New Virtual Hard Disk Wizard** screen appears.

- l. Verify that the hard disk configuration is correct and then click **Finish**.

**Note**

Finishing may take a few minutes. Wait for the process to complete before continuing.

4. Configure the virtual machine.
  - a. In Hyper-V Manager, select the Deep Discovery Inspector virtual machine and then go to **Action > Settings**.

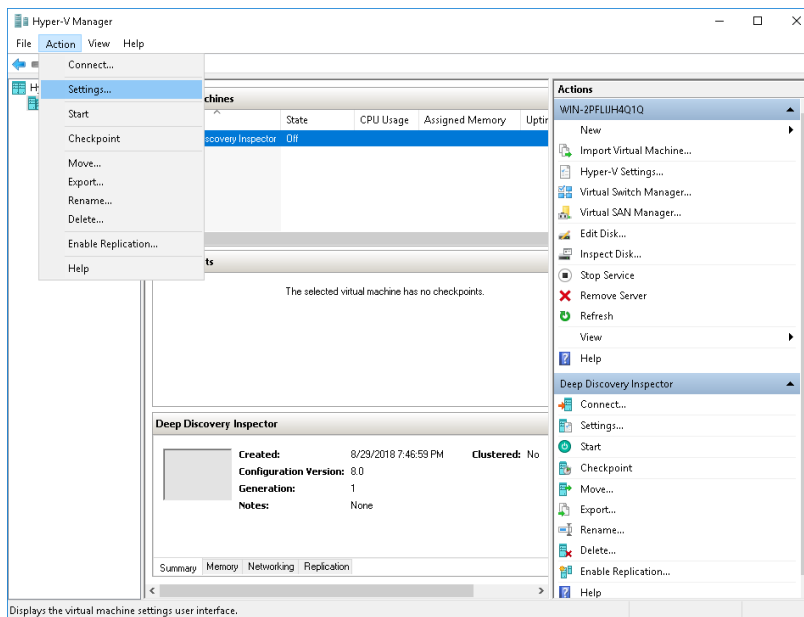


The settings window appears.


- b. In the left column, click **Processor**.

The **Processor** settings appear.

- c. For Number of virtual processors, specify the following based on your Deep Discovery Inspector model.
- For the 250 or 500 Mbps throughput models, specify at least **6** virtual processors.
  - For the 1000 Mbps throughput model, specify at least **12** virtual processors.

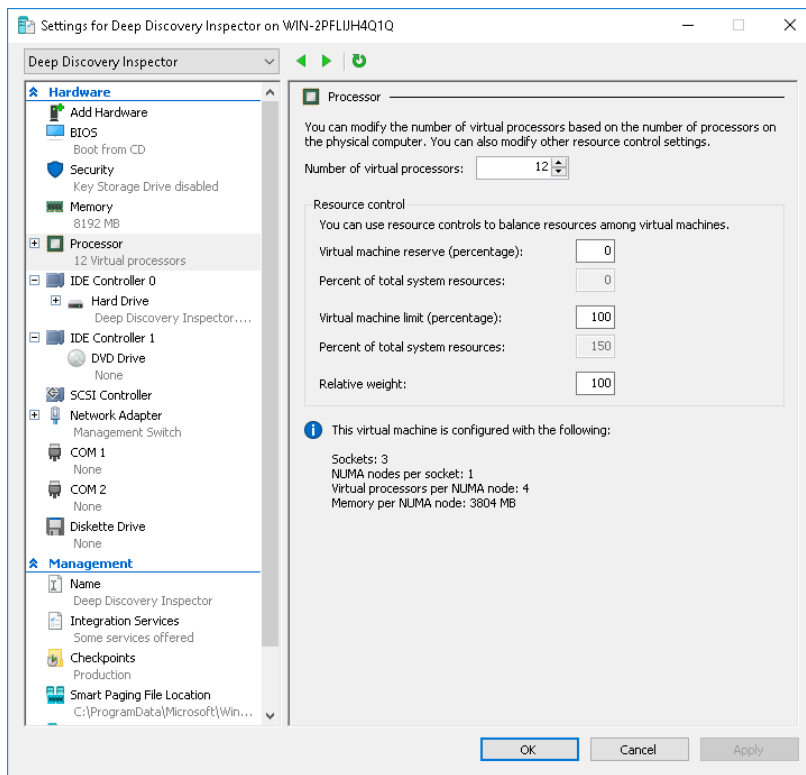


- d. Click **Apply**.
- e. In the left column, click **IDE Controller 0**.  
The **IDE Controller** settings appear.
- f. For the type of hard drive to attach to the controller, select **Hard Drive**.

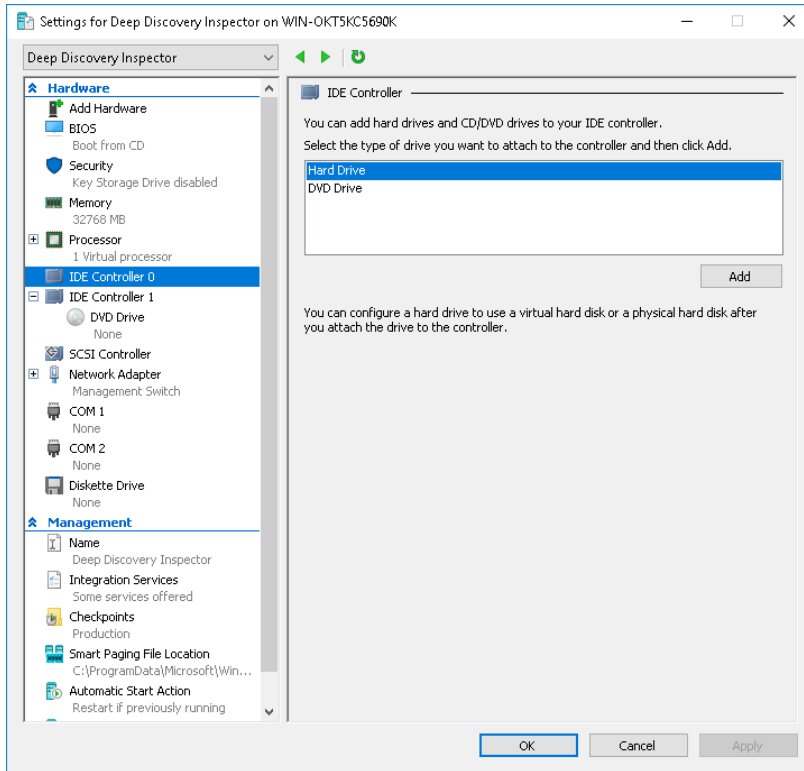

g. Click **Add**.

The **Hard Drive** settings appear.


h. For **Virtual hard disk**, specify the location of **Deep Discovery Inspector.vhdx**.

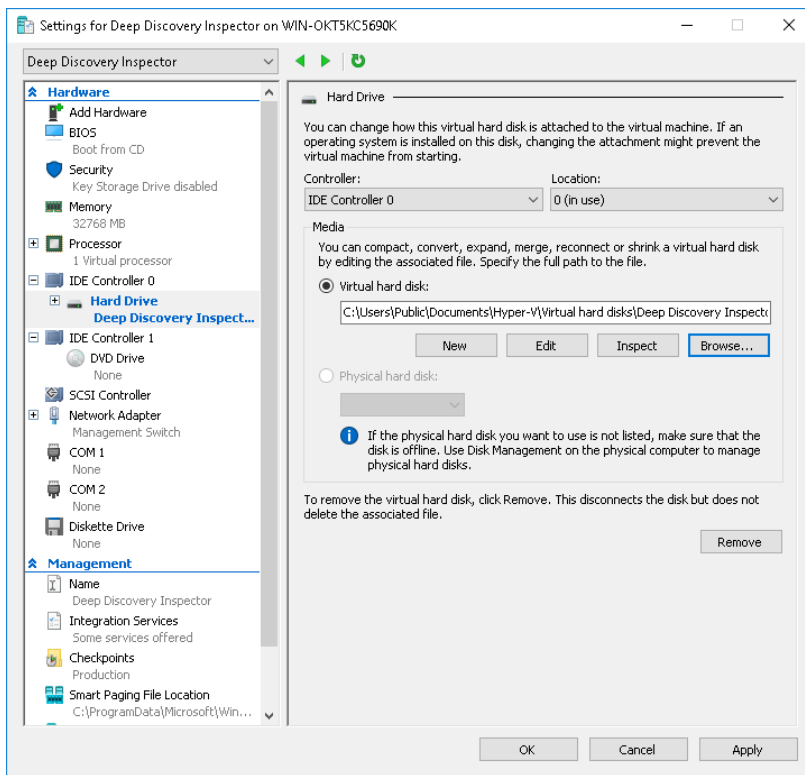


- i. In the left column, click **IDE Controller 1** and then click on **DVD Drive**.

The **DVD Drive** settings appear.

- j. For **Media**, select **Image file** and then specify the location of the Deep Discovery Inspector ISO file.

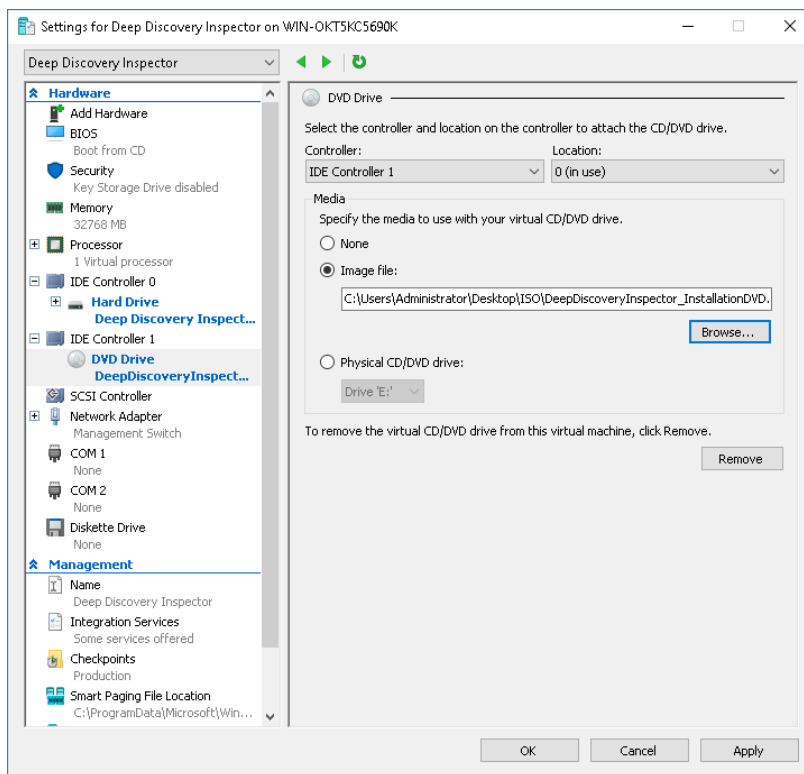


- k. In the left column, click **Add Hardware**.  
The **Add Hardware** settings appear.
- l. For the devices you want to add, select **Network Adapter**.

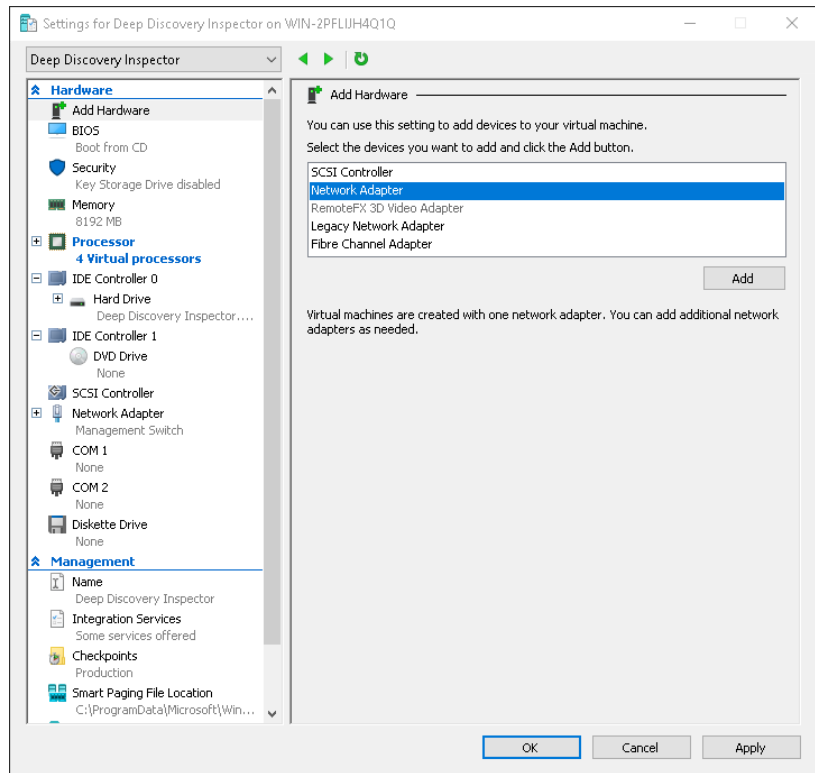

m. Click **Add**.

The **Network Adapter** settings appear.

n. For **Virtual switch**, select **Data Switch**.

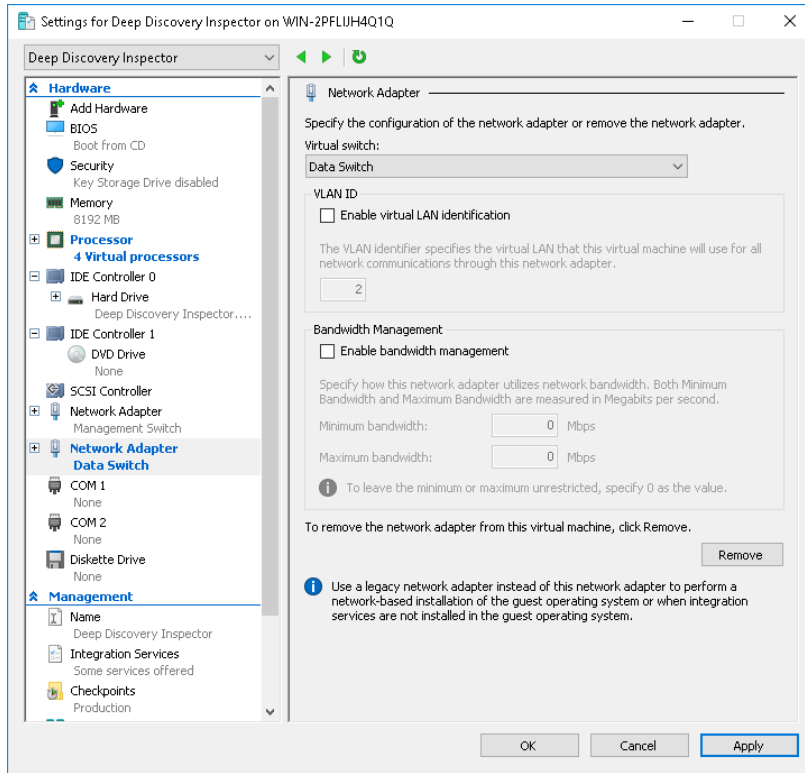

- o.** Click **Apply**.
  - p.** Click **OK**.
- 5.** Configure the Hyper-V network for mirroring.

For details, see [Configuring internal VM traffic mirroring in Microsoft Hyper-V on page 7-39](#) and [Configuring external traffic mirroring in Microsoft Hyper-V on page 7-37](#).

## Configure traffic mirroring in Microsoft Hyper-V

Learn how to enable the capture of external and internal VM traffic in the following topics:

- [Configuring external traffic mirroring in Microsoft Hyper-V on page 7-37](#)
- [Configuring internal VM traffic mirroring in Microsoft Hyper-V on page 7-39](#)

## Configuring external traffic mirroring in Microsoft Hyper-V

Perform the follow steps on the Deep Discovery Inspector host to enable the capture of external mirrored traffic.

### Procedure

1. On the Hyper-V host, run the following commands in Powershell to configure the monitor mode of the Data Switch.

```
$DataSwitch = "Data Switch"
$extFeature = Get-VMSystemSwitchExtensionPortFeature `
    -FeatureName "Ethernet Switch Port Security Settings"
$extFeature.SettingData.MonitorMode = 2
Add-VMSwitchExtensionPortFeature `
    -ExternalPort -SwitchName $DataSwitch `
    -VMSwitchExtensionFeature $extFeature
```

2. Run the following commands in Powershell to verify that the settings are configured correctly.


```
$extFeature = Get-VMSwitchExtensionPortFeature `
    -ExternalPort -SwitchName $DataSwitch `
    -FeatureName "Ethernet Switch Port Security Settings"
$extFeature.SettingData.MonitorMode
```

If configured correctly, the resulting output is **2** to indicate that the port mirroring mode is **source**.

3. Configure the monitor mode of the VM Network Adapter.
  - a. In Hyper-V Manager, click on the Deep Discovery Inspector VM and then go to **Action > Settings**.

The settings window appears.

- b. Expand **Data Switch** and then click **Advanced Features**.
- c. For **Mirroring mode**, select **Destination**.

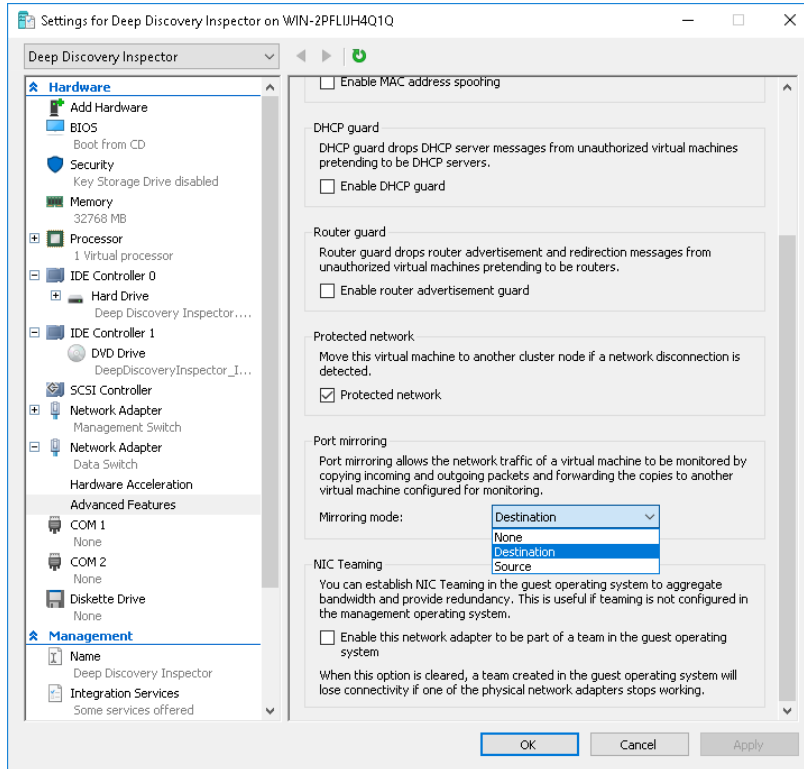

- d. Click **OK**.
4. Run the following commands in Powershell to configure the VLAN mode of the Data Switch.

```
$VMName = "Deep Discovery Inspector"
$DataSwitch = "Data Switch"
Get-VMNetworkAdapter -VMName $VMName |
? SwitchName -eq "$DataSwitch" |
```

```
% { Set-VMNetworkAdapterVlan -VMNetworkAdapter $_ `
  -Trunk -AllowedVlanIdList 1-4094 -NativeVlanId 0 }
```

5. (Optional) Run the following commands in Powershell to configure the jumbo MTU setting on the physical adapter and prevent dropped network packets.



#### Note

For the `$NetAdapter` value, use the name of the physical network adapter on the Hyper-V host.

```
$NetAdapter = "Ethernet0"
Get-NetAdapterAdvancedProperty -Name $NetAdapter `
  -RegistryKeyword "*jumbopacket" |
Set-NetAdapterAdvancedProperty -RegistryValue 4088
```

6. Start the virtual machine and verify that the traffic is mirrored and detected.

## Configuring internal VM traffic mirroring in Microsoft Hyper-V

Perform the follow steps on the Deep Discovery Inspector host to enable the capture of mirrored traffic from a VM on the same host.

### Procedure

1. In Hyper-V Manager, click on the Deep Discovery Inspector virtual machine and then go to **Action > Settings**.  
The settings window appears.
2. In the left column, click **Add Hardware**.  
The **Add Hardware** settings appear.
3. For the devices you want to add, select **Network Adapter**.
4. Click **Add**.

The **Network Adapter** settings appear.

5. For **Virtual switch**, select **Management Switch**.
6. In the left column, expand **Management Switch** and then click **Advanced Features**.
7. For **Mirroring mode**, select **Destination**.
8. Click **OK**.
9. In Hyper-V Manager, click on the virtual machine that is on the same host as Deep Discovery Inspector and then go to **Action > Settings**.

The settings window appears.

10. In the left column, expand **Management Switch** and then click **Advanced Features**.
  11. For **Mirroring mode**, select **Source**.
  12. Click **OK**.
  13. Start the Deep Discovery Inspector virtual machine and verify that the traffic is mirrored and detected.
-

# Chapter 8

## Installation on a virtual appliance

Learn the steps for installing Deep Discovery Inspector as a virtual appliance in the following sections.

## Configuring options

Set the following options to enable Deep Discovery Inspector management console navigation.

- *Setting JavaScript options for Google Chrome on page 8-2*
- *Setting JavaScript options for Mozilla Firefox on page 8-2*
- *Setting options for virtual appliance in ESXi on page 8-3*

### Setting JavaScript options for Google Chrome

---

#### Procedure

1. On the browser, go to **Settings**.
  2. Click **Show advanced settings...**
  3. Under **Privacy**, click **Content settings...**
  4. Under **JavaScript**, click **Allow all sites to run JavaScript (recommended)**.
  5. Click **Done**.
- 

### Setting JavaScript options for Mozilla Firefox

---

#### Procedure

1. For Firefox versions lower than 23, do the following.
  - a. On the browser, go to the **Options > Content** tab.
  - b. Verify that **Enable JavaScript** is selected.
  - c. Click **OK**.
2. For Firefox version 23 or higher, do the following.
  - a. In the address bar, type `about:config` and press ENTER.

- b. Click **I'll be careful, I promise!**.
- c. Verify that the **Value** of **Preference Name javascript.enabled** is set to **true**.

---


## Setting options for virtual appliance in ESXi

The following steps apply to the supported versions of ESXi. For details, see [Requirements for a virtual machine in VMware ESXi on page 7-2](#).

---

### Procedure

1. Go to **VMware ESXi > Virtual Machines**, and right-click the appliance name and select **Edit Settings....**  
The settings screen appears.
2. On the **Settings** screen, click the **VM Options** tab and select **VMware Tools**.
3. Disable the **Synchronize guest time with host** option.

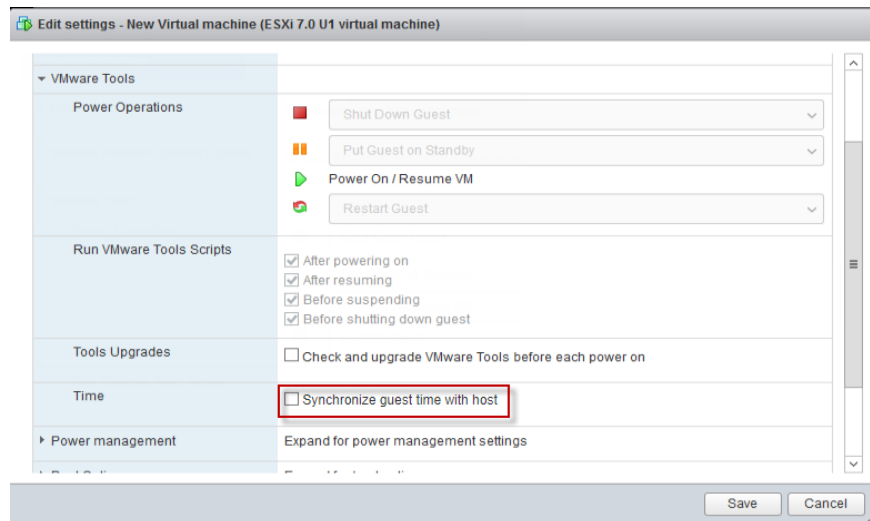

## Deep Discovery Inspector virtual appliance installation

You can install Deep Discovery Inspector on:

- VMware ESXi 7.0 or 8.0

You must obtain a separate license for VMware ESXi. Your usage is subject to the terms and conditions outlined in the VMware license agreement specific to that product.

- Microsoft Hyper-V on Windows Server 2019 or 2022
- KVM

---

### Procedure

1. Download the Deep Discovery Inspector ISO from the Business Success Portal at <https://success.trendmicro.com/dcx/s/license>.
2. Back up any pre-existing data on the target hard drive before installing Deep Discovery Inspector.

The installation process formats and repartitions the hard drive and removes all existing data.



#### Tip

If you are reinstalling Deep Discovery Inspector, you can back up your current settings by going to **Administration > System Maintenance > Backup / Restore** in the Deep Discovery Inspector management console.

---

3. Create a virtual machine.

For details, see [Create a new virtual appliance on page 7-1](#).

When installing Deep Discovery Inspector on a VMware ESXi server, disable the snapshot feature for the virtual appliance to preserve hard disk space.

4. Configure the virtual machine to boot from the Deep Discovery Inspector ISO.

5. Start the virtual machine.

The installation screen appears.

```
=====
Trend Micro Deep Discovery Inspector
Installation DVD
=====

Welcome to Deep Discovery Inspector

(1) Start the installation process
(2) Automatically evaluate and mirror network environment setup.

Type a number and press [ENTER].
The installation proceeds with the default option (1) if there is no option
chosen after 15 seconds.
```

6. Press ENTER.



**Important**

When installing Deep Discovery Inspector through a serial connection, type `serial` and press ENTER

---

The **System Information** screen appears.

```
===== System Information =====
Platform: VMware, Inc. VMware Virtual Platform
BIOS: Phoenix Technologies LTD 6.00 (12/12/2018)
CPU: GenuineIntel Unknown 2600 MHz x 4
MEMORY: 8 GB
NIC: 3
=====

===== Main Menu =====
(0) Show system information
(1) Show NIC information
(2) Install Deep Discovery Inspector
(3) System requirements check is currently enabled. Press 3 to disable.
(4) Installation log will not be exported before reboot. Press 4 if you want to
export logs.
(5) Reboot

Type a number and press ENTER:
```

7. For trial deployments, type **3** and press **ENTER** to skip the system requirements check.




**Note**

By default, the installer checks system requirements before installing Deep Discovery Inspector to confirm that the appliance has the necessary resources to run the product.

8. If you need to obtain installation logs for troubleshooting, type **4** and press **ENTER**.
9. Start the installation by typing **2** and pressing **ENTER**.

The **Management Port Selection** screen appears.

Deep Discovery Inspector automatically detects the active link cards (indicated by `Link UP`) available for use as a management port.

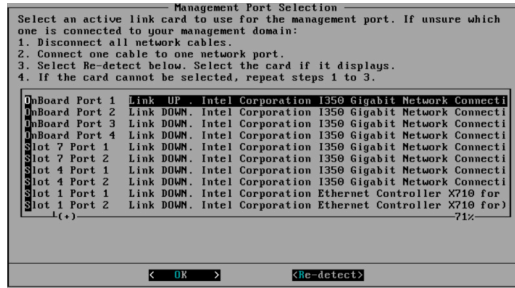

**FIGURE 8-1. Management Port Selection**

10. Verify that the network port status and the actual port status match.

If a status conflict exists, select **Re-detect** and press ENTER.

11. Check which active link card connects to the management domain by doing the steps listed on the **Management Port Selection** screen.
12. Select an active link card and press ENTER.

The installation continues and completes.

13. If you enabled installation log export on the **System Information** screen, save the installation logs.

- a. Select a storage device and press ENTER.

If your storage device is not listed, Go to **Re-detect** and press **ENTER** to refresh the list.

- b. When the installation log file name appears, press ENTER.

Record the file name for future reference. The file name uses the following format:

```
install.log.YYYY-MM-DD-hh-mm-ss
```



**Tip**

Trend Micro recommends saving exported installation logs to **sda11**.

---

The system automatically restarts and the Preconfiguration Console appears. If used, the installation DVD ejects from the CD/DVD drive.

14. (Optional) Remove the DVD to prevent reinstallation.
15. Configure the Deep Discovery Inspector network settings.
  - Access the preconfiguration console and change the device settings.  
For details, see [Preconfiguration on page 10-1](#).
  - Open the management console and change the appliance IP settings.

For details, see the *Get Started* chapter of the *Deep Discovery Inspector Administrator's Guide*.

---

**Next steps**

See the *Deep Discovery Inspector Administrator's Guide* for details about configuring and administering Deep Discovery Inspector.

## Chapter 9

# Port mirroring on a VMware virtual distributed switch

Deep Discovery Inspector can monitor mirrored traffic using virtual distributed switches. Learn how to create a virtual distributed switch and configure Deep Discovery Inspector virtual appliances to monitor mirrored traffic in the following sections.

- *[Creating a VMware vSphere distributed switch \(VDS\) on page 9-2](#)*
- *[Deep discovery inspector virtual appliance with a VDS on page 9-5](#)*

## Creating a VMware vSphere distributed switch (VDS)

---

### Procedure

1. Create a new virtual distributed switch.
  - a. Log in to the vSphere Web Client.
  - b. Click **Networking**.
  - c. In the left panel, select your data center.
  - d. In the right panel, click the **Create a new distributed switch** icon.  
The **New Distributed Switch** window appears.
  - e. Type a name for the switch and then click **Next**.
  - f. Select the distributed switch version and then click **Next**.
  - g. For **Number of uplinks**, set at least **2** if your SPAN traffic is on a dedicated NIC. Otherwise, set this value to **1**.



#### Note

Trend Micro recommends using a dedicated NIC.

---

- h. For **Network I/O Control**, select one of the following options.
  - **Disabled:** If your SPAN traffic on a dedicated NIC.



#### Note

Trend Micro recommends using a dedicated NIC.

---

- **Enabled:** If your SPAN traffic is on the same NIC as your monitored traffic.
- i. Uncheck **Create a default port group**.
  - j. Click **Next**.



- a. Right-click the virtual switch you created in the previous steps, and then select **Add and Manage Hosts**.

The **Add and Manage Hosts** window appears.

- b. For **Select task**, select **Add host and manage host networking (advanced)**.
- c. Click **Next**.
- d. For **Select hosts**, click + **New hosts** to add managed ESXi hosts.
- e. Click **Next**.
- f. For **Select network adapter tasks**, add a checkmark to **Manage physical adapters** and **Migrate virtual machine networking**.
- g. Click **Next**.
- h. For **Manage physical network adapters**, manage the physical network adapters according to your network environment.
- i. Click **Next**.
- j. For **Analyze impact**, specify **No impact**.
- k. Click **Next**.
- l. For **Migrate VM networking**, migrate the VM networking according to your network environment.
- m. Click **Next**.
- n. For **Ready to complete**, click **Finish**.

The **Add and Manage Hosts** window closes.

- o. Click the virtual switch you created in the previous steps, click the **Configure** tab, and then click **Topology** to verify the virtual switch topology that you configured.
-

## Deep discovery inspector virtual appliance with a VDS



Deep Discovery Inspector virtual appliances can monitor mirrored virtual distributed switch traffic that is inside and outside virtual environments. Learn about the requirements and how to configure Deep Discovery Inspector and the virtual distributed switch in the following sections.

- [Requirements for virtual appliances with a VDS on page 9-5](#)
- [Virtual appliance - monitoring mirrored external network traffic using a VDS on page 9-7](#)
- [Virtual appliance - monitoring mirrored VM traffic from a VDS on page 9-14](#)

### Requirements for virtual appliances with a VDS

The following table describes the minimum physical NIC requirements for Deep Discovery Inspector virtual appliances.

**TABLE 9-1. Virtual Appliance Physical NIC Requirements**

TRAFFIC SOURCE	REMOTE MIRRORING	ENCAPSULATED REMOTE MIRRORING	DISTRIBUTED PORT MIRRORING
External network traffic	The destination ESXi host requires a 1 Gbps Ethernet network port as an uplink	<p>The destination ESXi host requires a 1 Gbps Ethernet network port as an uplink</p> <hr/> <p> <b>Note</b> The port must be routable from the encapsulated remote mirroring source.</p>	Not supported
VM network traffic	Each ESXi host requires a 1 Gbps Ethernet network port as an uplink	<p>The destination ESXi host requires a 1 Gbps Ethernet network port as an uplink</p> <hr/> <p> <b>Note</b> The port must be routable from the other ESXi host management VMkernel port.</p>	No physical port requirement


## Virtual appliance - monitoring mirrored external network traffic using a VDS

Deep Discovery Inspector virtual appliances can monitor mirrored traffic using a virtual distributed switch with encapsulated remote mirroring or remote mirroring. Learn how to configure Deep Discovery Inspector and the network devices in the following sections.

- [Virtual appliance - configuring mirrored external network traffic monitoring with encapsulated remote mirroring on page 9-8](#)
- [Virtual appliance - configuring mirrored external network traffic monitoring with remote mirroring on page 9-10](#)

## Virtual appliance - configuring mirrored external network traffic monitoring with encapsulated remote mirroring

Encapsulated Remote Mirroring enables you to monitor traffic on multiple network interfaces or VLANs and send the monitored traffic to one or more destinations.

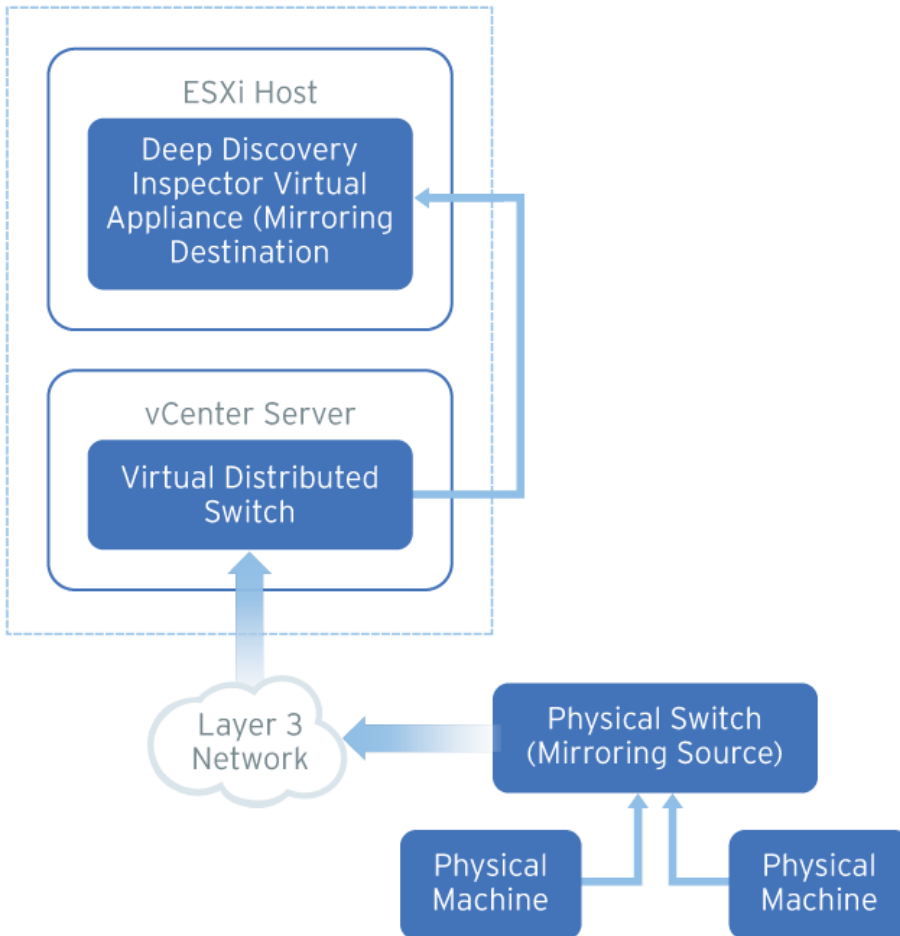

**FIGURE 9-1. Mirrored External Network Traffic Monitoring with Encapsulated Remote Mirroring**

By default, encapsulated remote mirroring on the virtual switch uses the management VMkernel port of the ESXi host as the encapsulation source IP address.

In the steps below, the mirroring source and mirroring destination are the following:

- Mirroring source: Physical switch that forwards mirrored traffic
- Mirroring destination: Deep Discovery Inspector

---


## Procedure

1. Configure the mirroring source to forward encapsulated remote mirrored traffic.




### Important

Ensure that switch is able to route traffic to the encapsulated remote mirroring destination IP address that you configure on Deep Discovery Inspector in the next step.

2. Configure the mirroring destination to receive encapsulated remote mirrored traffic.
    - a. In the Deep Discovery Inspector console, go to **Administration > System Settings > Network Interface**.  
The **Network Interface** screen appears.
    - b. Locate a data port, and then click the right arrow (  ) at the beginning of the row.
    - c. Select **Encapsulated Remote Mirroring**.
    - d. Specify the encapsulated remote mirroring destination address.
    - e. Click **Save**.
-

## Virtual appliance - configuring mirrored external network traffic monitoring with remote mirroring

Remote mirroring enables you to monitor traffic on one switch through a device on another switch and send the monitored traffic to one or more destinations.

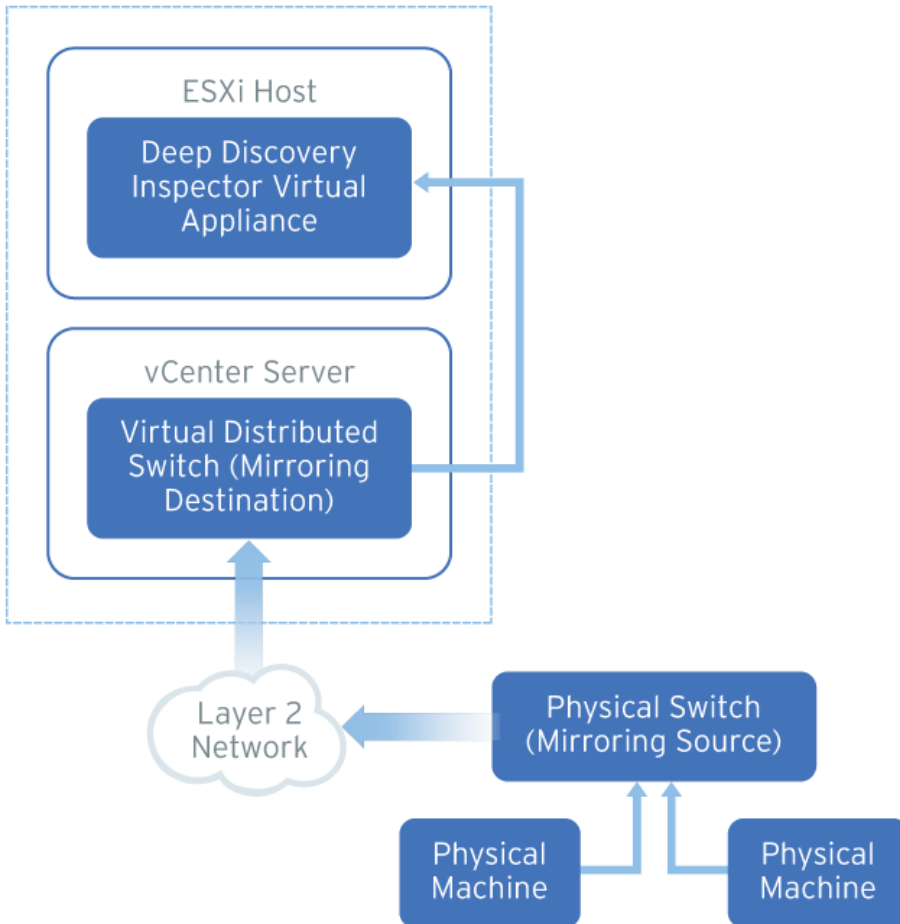

**FIGURE 9-2. Mirrored External Network Traffic Monitoring with Remote Mirroring**

Remote mirroring requires that you configure a remote mirroring VLAN on your physical switches. If you cannot configure a remote mirroring VLAN, consider using encapsulated remote mirroring as an alternative.

In the steps below, the mirroring source and mirroring destination are the following:

- Mirroring source: Physical switch that forwards mirrored traffic to the virtual distributed switch
- Mirroring destination: Virtual distributed switch that receives mirrored traffic


Before you begin, verify that the uplink ports of the ESXi hosts that receive traffic are linked to the physical switch trunk port.

---

### Procedure


1. Configure the mirroring source to forward mirrored traffic to the mirroring destination.
2. Configure the mirroring destination receive mirrored traffic.
  - a. Log in to the vSphere Web Client.
  - b. Select your virtual distributed switch in the left column and then click **Configure**.
  - c. Click **Port Mirroring**.

The **Port mirroring** screen appears.

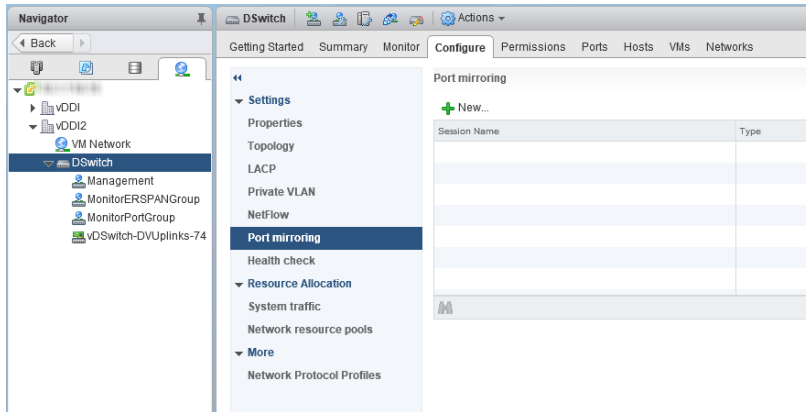

d. Click **New...**

The **Add Port Mirroring Sessions** window appears.

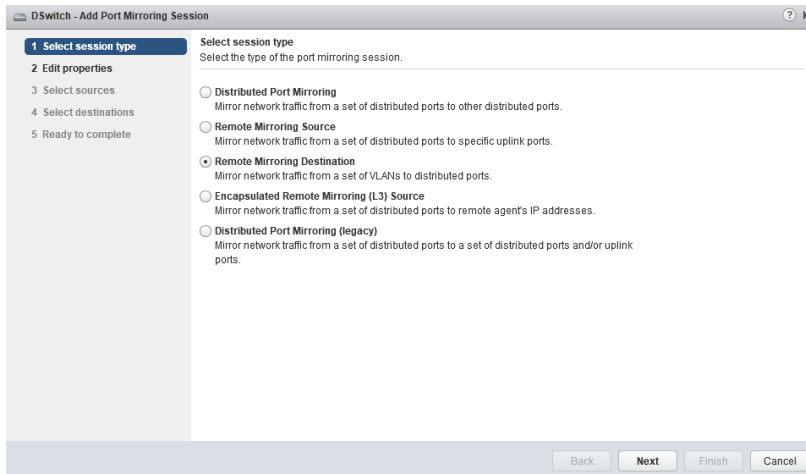

e. Select **Remote Mirroring Destination**.

f. Click **Next**.

The **Edit properties** screen appears.

DSwitch - Add Port Mirroring Session

1 Select session type

2 Edit properties

3 Select sources

4 Select destinations

5 Ready to complete

Edit properties  
Specify a name and the properties of the port mirroring session.

Name: rsan

Status: Enabled

Session type: Remote Mirroring Destination

Advanced properties

Normal I/O on destination ports: Disallowed

Mirrored packet length (Bytes):  Enable 60

Sampling rate: 1


Description:

Back Next Finish Cancel

- g. In **Name**, type a session name.
  - h. For **Status**, select **Enabled**.
  - i. Click **Next**.
- The **Select sources** screen appears.
- j. Click the plus icon to add the VLAN ID that you want to monitor.

**Note**

This is the remote mirroring VLAN ID configured on the VDS.

- k. Click **Next**.
- The **Select destinations** screen appears.
- l. Click the plus icon  
(  
  
 ) to add the port ID of the Deep Discovery Inspector data port.
  - m. Click **Next**.

The **Ready to complete** screen appears.

- n. Verify that the settings are correct and then click **Finish**.
- 

## Virtual appliance - monitoring mirrored VM traffic from a VDS

Deep Discovery Inspector virtual appliances can monitor mirrored traffic from the same ESXi host that contains Deep Discovery Inspector or different ESXi hosts. Learn how to configure Deep Discovery Inspector and the virtual distributed switch in the following sections.

- [Virtual appliance - monitoring mirrored traffic from different ESXi hosts on page 9-14](#)
- [Virtual appliance - monitoring mirrored traffic from the same ESXi host on page 9-26](#)


## Virtual appliance - monitoring mirrored traffic from different ESXi hosts

Deep Discovery Inspector virtual appliances can monitor mirrored VM traffic from a different ESXi hosts using encapsulated remote mirroring or remote mirroring. Learn how to configure Deep Discovery Inspector and the virtual distributed switch in the following sections.

- [Virtual appliance - configuring mirrored VM traffic monitoring with encapsulated remote mirroring on page 9-15](#)
- [Virtual appliance - configuring mirrored VM traffic monitoring with remote mirroring on page 9-20](#)

### Virtual appliance - configuring mirrored VM traffic monitoring with encapsulated remote mirroring

Encapsulated Remote Mirroring enables you to monitor traffic on multiple network interfaces or VLANs and send the monitored traffic to one or more destinations.

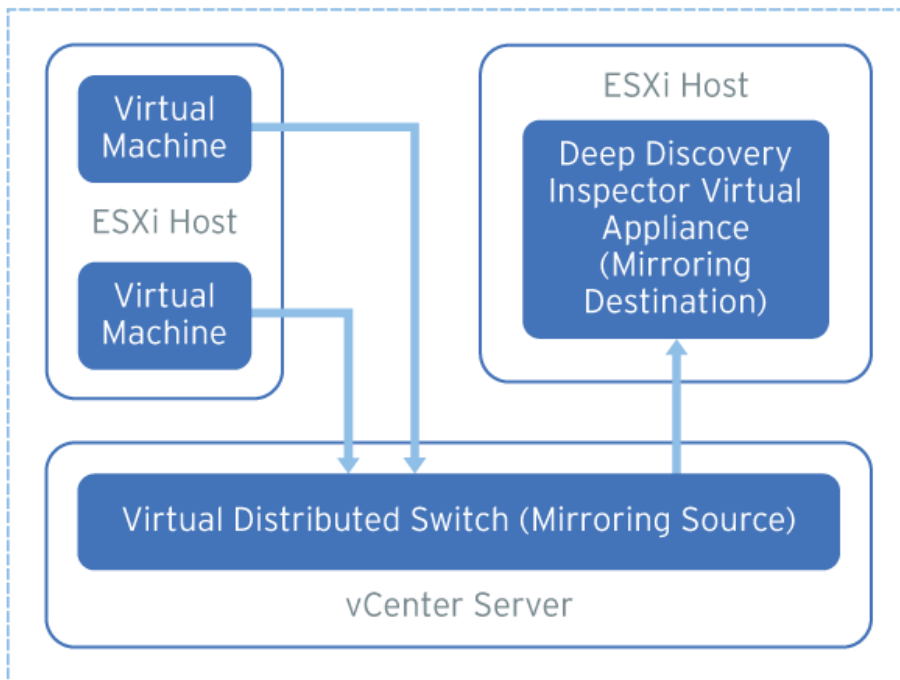

**FIGURE 9-3. Mirrored VM Traffic Monitoring with Encapsulated Remote Mirroring**

By default, encapsulated remote mirroring on the virtual switch uses the management VMkernel port of the ESXi host as the encapsulation source IP address.

In the steps below, the mirroring source and mirroring destination are the following:


- Mirroring source: Virtual distributed switch that forwards mirrored traffic
- Mirroring destination: Deep Discovery Inspector

---

## Procedure

1. Configure the mirroring source to forward encapsulated remote mirrored traffic.
  - a. Log in to the vSphere Web Client.
  - b. Select your virtual distributed switch in the left column and then click **Configure**.
  - c. Click **Port Mirroring**.

The **Port mirroring** screen appears.

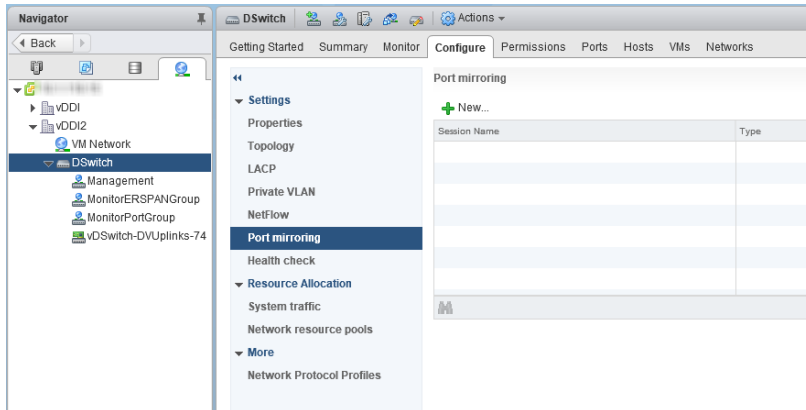

- d. Click **New...**

The **Add Port Mirroring Sessions** window appears.

The screenshot shows the 'DSwitch - Add Port Mirroring Session' dialog box. On the left, a navigation pane lists five steps: 1. Select session type (highlighted), 2. Edit properties, 3. Select sources, 4. Select destinations, and 5. Ready to complete. The main area is titled 'Select session type' and contains the instruction 'Select the type of the port mirroring session.' Below this are four radio button options: 'Distributed Port Mirroring' (disabled), 'Remote Mirroring Source' (disabled), 'Remote Mirroring Destination' (disabled), and 'Encapsulated Remote Mirroring (L3) Source' (selected). A fifth option, 'Distributed Port Mirroring (legacy)', is also present but disabled. At the bottom right, there are four buttons: 'Back', 'Next', 'Finish', and 'Cancel'.

e. Select **Encapsulated Remote Mirroring (L3) Source**.

f. Click **Next**.

The **Edit properties** screen appears.

The screenshot shows the 'DSwitch - Add Port Mirroring Session' dialog box at Step 2: 'Edit properties'. The navigation pane now shows '1 Select session type' as completed and '2 Edit properties' as the current step. The main area is titled 'Edit properties' and contains the instruction 'Specify a name and the properties of the port mirroring session.' The 'Name' field contains 'erspan'. The 'Status' is set to 'Enabled'. The 'Session type' is 'Encapsulated Remote Mirroring (L3) Source'. The 'Encapsulation type' is 'GRE'. The 'Session ID' is '0'. Under 'Advanced properties', the 'Mirrored packet length (Bytes)' checkbox is checked, with a value of '60'. The 'Sampling rate' is '1'. There is a large empty text area for 'Description'. At the bottom right, there are four buttons: 'Back', 'Next', 'Finish', and 'Cancel'.

g. In **Name**, type a session name.

- h.** For **Status**, select **Enabled**.
- i.** For **Encapsulation type**, select the encapsulation type.



**Note**

Using **ERSPAN THREE** may cause issues. Trend Micro recommends using **GRE** or **ERSPAN TWO**

---

- j.** Click **Next**.

The **Select sources** screen appears.

- k.** Click the plus icon

(



) to add the source virtual machines that you want to monitor.

- l.** Click **Next**.

The **Select destinations** screen appears.

- m.** Click the plus icon to add an IP address as a destination.



**Note**

The destination IP address is the address that you configure on Deep Discovery Inspector in the next step.

---

- n.** Click **Next**.


The **Ready to complete** screen appears.

- o.** Verify that the settings are correct and then click **Finish**.

- 2.** Configure the mirroring destination to receive encapsulated remote mirrored traffic.

- a.** In the Deep Discovery Inspector console, go to **Administration > System Settings > Network Interface**.

The **Network Interface** screen appears.

- b.** Locate a data port, and then click the right arrow (  ) at the beginning of the row.
- c.** Select **Encapsulated Remote Mirroring**.
- d.** Specify the encapsulated remote mirroring destination address.



**Important**


The encapsulated remote mirroring destination address must be routable from the management VMkernel port of the ESXi host.

---

- e.** Click **Save**.
-

## Virtual appliance - configuring mirrored VM traffic monitoring with remote mirroring

Remote mirroring enables you to monitor traffic on one switch through a device on another switch and send the monitored traffic to one or more destinations.

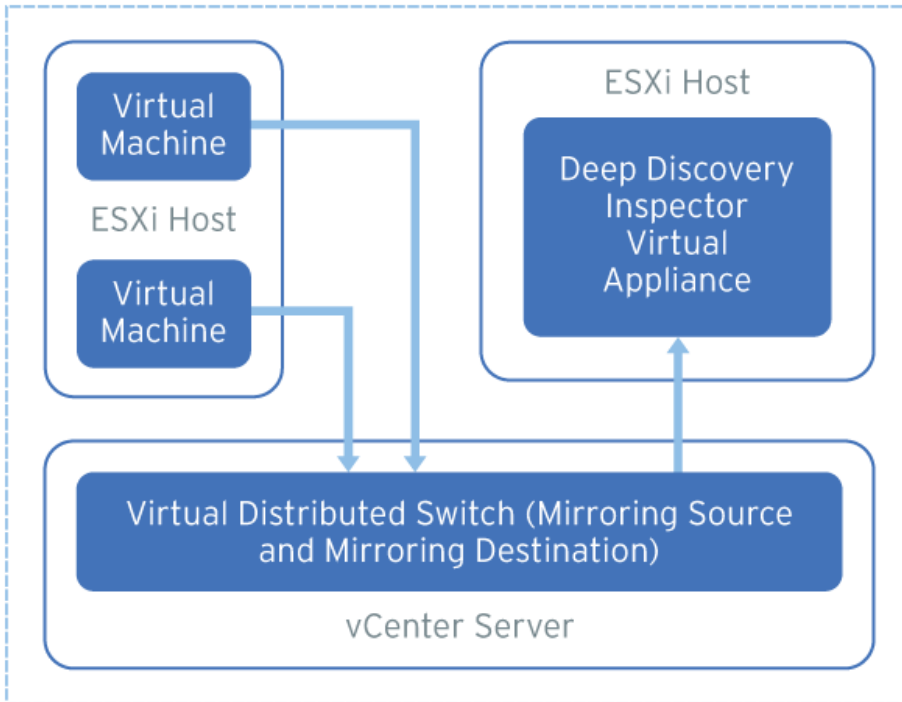

**FIGURE 9-4. Mirrored VM Traffic Monitoring with Remote Mirroring**

Remote mirroring requires that you configure a remote mirroring VLAN on your physical switches. If you cannot configure a remote mirroring VLAN, consider using encapsulated remote mirroring as an alternative.

In the steps below, the mirroring source and mirroring destination are the following:


- Mirroring source: Virtual distributed switch that forwards mirrored traffic
- Mirroring destination: Virtual distributed switch that receives mirrored traffic and that can route the traffic to Deep Discovery Inspector

Before you begin, verify that the uplink ports of the ESXi hosts that receive traffic are linked to the physical switch trunk port.

## Procedure


1. Configure the mirroring source to forward remote mirrored traffic to the destination.
  - a. Log in to the vSphere Web Client.
  - b. Select your virtual distributed switch in the left column and then click **Configure**.
  - c. Click **Port Mirroring**.

The **Port mirroring** screen appears.

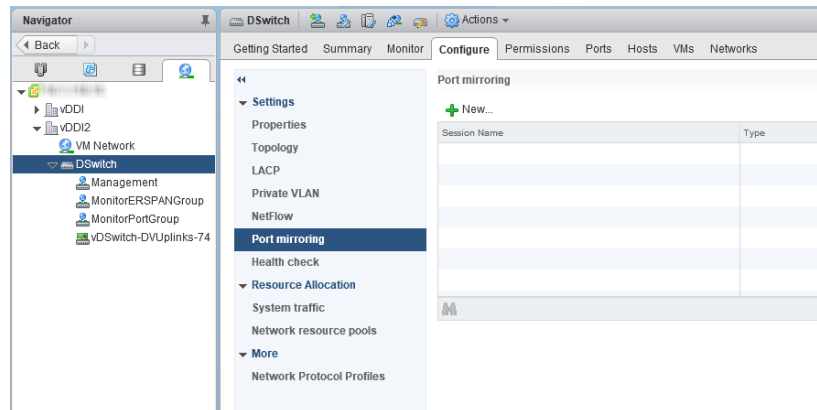

- d. Click **New...**


The **Add Port Mirroring Sessions** window appears.

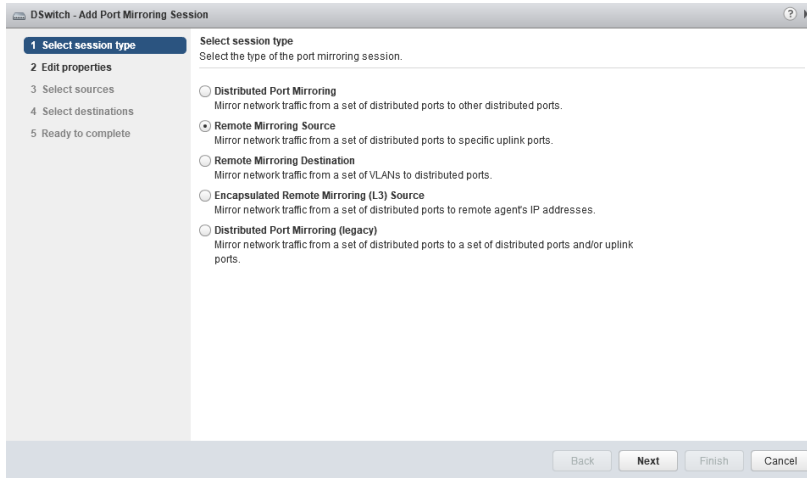

e. Select **Remote Mirroring Source**.

f. Click **Next**.

The **Edit properties** screen appears.

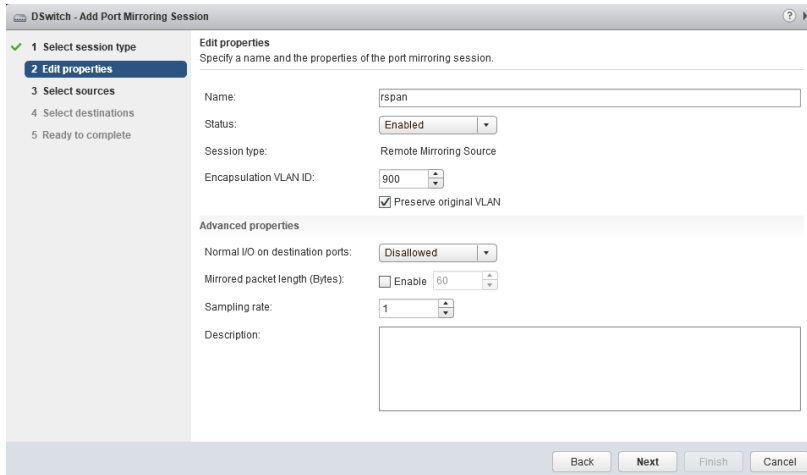


g. In **Name**, type a session name.


- h.** For **Status**, select **Enabled**.
- i.** In **Encapsulation VLAN ID**, specify the VLAN ID.

**Note**

This is the remote mirroring VLAN ID configured on the VDS.


---

- j.** Click **Next**.  
The **Select sources** screen appears.
  - k.** Click the plus icon  
(  
  
) to add the source virtual machines that you want to monitor.
  - l.** Click **Next**.  
The **Select destinations** screen appears.
  - m.** Add uplink in **Available uplinks** to **Selected uplinks**.
  - n.** Click **Next**.  
The **Ready to complete** screen appears.
  - o.** Verify that the settings are correct and then click **Finish**.
- 2.** Configure the mirroring destination to receive mirrored traffic.
- a.** Log in to the vSphere Web Client.
  - b.** Select your virtual distributed switch in the left column and then click **Configure**.
  - c.** Click **Port Mirroring**.  
The **Port mirroring** screen appears.

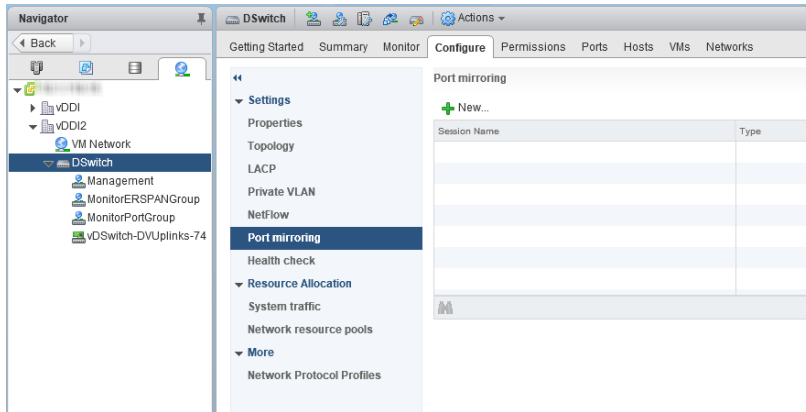

d. Click **New...**

The **Add Port Mirroring Sessions** window appears.

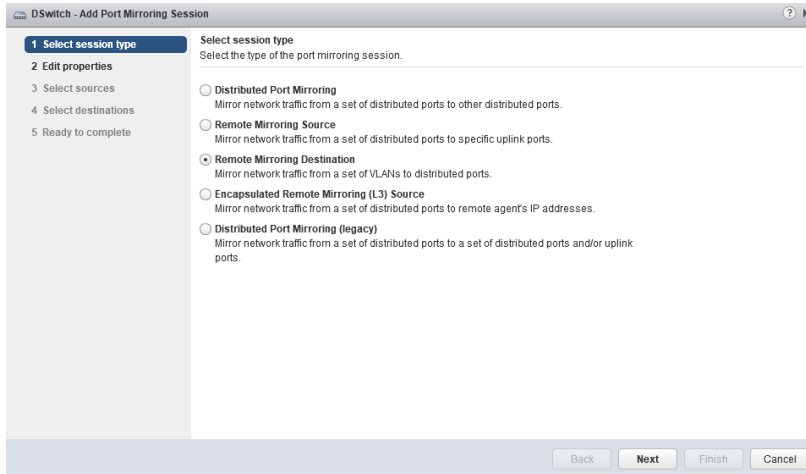

e. Select **Remote Mirroring Destination**.

f. Click **Next**.

The **Edit properties** screen appears.

DSwitch - Add Port Mirroring Session

1 Select session type

2 Edit properties

3 Select sources

4 Select destinations

5 Ready to complete

**Edit properties**  
Specify a name and the properties of the port mirroring session.

Name:

Status:

Session type: Remote Mirroring Destination

**Advanced properties**

Normal I/O on destination ports:

Mirrored packet length (Bytes):  Enable

Sampling rate:

Description:

**g.** In **Name**, type a session name.

**h.** For **Status**, select **Enabled**.

**i.** Click **Next**.

The **Select sources** screen appears.

**j.** Click the plus icon to add the VLAN ID that you want to monitor.



**Note**

This is the remote mirroring VLAN ID configured on the VDS.

**k.** Click **Next**.

The **Select destinations** screen appears.

**l.** Click the plus icon

(



) to add the port ID of the Deep Discovery Inspector data port.

**m.** Click **Next**.

The **Ready to complete** screen appears.

- n. Verify that the settings are correct and then click **Finish**.
- 


## **Virtual appliance - monitoring mirrored traffic from the same ESXi host**

Deep Discovery Inspector virtual appliances can monitor mirrored VM traffic from a same ESXi host. Learn how to configure the virtual distributed switch in the following section.

- [\*Virtual appliance - configuring distributed port mirroring on a VDS on page 9-27\*](#)

### Virtual appliance - configuring distributed port mirroring on a VDS

The distributed port mirroring for the virtual distributed switch enables you to monitor traffic from a set of distributed ports to other distributed ports.

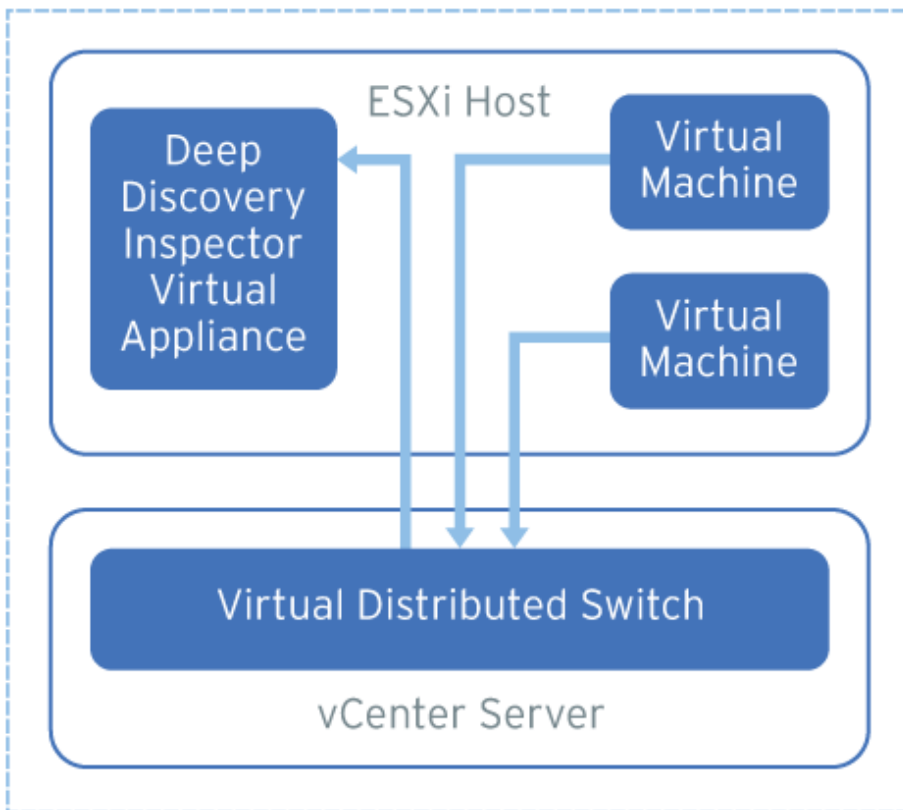


**FIGURE 9-5. Distributed Port Mirroring on a VDS**

The source virtual machines and destination Deep Discovery Inspector must be on the same ESXi host. If they are on different ESXi hosts, consider using remote mirroring or encapsulated remote mirroring as an alternative.

## Procedure


1. Log in to the vSphere Web Client.
2. Select your virtual distributed switch in the left column and then click **Configure**.
3. Click **Port Mirroring**.

The **Port mirroring** screen appears.

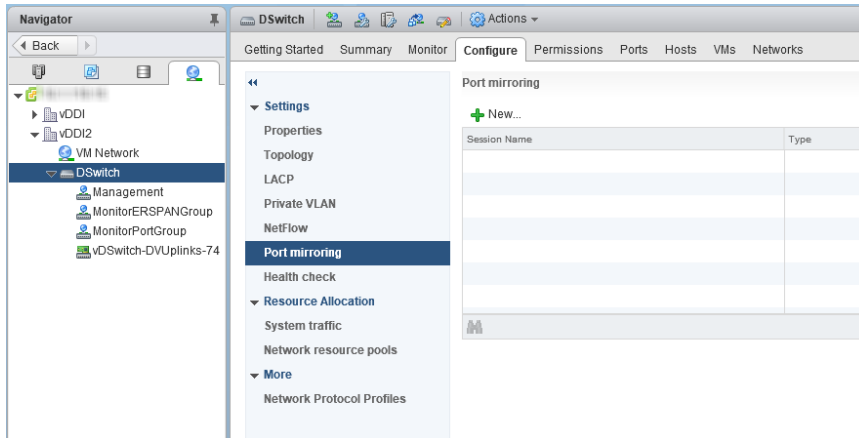

4. Click **New....**


The **Add Port Mirroring Sessions** window appears.

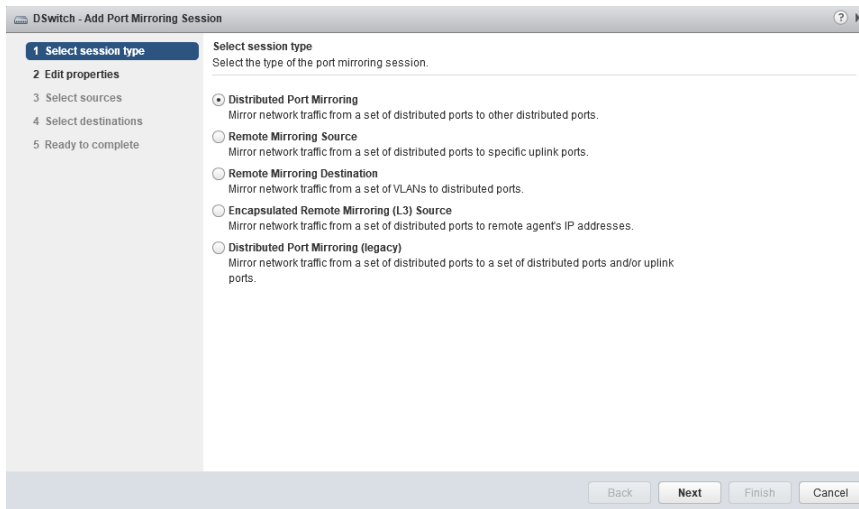

5. Select **Distributed Port Mirroring**.

6. Click **Next**.

The **Edit properties** screen appears.

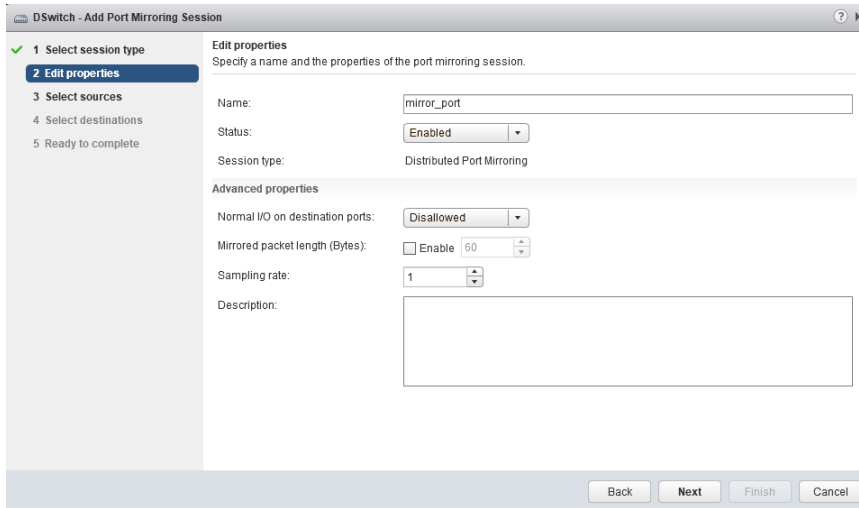

7. In **Name**, type a session name.

8. For **Status**, select **Enabled**.

9. Click **Next**.

The **Select sources** screen appears.

10. Click the plus icon

(



) to add the source virtual machines that you want to monitor.

11. Click **Next**.

The **Select destinations** screen appears.

12. Click the plus icon

(



) to add the port ID of the Deep Discovery Inspector data port.

13. Click **Next**.


The **Ready to complete** screen appears.

14. Verify that the settings are correct and then click **Finish**.

---

# **Part IV**

## **Post-installation tasks**

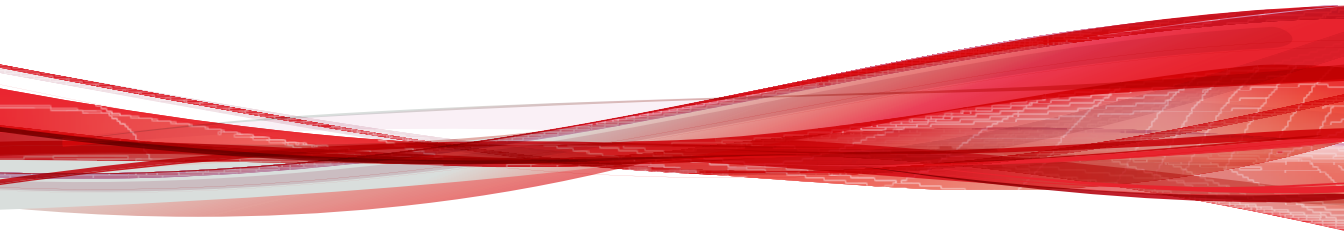



# Chapter 10

## Preconfiguration

Learn how to use the Preconfiguration Console to configure initial Deep Discovery Inspector settings in the following sections:

- *[Preconfiguration console access on page 10-2](#)*
- *[Preconfiguration console main menu on page 10-4](#)*

## Preconfiguration console

The Deep Discovery Inspector Preconfiguration Console is a terminal communications program used to configure the network and system settings that are required to access the Deep Discovery Inspector management console.

The Preconfiguration Console also supports recovery operations if the management console is not available.

Use the Preconfiguration Console to:

- Configure initial settings (product IP address and host name)
- Do a diagnostic test
- Ping the network to verify configuration
- Restart the appliance
- View device information and status
- Change the root password
- Configure manual traffic bypass (on supported hardware models)



### **Important**

To enter data when using HyperTerminal, disable the scroll lock function on your keyboard.

---

## Preconfiguration console access

The Deep Discovery Inspector Preconfiguration Console is accessible from a hardware or virtual appliance.

Access the Preconfiguration Console as follows:

- [\*Accessing the preconfiguration console with a VGA port on page 10-3\*](#)

**Tip**

Trend Micro recommends accessing the Preconfiguration Console using a monitor with a VGA port.

---

- [Accessing the preconfiguration console with a serial port on page 10-3](#)

## Accessing the preconfiguration console with a VGA port

---

### Procedure

1. Using a VGA cable, connect the monitor VGA port to the appliance VGA port.
2. When the Preconfiguration Console screen opens, type the default password `admin` and press ENTER twice.

**Note**

To enter data when using HyperTerminal, disable the scroll lock function on your keyboard.

---

## Accessing the preconfiguration console with a serial port

---

### Procedure

1. Using an RS-232 serial cable, connect the serial port of the Deep Discovery Inspector appliance to the serial port on a computer.
2. On the computer, open a serial communication application (HyperTerminal).
3. Type the following values if you are accessing the Preconfiguration Console for the first time:
  - Bits per second: `115200`
  - Data bits: `8`

- Parity: **None**
- Stop bits: **1**
- Flow control: **None**

**Note**

To enter data when using HyperTerminal, disable the scroll lock function on your keyboard.


4. When the Preconfiguration Console screen appears, type the default password **admin** and press ENTER twice.

## Preconfiguration console main menu

The Preconfiguration Console main menu displays the following menu items:

**TABLE 10-1. Main Menu Items**

ITEM	DESCRIPTION
<b>1) Device Information and Status</b>	View information about Deep Discovery Inspector and monitor memory usage.
<b>2) Device Settings</b>	Modify the Deep Discovery Inspector IP address, subnet mask, network default gateway address, and DNS servers.
<b>3) Interface Settings</b>	View the network speed and duplex mode for the management port, automatically detected by Deep Discovery Inspector.

ITEM	DESCRIPTION
<b>4) System Tasks</b>	Configure the following: <ul style="list-style-type: none"> <li>• Perform a diagnostic test</li> <li>• Ping a server in the same subnet</li> <li>• Configure the SSH connection</li> <li>• Restart the system</li> <li>• Configure manual traffic bypass (on supported hardware models)</li> </ul>
<b>5) Change Password</b>	Change the root password. <hr/> <div style="display: flex; align-items: flex-start;">  <div> <p><b>Important</b></p> <p>The Preconfiguration Console uses the US English (en-us) keyboard layout, not your physical keyboard layout. When you set a password in the Preconfiguration Console, the system registers the US keyboard character mapping.</p> <p>Certain characters are mapped differently in non-US keyboards. For example, on a UK keyboard, the quotation mark (") character is located where the at sign (@) is on a US keyboard.</p> <p>Make note of any special characters in your password to ensure you can sign in later.</p> </div> </div> <hr/>
<b>6) Log Off with Saving</b>	Log off from the Preconfiguration Console after saving changes.
<b>7) Log Off without Saving</b>	Log off from the Preconfiguration Console without saving changes.

To access a menu item, type the number for the menu item and then press ENTER.

## Viewing appliance information and status

Use the **Device Information & Status** screen to view the product name, version, and memory usage.



### Note

View memory usage information on the Deep Discovery Inspector management console. Go to **Dashboard > System Status**.

For details, see *System Status* in the *Deep Discovery Inspector Administrator's Guide*.

---

## Procedure

1. Log on to the Preconfiguration Console.

The **Main Menu** appears.

2. Type **1** to select **Device Information & Status** and press ENTER.



### Note

To enter data when using HyperTerminal, disable the scroll lock function on your keyboard.

---

The **Device Information and Status** screen appears.

3. Press ENTER to return to the main menu.
- 

## Modifying device settings

Use the **Device Settings** screen to configure the management IP address settings.



### Note

These tasks can also be performed on the management console.

---

---

## Procedure

1. Log on to the Preconfiguration Console.

The **Main Menu** appears.

2. To select **Device Settings**, type **2** and press ENTER.



### Note

To enter data when using a serial communication application (for example, HyperTerminal), disable the scroll lock function on your keyboard.

---

The **Device Settings** screen appears.

3. In the **Type** field, use the space bar to select one of the following properties:
  - **dynamic**
  - **static**
4. Configure the following IPv4 address settings:
  - a. In the **IP address** field, type an IPv4 address.  
Type a **Subnet mask**.
  - b. Type a **Gateway** IP address.
  - c. Type a **Primary** and **Secondary DNS server** IP address.
5. (Optional) Configure the following IPv6 address settings:
  - a. In the **Enable** field, select **yes**.
  - b. In the **IP address** field, type an IPv6 address.  
Type a **Subnet prefix**.
  - c. Type a **Gateway** IP address.
  - d. Type a **DNS server** IP address.

6. (Optional) Type a VLAN ID.



**Note**

The VLAN ID is used when a trunk connection is required between the Deep Discovery Inspector management port and a switch. The VLAN ID is used as a VLAN tag in 802.1Q Ethernet frame.

---

7. Go to **Return to main menu** and press ENTER.
  8. To save the settings, type **6** and press ENTER.
- 

## Modifying interface settings

By default, Deep Discovery Inspector automatically detects the network speed and duplex mode for the management port. These settings may be manually configured.



**Tip**

To maximize throughput, Trend Micro recommends full-duplex mode. Half-duplex is acceptable, but network throughput may be limited by transmission delays.

---



**Note**

You can view the network interface settings in the management console. Go to **Administration > System Settings > Network Interface**. For details, see *Network Interface* in the *Deep Discovery Inspector Administrator's Guide*.

---

### Procedure

1. Log on to the Preconfiguration Console.  
The **Main Menu** appears.
2. Type **3** to select **Interface Settings** and press ENTER.

**Note**

To enter data when using HyperTerminal, disable the scroll lock function on your keyboard.

---

The **Interface Settings** screen appears.

3. To change the interface settings, perform the following tasks:
    - a. Type **1** and press ENTER.
    - b. In the **Speed** and **Duplex** fields, use the space bar to change the network speed and duplex mode.
    - c. Navigate to **Return to upper menu** and press ENTER.
  4. Type **2** and press ENTER to return to the main menu.
  5. Type **6** and press ENTER to save the settings.
-



# Chapter 11

## System tasks

Learn how to perform system tasks on the Preconfiguration Console in the following topics:

- *Performing a diagnostic test on page 11-2*
- *Performing a ping test on page 11-3*
- *Restarting Deep Discovery Inspector on page 11-4*
- *Changing the root password on page 11-5*
- *Configuring manual traffic bypass on page 11-6*
- *Logging off on page 11-5*

## System tasks overview

Use the **System Tasks** screen to do the following system tasks.

- Diagnostic test
- Restart system
- Ping test
- SSH Connection
- Traffic Bypass

Traffic Bypass is only displayed on supported hardware models.

### Performing a diagnostic test

Run a diagnostic test on Deep Discovery Inspector to capture and view a log of hardware and software status and events.

---

#### Procedure

1. Log on to the Preconfiguration Console.

The **Main Menu** appears.

2. Type **4** and press ENTER.

The **System Tasks** screen appears.

3. Type **1** and press ENTER.

The **Diagnostic Test** screen appears.

4. On the HyperTerminal console, go to **Transfer > Capture Text**.
- 



#### Note

This step uses HyperTerminal as an example. Other serial communication applications can be used, but this step may be different.

---

5. Browse to the folder and specify a file name for the log.

**Note**

This step uses HyperTerminal as an example. Other serial communication applications can be used, but this step may be different.

---

6. Click **Start**.

**Note**

This step uses HyperTerminal as an example. Other serial communication applications can be used, but this step may be different.

---

7. Under Run diagnostic test now?, go to **OK** and press ENTER.

While the diagnostic test runs, Deep Discovery Inspector displays log entries on the console.

After the diagnostic test finishes, Deep Discovery Inspector generates a summary log report, and automatically restarts.

8. After Deep Discovery Inspector restarts, open the log summary report to view the results.
- 

## Performing a ping test

Use a Ping test to verify network configuration.

---

### Procedure

1. Log on to the Preconfiguration Console.  
The **Main Menu** appears.
2. Type **4** and press ENTER.  
The **System Tasks** screen appears.
3. Type **3** and press ENTER.  
The **Ping Test** screen appears.
4. Input the server IP address and press **Ping**.

Ping test results appear on the screen.

5. Press ESC to return to the main menu.
- 

## Restarting Deep Discovery Inspector

To restart Deep Discovery Inspector, access the Preconfiguration Console using a serial communication application (for example, HyperTerminal). Using Deep Discovery Inspector to access the Preconfiguration Console allows you to restart the appliance remotely.

When Deep Discovery Inspector starts, it verifies the integrity of its configuration files. The management console password may reset if the configuration file containing password information is corrupted. If management console logon is unsuccessful when using the preferred password, log on using the default password `admin`.

---

### Procedure

1. Log on to the Preconfiguration Console.

The **Main Menu** appears.

2. Type `4` and press ENTER.

The **System Tasks** screen appears.

3. Type `2` and press ENTER.

The **Restart System** screen appears.

4. On the **Restart System** screen, navigate to **OK** and press ENTER.
-

---

## Changing the root password

---



### Important

The Preconfiguration Console uses the US English (en-us) keyboard layout, not your physical keyboard layout. When you set a password in the Preconfiguration Console, the system registers the US keyboard character mapping.

Certain characters are mapped differently in non-US keyboards. For example, on a UK keyboard, the quotation mark (") character is located where the at sign (@) is on a US keyboard.

Make note of any special characters in your password to ensure you can sign in later.

---

### Procedure

1. Log on to the Preconfiguration Console.  
The **Main Menu** appears.
  2. Type **5** and press ENTER.  
The **Change Password** screen appears.
  3. Type the old and new passwords.
  4. Confirm the new password.
  5. Go to **Return to main menu** and press ENTER to return to the main menu and save the settings.
- 

## Logging off

Log off from the Preconfiguration Console with or without saving.

---

### Procedure

1. After changing the configuration settings, return to the main menu.

2. Select one of the following logoff options:
    - To save the changes, type **6** and press ENTER.
    - To exit without saving the changes, type **7** and press ENTER.
  3. Navigate to **OK** and press ENTER.
- 

## Configuring manual traffic bypass

---

### Procedure

1. Log on to the Preconfiguration Console.  
The **Main Menu** appears.
  2. Type **4** and press ENTER.  
The **System Tasks** screen appears.
  3. Type **5** and press ENTER.  
The **Manual Traffic Bypass** screen appears.
  4. Select **Disabled** or **Enabled**.
  5. Press ESC to return to the main menu.
-

# Chapter 12

## Troubleshoot

Learn about common troubleshooting options available in Deep Discovery Inspector and find answers to frequently asked questions in the following topics:

- *Frequently asked questions (FAQs) on page 12-2*
- *Troubleshooting on page 12-5*

## Frequently asked questions (FAQs)

Find answers to frequently asked questions in the following topics.

- [FAQs - appliance rescue on page 12-2](#)
- [FAQs - configuration on page 12-3](#)
- [FAQs - detections on page 12-3](#)
- [FAQs - installation on page 12-3](#)
- [FAQs - upgrade on page 12-4](#)
- [FAQs - virtual analyzer image on page 12-4](#)

### FAQs - appliance rescue

#### How do I rescue the Deep Discovery Inspector appliance?

To rescue the Deep Discovery Inspector appliance, do one of the following:

- Reinstall Deep Discovery Inspector and use the saved or default settings.



**Important**

All log data is deleted during reinstallation.

---

- In the management console, go to **Administration > Updates > Product Updates > Sever Packs / Version Upgrade** and install the service pack or version upgrade file (\*.R.tar).



**Important**

The service pack or version upgrade file must be the same version as the installed version.

---

#### How do I rescue the Deep Discovery Inspector appliance from unexpected traffic bypass?

To rescue the Deep Discovery Inspector appliance from unexpected traffic bypass, restart the Deep Discovery Inspector appliance. For details, see *Power Off / Restart* in the *Deep Discovery Inspector Administrator's Guide*.

## FAQs - configuration

### **Can I register Deep Discovery Inspector to more than one Apex Central server?**

No, you cannot register Deep Discovery Inspector to more than one Apex Central server. For details on registering to an Apex Central server, see *Registering to Apex Central* in the *Deep Discovery Inspector Administrator's Guide*.

## FAQs - detections

### **Why are there no more Virtual Analyzer detections on the widget or the Log Query screen after Deep Discovery Analyzer or TippingPoint Advanced Threat Protection Analyzer reinstalls?**

After Deep Discovery Analyzer or TippingPoint Advanced Threat Protection Analyzer reinstalls, the API key changes. Change the API key on the Deep Discovery Inspector management console from **Administration > Virtual Analyzer > Setup**.

## FAQs - installation

### **Does Deep Discovery Inspector installation disrupt network traffic?**

When deployed out-of-band Deep Discovery Inspector does not disrupt network traffic. When deployed out-of-band, Deep Discovery Inspector installation should not disrupt the network traffic because the appliance connects to the mirror port of the switch and not directly to the network.

When deployed inline, Deep Discovery Inspector can disrupt network traffic.

### **After a fresh installation, Deep Discovery Inspector is unable to obtain a dynamic IP address. What do I do?**

Restart the appliance and verify that it is able to obtain an IP address. Next, connect an Ethernet cable from the management port to a known good Ethernet connection and restart the appliance.

## FAQs - upgrade

### **Can I roll back to a previous version after upgrading to Deep Discovery Inspector 7.0?**

No. The rollback function is not supported.

### **Why does Deep Discovery Inspector still use old components after updating the software and restarting?**

When updating components, Deep Discovery Inspector updates the software first. Restart Deep Discovery Inspector and update the Network Content Inspection Engine. After updating the Network Content Inspection Engine, click **Update**, or wait for the next scheduled update.

### **How do I verify that the migration was successful?**

After the upgrade, go to **Administration > System Logs** and in the **Description** column, find the 2 events that are similar to "Attempted to upgrade database instance" and "Updating Deep Discovery Inspector from <old version> to <new version>." Verify that the **Outcome** is **Success** for those 2 events.

### **What does Deep Discovery Inspector do when the database upgrade process is unsuccessful?**

Deep Discovery Inspector rebuilds a new, empty database. All previous database data is not recoverable.

## FAQs - virtual analyzer image

### **I am unable to download images from an FTP server. What should I do?**

Verify the following:

- The specified server path, user name, and password are correct
- Both active and passive modes are enabled on the FTP server
- The FTP server supports UTF-8 (in case image names or file paths contain multi-byte characters)

### **The Found New Hardware wizard opens when the image is tested in VirtualBox. Does this affect Virtual Analyzer?**

The **Found New Hardware** wizard automatically runs whenever an image is transferred from one machine to another. If the **Found New Hardware** wizard appears when the image is tested in VirtualBox, it may interfere with the CD/DVD auto-run.

## Troubleshooting

This section describes common troubleshooting options available in Deep Discovery Inspector.

- *Slow management console response on page 12-5*
- *Detections on page 12-6*
- *"database is corrupt" alert displays on page 12-8*
- *Virtual analyzer on page 12-8*
- *Virtual analyzer images on page 12-9*
- *Cannot connect to network services on page 12-11*
- *Diagnostics on page 12-11*

### Slow management console response

The management console response is slow or times out.

This occurs when system resources are insufficient.

---

#### Procedure

1. To verify CPU, memory, and disk usage, go to `https://<appliance IP address>/html/troubleshooting.htm`.
2. Under **Real-time Status**, select **System Process (ATOP)**.  
The **System Process** screen appears.
3. Click **Suspend** and verify system resources real-time.

**TABLE 12-1. System Resources**

ITEM	LINE	COLUMN	DESCRIPTION
CPU	CPU	Idle	The lower the number, the busier the CPU is.  If this number is low, view the process information and record the CPU with the highest usage.
MEM	MEM	Free, cache	The "Free" field indicates available memory. A low number means that there is not enough available memory to complete certain actions.
Disk	DSK	Busy	A high number indicates that the disk is busy.

## Detections

- *No detections on all detections screen on page 12-6*
- *"unregistered service" server displays in all detections query on page 12-7*
- *Unknown IP addresses display on a screen on page 12-7*
- *Known safe objects flagged as malicious on page 12-7*

## No detections on all detections screen

No detections appear on the management console **All Detections** screen.

### Procedure

1. Verify that the switch mirror port is configured to mirror both directions of network traffic to the mirror port.

For details, see *Deployment Planning* in the *Deep Discovery Inspector Installation and Deployment Guide*.

2. Verify that networked packets can be captured.
  - a. Go to the troubleshooting pages at <https://<appliance IP address>/html/troubleshooting.htm> and then click on **Network Traffic Dump**.

- b. In the drop-down menu, select the data port in use.
- c. Click **Capture Packets**.
- d. Wait 10 seconds and click **Stop**.
- e. Click **View**.

The **Packet Capture Information** screen appears.

1. In the **Capfile information** section, verify that the data rate matches the real-time traffic rate.
2. Click **Conversation by TCP** or **Conversation by UDP**, and verify that TCP and UDP packets are visible.

---

## "unregistered service" server displays in all detections query

A server appears as an **Unregistered service** on the **All Detections** screen.

Verify that the server has been added to the Registered Services list. For more details, see *Adding Registered Services* in the *Deep Discovery Inspector Administrator's Guide*.

## Unknown IP addresses display on a screen

IP addresses that do not belong to your network appear on a screen.

Make sure that all IP addresses in your network have been added to the network group correctly. For details, see *Adding Network Groups* in the *Deep Discovery Inspector Administrator's Guide*.

## Known safe objects flagged as malicious

Known safe files, IP addresses, domains, and URLs are flagged malicious by Virtual Analyzer.

- Add any safe objects to the Allow List. For details, see *Creating a Custom Allow List* in the *Deep Discovery Inspector Administrator's Guide*.

- Move any safe objects from the Suspicious Objects list to the Allow List. For details, see *Viewing Suspicious Objects* in the *Deep Discovery Inspector Administrator's Guide*.

## "database is corrupt" alert displays

The management console displays the "Database is corrupt" alert.

This message occurs when the database has been corrupted. As a precaution, data is not written to the database, which now must be manually repaired. For details, see *Performing Product Database Maintenance* in the *Deep Discovery Inspector Administrator's Guide*.



### **WARNING!**

Performing manual repairs on a database results in permanent loss of data.

---

## Virtual analyzer

- [Cannot upload OVA on page 12-8](#)
- [No virtual analyzer response to file submissions on page 12-8](#)

### **Cannot upload OVA**

The OVA is too large and cannot upload into Deep Discovery Inspector.

The OVA image must be between 1 GB and 30 GB in size.

### **No virtual analyzer response to file submissions**

File samples were sent to Deep Discovery Inspector but no response was received from Virtual Analyzer.

To receive results, enable file submission to Virtual Analyzer.

---

### **Procedure**

1. Verify that Virtual Analyzer is enabled.

For details, see *Enabling Virtual Analyzer* in the *Deep Discovery Inspector Administrator's Guide*.

2. Go to **Administration > Virtual Analyzer > File Submissions > Add** and verify file submission rules are configured as follows:

- Under **Criteria**, click the applicable file types.
- Under **Actions**, click **Submit**.

For details, see *File Submission Rules* in the *Deep Discovery Inspector Administrator's Guide*.

3. Go to **Dashboard > Virtual Analyzer Status** and view the **Virtual Analyzer** status field on the **Virtual Analyzer** widget.

- a. If Virtual Analyzer status is "Disabled", enable Virtual Analyzer. Go to **Administration > Virtual Analyzer > Setup** to enable file submission to a Virtual Analyzer.

For details, see *Enabling Virtual Analyzer* in the *Deep Discovery Inspector Administrator's Guide*.

- b. If the Virtual Analyzer status is "Enabled", restart Deep Discovery Inspector.

4. Verify notification settings.

For details, see *Configuring Email Notification Settings* in the *Deep Discovery Inspector Administrator's Guide*.

5. If the problem persists, contact your technical support provider.

---

## Virtual analyzer images

- *The installation media does not start on page 12-9*
- *"found new hardware" wizard on page 12-10*
- *An image displays a blue screen on page 12-10*

## The installation media does not start

The installation CD/DVD does not automatically start.

Verify items by testing the Virtual Analyzer images in VirtualBox.

---

### **Procedure**

1. In Oracle VM VirtualBox Manager, click the imported custom Virtual Analyzer image in the left panel.
  2. Click **Settings** and select **Storage**.
  3. Select **Controller: IDE** and verify that the specified type is **PIIX4**.
  4. Select the optical disc icon and verify that the specified CD/DVD drive is **IDE Secondary Master**.
- 

### **"found new hardware" wizard**

During Virtual Analyzer image creation, the **Found New Hardware** wizard appears.

The **Found New Hardware** wizard automatically runs whenever an image is transferred from one machine to another.

When an image is imported, the **Found New Hardware** wizard may interfere with the CD/DVD auto-run. Make sure the Virtual Analyzer image is created and prepared using the correct procedure. For details, see the *Virtual Analyzer Image Preparation User's Guide* at <https://docs.trendmicro.com/en-us/enterprise/virtual-analyzer-image-preparation.aspx>.

### **An image displays a blue screen**

An image displays the blue "Cannot find Operating System" screen when tested in VirtualBox.

Verify items by testing the Virtual Analyzer images in VirtualBox.

---

### **Procedure**

1. In Oracle VM VirtualBox Manager, click the imported custom Virtual Analyzer image in the left panel.

2. Click the **Settings** and select **System**.
  3. On the **Motherboard** tab, verify that the following are selected:
    - **Chipset: ICH9**
    - **Enable IO APIC**
  4. On the **Processor** tab, verify that the PAE/NX is enabled.
  5. On the **Acceleration** tab, verify that the TV-x/AMD-V is enabled.
- 

## Cannot connect to network services

You can use the **Network Services Diagnostics** screen to test the network connections for the internal Virtual Analyzer and other network services.

---

### Procedure

1. Go to <https://<appliance IP address>/html/troubleshooting.htm> and click **Network Services Diagnostics**.
2. Select one or more enabled services and click **Test**.

Wait for the connection test to complete. The time required depends on the network environment and the number of services selected. View the connection test result in the **Result** column.

---

## Diagnostics

For any issue not mentioned, run diagnostics to give test results and debug logs to your Trend Micro Deep Discovery Inspector support provider.

---

### Procedure

1. Open the preconfiguration console.
2. Select **4) System Tasks**, and press ENTER.
3. Follow the instructions in *Performing a Diagnostic Test* in the *Deep Discovery Inspector Installation and Deployment Guide*.

4. Generate a debug log.

- a. Go to `https://<appliance IP address>/html/troubleshooting.htm`.
- b. Go to **Logs > Debug Logs**
- c. Under **Debug Log Settings**, set the debug level to **Debug** for the modules you want to debug.

To avoid performance loss, only set the debug level to **Debug** for required modules. Contact your support provider for advice on how to set the level to debug and obtain the debug report.

- d. Click **Save**.
- e. If possible, reproduce the issue.
- f. Select one or more debug logs to export.
  - **Export debug log.**
  - **Export advanced debug log.**
  - Select one or more dated debug logs under **Export advanced debug log** to export the advanced debug log for that date.
- g. Click **Export**.



**Tip**

To conserve system resources, perform one export at a time.

---

- h. Under **Debug Log Settings**, click **Reset to default log settings**.
  - i. Under **Debug Log Maintenance**, click **Purge Debug Logs**.
- 

## Inline deployment and TLS inspection

- [Network connectivity issue on page 12-13](#)
- [TLS connection issue on page 12-14](#)

## Network connectivity issue

### Procedure

1. Verify that the link status of the inline port is connected.
  - a. In the management console, go to **Administration > System Settings > Network Interface**.
  - b. In the **Inline Interfaces** section, view the connection status in the **Status** column.

Click the right arrow



) at the beginning of the row to display additional information about the connection status.

▼ Inline Interfaces


Inline interfaces provide uninterrupted network access when traffic can no longer flow through an interface.

Enable manual traffic bypass

Mode	Status	Interface	Function
Inline	🔌	Port 6	Inline traffic
Network interface: Slot 4: Port 1 MAC address: 00:e0:ed:da:ff:b7 Speed: Not connected			
	🔌	Port 7	Inline traffic
Network interface: Slot 4: Port 2 MAC address: 00:e0:ed:da:ff:b8 Speed: Not connected			

2. If the link status of the inline port is not connected, then verify that the following applicable items are correct.
  - Interface speed setting
  - Interface duplex setting
  - Interface and transceiver compatibility (particularly for fiber connections)
3. Verify that there is network activity.

- a. In the top-right corner of the management console, hover over the throughput to get more information about the network activity.

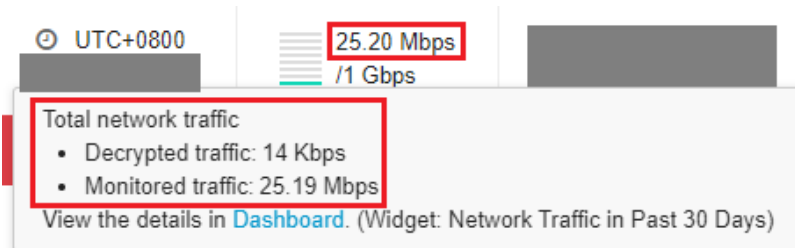

4. If there is no network activity, then verify that TLS traffic inspection is enabled in Deep Discovery Inspector and verify that the cable is securely connected to Deep Discovery Inspector and the network device.
5. (Optional) To monitor when traffic bypass unexpectedly occurs, configure agent mode or trap mode for SNMP in Deep Discovery Inspector.

For details, see *Network Interface* and *SNMP* in the Administrator's Guide.

---

## TLS connection issue

---

### Procedure

1. Identify the reason for the TLS connection issue.
  - a. In the management console, go to **Administration > Monitoring / Scanning > TLS Traffic Inspection > Inspection Settings > Domain Tunneling > Configure tunneled domain**.
  - b. If you understand and are able to resolve the issue, then do so. Otherwise, use the steps below to continue troubleshooting.
2. If you are unable to find the issue in **Domain Tunneling**, then view abnormal connection information in the **TLS Connection Monitoring** troubleshooting screen.

- a. Go to `https://<appliance IP address>/html/troubleshooting.htm` and then click **TLS Connection Monitoring**.

The **TLS Connection Monitoring** screen appears.

- b. Type a client IP address and then click **Monitor**.
- c. After sufficient data is monitored, stop the monitoring.

**Note**

The monitoring can only save up to 10 minutes of data.

---


- d. If you understand and are able to resolve the issue, then do so. Otherwise, use the steps below to continue troubleshooting.
3. If you are unable to find the issue in **TLS Connection Monitoring**, then collect more details and contact your support provider.
    - a. Go to `https://<appliance IP address>/html/troubleshooting.htm` and then click **TLS Network Traffic Dump**.  
The **TLS Network Traffic Dump** screen appears.
    - b. Type a client IP address and optionally type the server IP address and port, and then click **Capture Packets**.
    - c. After sufficient data is captured, stop the capture.
    - d. If the client application that you are using has a log file with TLS connection information, take a screen shot of the client application log.
    - e. Take screen shots of your TLS traffic inspection settings.
    - f. Send the traffic dump and screen shots to your support representative.
-



# Part V

## Technical support

Learn about the following topics:

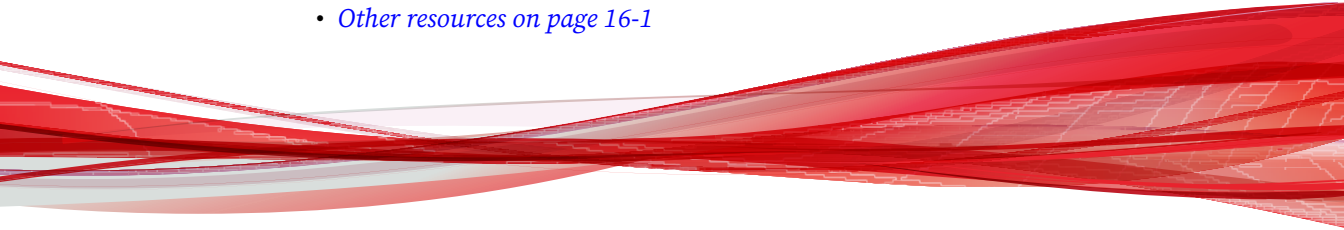- *Troubleshooting resources on page 13-1*
  - *Contacting Trend Micro on page 14-1*
  - *Sending suspicious content to TrendAI™ on page 15-1*
  - *Other resources on page 16-1*
- 



# Chapter 13

## Troubleshooting resources

Before contacting technical support, consider visiting the following TrendAI™ online resources.

## Using the support portal

The TrendAI™ Support Portal is a 24x7 online resource that contains the most up-to-date information about both common and unusual problems.

---

### Procedure

1. Go to <https://success.trendmicro.com>.
  2. Select from the available products or click the appropriate button to search for solutions.
  3. Use the **Search Support** box to search for available solutions.
  4. If no solution is found, click **Contact Support** and select the type of support needed.
- 



### Tip

To submit a support case online, visit the following URL:

<https://success.trendmicro.com/en-US/contactus/>

---

A TrendAI™ support engineer investigates the case and responds in 24 hours or less.

---

## Threat encyclopedia

Most malware today consists of blended threats, which combine two or more technologies, to bypass computer security protocols. TrendAI™ combats this complex malware with products that create a custom defense strategy. The Threat Encyclopedia provides a comprehensive list of names and symptoms for various blended threats, including known malware, spam, malicious URLs, and known vulnerabilities.

Go to <https://www.trendmicro.com/vinfo/us/threat-encyclopedia/#malware> to learn more about:

- Malware and malicious mobile code currently active or "in the wild"

- Correlated threat information pages to form a complete web attack story
- Internet threat advisories about targeted attacks and security threats
- Web attack and online trend information
- Weekly malware reports



# Chapter 14

## Contacting Trend Micro

In the United States, Trend Micro representatives are available by phone:

Address	Trend Micro, Incorporated 225 E. John Carpenter Freeway, Suite 1500 Irving, Texas 75062 U.S.A.
Phone	Phone: +1 (817) 569-8900 Toll-free: (888) 762-8736
Website	<ul style="list-style-type: none"><li>• <a href="https://www.trendmicro.com">https://www.trendmicro.com</a></li><li>• <a href="https://success.trendmicro.com/en-US/contactus/">https://success.trendmicro.com/en-US/contactus/</a></li></ul>

- Worldwide support offices:

<https://www.trendmicro.com/us/about-us/contact/index.html>

- Trend Micro product documentation:

<https://docs.trendmicro.com>

## Speeding up the support call

To improve problem resolution, have the following information available:

- Steps to reproduce the problem
- Appliance or network information
- Computer brand, model, and any additional connected hardware or devices
- Amount of memory and free hard disk space
- Operating system and service pack version
- Version of the installed agent
- Serial number or Activation Code
- Detailed description of install environment
- Exact text of any error message received

# Chapter 15

## Sending suspicious content to TrendAI™

Several options are available for sending suspicious content to TrendAI™ for further analysis.

## Email Reputation Services

Query the reputation of a specific IP address and nominate a message transfer agent for inclusion in the global approved list:

<https://servicecentral.trendmicro.com/en-us/ers/>

Refer to the following Knowledge Base entry to send message samples to TrendAI™:

<https://success.trendmicro.com/en-US/solution/KA-0001177>

## File Reputation Services

Gather system information and submit suspicious file content to TrendAI™:

<https://success.trendmicro.com/en-US/solution/KA-0002449>

Record the case number for tracking purposes.

## Web Reputation Services

Query the safety rating and content type of a URL suspected of being a phishing site, or other so-called "disease vector" (the intentional source of Internet threats such as spyware and malware):

<https://global.sitesafety.trendmicro.com/>

If the assigned rating is incorrect, send a re-classification request to TrendAI™.

# Chapter 16

## Other resources

In addition to solutions and support, there are many other helpful resources available online to stay up to date, learn about innovations, and be aware of the latest security trends.

## Download center

From time to time, TrendAI™ may release a patch for a reported known issue or an upgrade that applies to a specific product or service. To find out whether any patches are available, go to:

<https://www.trendmicro.com/download/>

If a patch has not been applied (patches are dated), open the Readme file to determine whether it is relevant to your environment. The Readme file also contains installation instructions.


# Appendix A

## Ports used by Deep Discovery Inspector


Deep Discovery Inspector uses various ports for communication, system operations, and security functions.



The following table explains what ports Deep Discovery Inspector uses and why they are used:


PORT	PROTOCOL	FUNCTION	PURPOSE
22	TCP	Listening	<ul style="list-style-type: none"> <li>• Connect to the preconfiguration console</li> <li>• Send logs and data to the Threat Management Services Portal if Deep Discovery Inspector is registered over SSH</li> </ul>
25	TCP	Outbound	Deep Discovery Inspector sends notifications and scheduled reports through SMTP.
53	TCP/UDP	Outbound	Deep Discovery Inspector uses this port for DNS resolution.
67	UDP	Outbound	Deep Discovery Inspector sends requests to the DHCP server if IP addresses are assigned dynamically.
68	UDP	Listening	Deep Discovery Inspector receives responses from the DHCP server.

PORT	PROTOCOL	FUNCTION	PURPOSE
80	TCP	Listening	<ul style="list-style-type: none"> <li>• Deep Discovery Inspector connects to other computers and integrated Trend Micro products and hosted services through this port.</li> <li>• Share threat intelligence information with other products</li> </ul>
		Outbound	<p>Deep Discovery Inspector connects to other computers and integrated Trend Micro products and hosted services through this port.</p> <ul style="list-style-type: none"> <li>• Communicate with Trend Micro Apex Central if Deep Discovery Inspector is registered over HTTP</li> <li>• Update components by connecting to the ActiveUpdate server</li> </ul>
123	UDP	Outbound	Deep Discovery Inspector uses this port to connect to the NTP server to synchronize time.
137	UDP	Outbound	Deep Discovery Inspector uses NetBIOS to resolve IP addresses to host names.
161	UDP	Listening	Deep Discovery Inspector uses this port for SNMP agent listening and protocol translation.
162	UDP	Outbound	Deep Discovery Inspector uses this port to send SNMP trap notifications.
389	TCP/UDP	Outbound	Deep Discovery Inspector uses this port to retrieve user information from LDAP servers.
			<hr/>  <b>Important</b> This is the default port. Configure this port through the management console. <hr/>
443	TCP	Listening	Access the management console with a computer through HTTPS

PORT	PROTOCOL	FUNCTION	PURPOSE
		Outbound	<div data-bbox="713 272 771 331"></div> <p data-bbox="790 269 895 293"><b>Important</b></p> <p data-bbox="790 306 1163 362">This is the default port for the following features:</p> <ul data-bbox="817 391 1190 607" style="list-style-type: none"> <li data-bbox="817 391 1163 446">• Communicate with Deep Discovery Director - On-premises version</li> <li data-bbox="817 472 1190 527">• Communicate with Trend Micro Apex Central</li> <li data-bbox="817 553 1190 607">• Send files to Deep Discovery Analyzer for sandbox analysis</li> </ul> <p data-bbox="790 634 1083 690">Configure this port through the management console.</p> <hr/> <ul data-bbox="736 740 1180 1370" style="list-style-type: none"> <li data-bbox="736 740 1180 795">• Communicate with Deep Discovery Director - On-premises version</li> <li data-bbox="736 812 1180 836">• Communicate with Trend Micro Apex Central</li> <li data-bbox="736 852 1126 907">• Communicate with Trend Micro Service Gateway</li> <li data-bbox="736 924 1099 948">• Communicate with Trend Vision One</li> <li data-bbox="736 964 1126 1019">• Connect to MITRE ATT&amp;CK™ Tactics and Techniques website</li> <li data-bbox="736 1036 1126 1060">• Connect to Trend Micro Threat Connect</li> <li data-bbox="736 1076 1110 1131">• Query Mobile App Reputation Service through Smart Protection Server</li> <li data-bbox="736 1148 1153 1172">• Query Predictive Machine Learning engine</li> <li data-bbox="736 1188 1177 1243">• Query the Web Reputation Services blocking reason</li> <li data-bbox="736 1260 1059 1284">• Register to the mitigation server</li> <li data-bbox="736 1300 1150 1370">• Scan APK files and send detection information to the Mobile App Reputation Service</li> </ul>

PORT	PROTOCOL	FUNCTION	PURPOSE
			<ul style="list-style-type: none"> <li>• Send files to Deep Discovery Analyzer for sandbox analysis</li> <li>• Send logs and data to the Threat Management Services Portal if Deep Discovery Inspector is using SSL encryption</li> <li>• Share anonymous threat information with the Smart Protection Network</li> <li>• Share threat intelligence information with Trend Micro TXOne OT Defense Console</li> <li>• Verify the safety of files through the Certified Safe Software Service</li> </ul>
465	TCP	Outbound	<p>Deep Discovery Inspector sends notifications and scheduled reports through SMTP over TCP with SSL/TLS encryption.</p>
514	UDP	Outbound	<p>Deep Discovery Inspector sends logs to a syslog server over UDP.</p> <hr/> <p> <b>Important</b></p> <ul style="list-style-type: none"> <li>• The port must match the syslog server.</li> <li>• This is the default port. Configure this port through the management console.</li> </ul> <hr/>
587	TCP	Outbound	<p>Deep Discovery Inspector sends notifications and scheduled reports through SMTP over TCP with STARTTLS encryption.</p>

PORT	PROTOCOL	FUNCTION	PURPOSE
601	TCP	Outbound	<p>Deep Discovery Inspector uses this port to send logs to a syslog server.</p> <hr/> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li>• This is the default port. Configure this port through the management console.</li> <li>• The port must match the syslog server.</li> </ul>
636	UDP	Outbound	<p>Deep Discovery Inspector uses this port to retrieve user information from LDAP servers.</p> <hr/> <p> <b>Important</b></p> <p>This is the default port. Configure this port through the management console.</p>
3268	TCP	Outbound	Deep Discovery Inspector uses this port to retrieve user information from LDAP servers.
3269	TCP	Outbound	Deep Discovery Inspector uses this port to retrieve user information from LDAP servers.
4343	TCP	Outbound	Communicate with Smart Protection Server
5275	TCP	Outbound	<ul style="list-style-type: none"> <li>• Query Web Reputation Services through Smart Protection Server using HTTPS</li> <li>• Query Web Reputation Services through Service Gateway Smart Protection Server using HTTPS</li> </ul>

PORT	PROTOCOL	FUNCTION	PURPOSE
6514	TCP	Outbound	<p>Deep Discovery Inspector sends logs to a syslog server over TCP with SSL encryption.</p> <hr/> <p> <b>Important</b></p> <ul style="list-style-type: none"><li>• The port must match the syslog server.</li><li>• This is the default port. Configure this port through the management console.</li></ul> <hr/>
8514	UDP	Outbound	<p>Deep Discovery Inspector sends syslog information to Deep Discovery Advisor if Deep Discovery Inspector is integrated with Deep Discovery Advisor.</p> <hr/> <p> <b>Important</b></p> <p>This is the default port. It can be configured through the management console, and it must match the syslog settings on Deep Discovery Advisor.</p> <hr/>
8080	TCP	Listening	<p>Deep Discovery Inspector uses this port to share threat intelligence with other products.</p> <hr/> <p> <b>Important</b></p> <p>This is the default port. Configure this port through the management console.</p> <hr/>



**TREND MICRO INCORPORATED**

225 E. John Carpenter Freeway, Suite 1500  
Irving, Texas 75062 U.S.A.  
Phone: +1 (817) 569-8900, Toll-free: (888) 762-8736

[www.trendmicro.com](http://www.trendmicro.com)