

TREND MICRO™ Deep Discovery Inspector 4000 Quick Start Card

Deep Discovery Inspector is a third-generation threat management solution that delivers advanced persistent threat (APT) and targeted attack visibility, insight, and control. Deep Discovery Inspector provides IT administrators with critical security information, alerts, and reports.


1 Opening and Inspecting the Carton

Verify that the Deep Discovery Inspector carton contains the following items:



- (1) Rack rails
- (2) Document and DVD
- (3) Power cords
- (4) Deep Discovery Inspector appliance

2 Examining the Deep Discovery Inspector Appliance

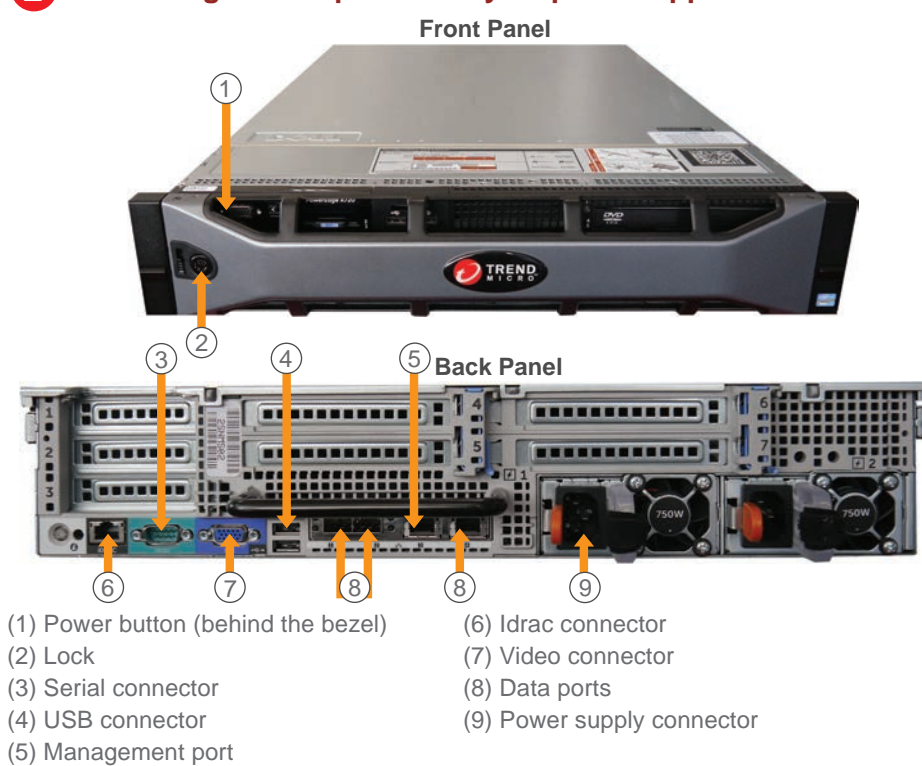

- (1) Power button (behind the bezel)
- (2) Lock
- (3) Serial connector
- (4) USB connector
- (5) Management port
- (6) Idrac connector
- (7) Video connector
- (8) Data ports
- (9) Power supply connector

Note: Dual AC power slots provide protection in case one of the AC power slots fails.

3 Recommended Network Environment

Deep Discovery Inspector is deployed offline. This means that Deep Discovery Inspector does not interrupt network traffic. A switch monitors both internal and external traffic and passes the information to Deep Discovery Inspector. Deep Discovery Inspector uses this information to monitor known and potential threats.

You can connect switches with a mirror port to any of the data ports. Deep Discovery Inspector uses these ports as listening ports and will not interrupt traffic handled by the switches.

Trend Micro recommends using a specified network when using an internal Virtual Analyzer for analyzing samples. Ideally, specified networks are connected to the Internet, but do not have proxy settings, proxy authentication, or any connection limitations.

To plan your network deployment environment, see the Deployment Planning section in the Installation and Deployment Guide.

4 Deployment Checklist

Requirement	Details
Activation Code	Obtain from Trend Micro
Monitor and VGA cable	Connects to the VGA port of the appliance
USB keyboard	Connects to the USB port of the appliance
USB mouse	Connects to the USB port of the appliance
Ethernet cables	<ul style="list-style-type: none"> • One cable connects the management port of the appliance to the management network. • One or more cables connect the data port with a switch mirror port to monitor traffic. • (Optional) One cable connects a data port to a specified network that is reserved for an internal Virtual Analyzer.
Internet-enabled computer	A computer with the following software installed: <ul style="list-style-type: none"> • Google™ Chrome™ 40.0 or later • Microsoft™ Internet Explorer™ 10.0 or 11.0 • Mozilla™ FireFox™ 35.0 or later • Adobe™ Flash™ player 8.0 or later
IP addresses	<ul style="list-style-type: none"> • One static IP address in the management network • (Optional) One additional IP address for an internal Virtual Analyzer, if connected to a specified network with Internet connectivity

5 Setting Up the Hardware

1. Mount the Deep Discovery Inspector appliance in a standard 19-inch 4-post rack, or on a free-standing object, such as a sturdy desk.

Note: When mounting the appliance, leave at least two inches of clearance on all sides for proper ventilation and cooling.

2. Connect the appliance to a power source.
3. Connect the monitor to the VGA port at the back of the appliance.
4. Connect the keyboard and mouse to the USB ports at the back of the appliance.
5. Connect the management port to your network.
6. Power on the appliance.

6 Performing Initial Configuration: Preconfiguration Console

Perform the initial preconfiguration from the Preconfiguration Console with any of the following:

- VGA port
- Serial port

For details on how to access the Preconfiguration Console, see the Preconfiguration chapter in the Installation and Deployment Guide.

1. On the **Preconfiguration Console** logon screen, type the following default logon credentials:
 - **User name:** admin
 - **Password:** admin

2. On the **Preconfiguration Console** main menu, type 2 to select **Device Settings** and press **Enter**.

3. On the **Device Settings** screen, configure IP address settings.

To set a dynamic IP address:

Use the space bar to toggle the IP address option to **dynamic**.

To set a static IP address:

A. In the **Type** field, use the space bar to toggle the IP address option to **static**.

B. Type the following network settings:

- **IP address (IPv4):** the default is 192.168.252.1
- **Subnet mask:** the default is 255.255.255.0
- (Optional) **Gateway:** the default is 192.168.252.254
- (Optional) **DNS Server 1**
- (Optional) **DNS Server 2**
- **Host name:** the default is localhost

Note: Deep Discovery Inspector 3.8 can be deployed in IPv6 environments.

4. (Optional) Type a **VLAN ID**.

5. (Optional) Register to Trend Micro Control Manager by using the space bar to toggle the option to **[yes]**.

6. Navigate to **Return to main menu** and press **Enter**.

The initial configuration is complete and the management console is accessible.

7 Performing Initial Configuration: Management Console

1. Using a supported web browser, open the management console at: <https://<Deep Discovery Inspector IP Address>>

Note:

- Set the **Internet Security level** to **Medium**. Enable **ActiveX Binary and Script**.
- Use the IP address that you specified during the initial configuration.

2. On the logon screen, type the following default credentials:

- **User name:** admin
- **Password:** admin

3. Click **Log On**.

4. Type a new password, and then retype it to confirm.

5. On **Administration > System Settings > Time / Encoding Options**, set the system time.

6. On **Administration > License**, activate Deep Discovery Inspector. The Setup Guide appears.

7. To configure post-deployment settings, follow the steps in the Setup Guide. For details on how to set up your threat protection, see the Get Started chapter in the Administrator's Guide.

8. Connect the data port(s) on your Deep Discovery appliance to the traffic source.

8 Contact Information

• **Website:**

<http://www.trendmicro.com>

• **List of worldwide offices and phone numbers:**

<http://www.trendmicro.com/us/about-us/contact/index.html>