



## I/O Modules Overview (TPS TXE Devices)

Use these instructions to set up the I/O modules supported in your Trend Micro™ TippingPoint™ TPS TXE security devices.

### Before You Begin

- Review the release notes for your product for any late-breaking changes to the installation instructions.
- Read and follow all safety information listed in documentation that shipped with your product.
- Complete the installation of your TippingPoint security device.

### ESD Requirements

Damage from Electromagnetic Static Discharge (ESD) can occur when electronic components are improperly handled. Improper handling can result in complete or intermittent system failures. Proper ESD protection is required whenever you handle equipment. The following general grounding guidelines apply:

- Always use an ESD wrist strap when adding or removing components from the chassis.
- Avoid touching the circuit boards or connectors on all cards and modules.
- Avoid contact between the printed circuit boards and clothing. The wrist strap only protects components from ESD voltages on the body. ESD voltages on clothing can still cause damage.

Place a removed component board-side-up on an antistatic surface or in a static-shielding container that is also grounded to the same point as the device. If you plan to return the component to the factory, immediately place it in a static-shielding container.

### I/O Module Options

TPS TXE devices support both standard I/O modules and bypass I/O modules (refer to the following table) for fiber and copper components.

---

**Important:** Only transceiver modules available from Trend Micro have been validated to achieve optimal performance with TippingPoint products. Other vendor devices are not supported and could be detrimental to proper operation of the TippingPoint system.

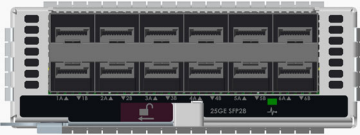

---

Bypass I/O modules are zero-power high-availability (ZPHA) modules that permit network traffic and services while bypassing the device entirely when the device loses power.

**Note:** Fiber modules do not support auto-negotiation.

All standard I/O modules and all bypass I/O modules are hot-swappable.

**Table 1: Standard I/O Modules**

Module Part Number	Module Description	Transceiver Part Number	Transceiver Description
TPNN0370 	6-Segment 25/10/1 GbE SFP28	TPNN0384	TippingPoint 25 GbE SFP28 SR Transceiver
		TPNN0385	TippingPoint 25 GbE SFP28 LR Transceiver
		TPNN0057	TippingPoint 10 GbE SFP+ SR Transceiver
		TPNN0058	TippingPoint 10 GbE SFP+ LR Transceiver
		TPNN0054	TippingPoint 1 GbE SFP RJ45 Transceiver (Copper)
		TPNN0055	TippingPoint 1 GbE SFP SX Transceiver
		TPNN0056	TippingPoint 1 GbE SFP LX Transceiver
TPNN0371 	4-Segment 100/40 GbE QSFP28	TPNN0382	TippingPoint 100 GbE QSFP28 SR4 Transceiver
		TPNN0383	TippingPoint 100 GbE QSFP28 LR4 Transceiver
		TPNN0067	TippingPoint 40 GbE QSFP+ SR4 Transceiver
		TPNN0327	TippingPoint 40 GbE QSFP+ LR4 Transceiver

**Table 2: Bypass I/O Modules**

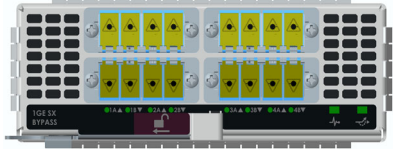
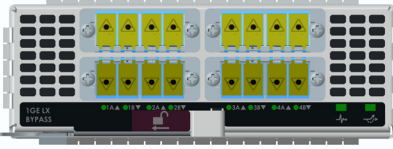
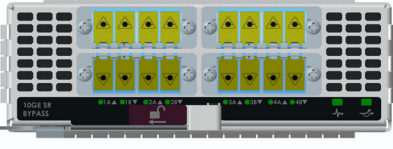
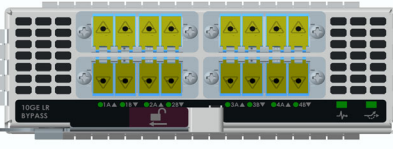
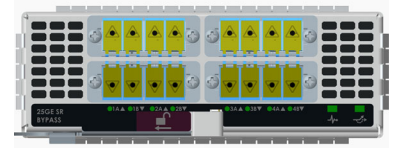
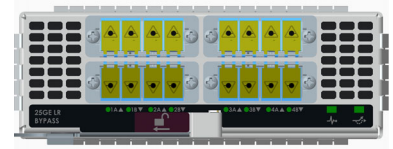
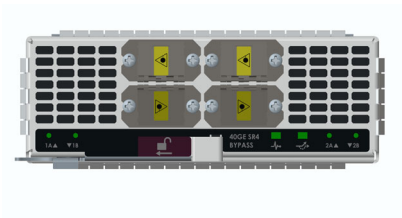
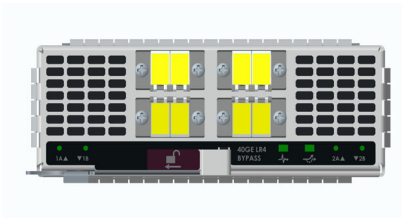
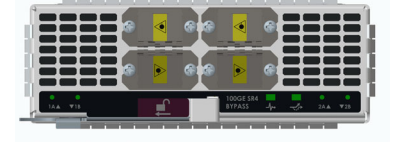
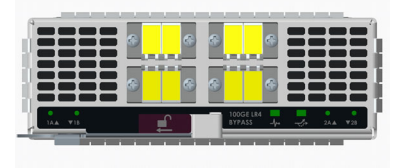
Module Part Number	Module Description
<p>TPNN0412</p> 	<p>4-Segment 1 GbE SR Bypass</p>
<p>TPNN0413</p> 	<p>4-Segment 1 GbE LR Bypass</p>
<p>TPNN0410</p> 	<p>4-Segment 10 GbE SR Bypass</p>
<p>TPNN0411</p> 	<p>4-Segment 10 GbE LR Bypass</p>
<p>TPNN0374</p> 	<p>4-Segment 25 GbE SR Bypass</p>
<p>TPNN0375</p> 	<p>4-Segment 25 GbE LR Bypass</p>

Table 2: Bypass I/O Modules (continued)

Module Part Number	Module Description
<p>TPNN0408</p>  <p>The image shows a TPNN0408 bypass module. It is a rectangular metal component with a front panel. The panel features four yellow SR4 ports arranged in a 2x2 grid. Below the ports, there are several status LEDs and a small label that reads '40GE SR4 BYPASS'. The module is designed to be inserted into a network switch chassis.</p>	<p>2-Segment 40GbE SR4 Bypass</p>
<p>TPNN0409</p>  <p>The image shows a TPNN0409 bypass module. It is a rectangular metal component with a front panel. The panel features four yellow LR4 ports arranged in a 2x2 grid. Below the ports, there are several status LEDs and a small label that reads '40GE LR4 BYPASS'. The module is designed to be inserted into a network switch chassis.</p>	<p>2-Segment 40GbE LR4 Bypass</p>
<p>TPNN0372</p>  <p>The image shows a TPNN0372 bypass module. It is a rectangular metal component with a front panel. The panel features four yellow SR4 ports arranged in a 2x2 grid. Below the ports, there are several status LEDs and a small label that reads '100GE SR4 BYPASS'. The module is designed to be inserted into a network switch chassis.</p>	<p>2-Segment 100 GbE SR4 Bypass</p>
<p>TPNN0373</p>  <p>The image shows a TPNN0373 bypass module. It is a rectangular metal component with a front panel. The panel features four yellow LR4 ports arranged in a 2x2 grid. Below the ports, there are several status LEDs and a small label that reads '100GE LR4 BYPASS'. The module is designed to be inserted into a network switch chassis.</p>	<p>2-Segment 100 GbE LR4 Bypass</p>

---

**Important:** Handle all I/O modules with care. The bypass modules contain mechanical switches that are very delicate and can cause network disruption if handled improperly.

---

# Add I/O Modules

TippingPoint devices come with blank modules inserted into module slots.



**Figure 1. Blank Module**

---

**Warning:** Do not leave slots empty for an extended period of time. Insertion of a blank module or I/O module ensures that the device is correctly cooled.

---

To remove the blank module, use your thumb and finger in each pocket to pinch the release mechanism, and gently pull the module out of its chamber.

To insert an I/O module:

1. Unlock the locking lever that is attached to the faceplate at the bottom of the I/O module by pulling it open from the lever's right side.

---

**CAUTION:** The locking lever must be fully opened before inserting a module. Inserting a module without opening the locking lever can cause the module to become stuck in the slot and prevent its removal.



---

2. To insert the I/O module, slide the module into the empty module slot. When the module is in the correct position, manually close the locking lever to complete the insertion and lock the module in its slot.

## Module LEDs

The following table describes the module LEDs.

Feature	LED	Color	Description
Optical transceiver port	Link	Green	Link is active.
	Activity	Blinking green	Data traffic passing.

Feature	LED	Color	Description
Module Health 	Status	Green	The module is configured, in service, and in good health.
		Blinking amber	The module has been inserted and powered up, but is not yet recognized by the software.
		Solid amber	The module is experiencing a fault.
Bypass 	Status	Off	Module in bypass.
		Green	Module in normal mode (not in bypass).

## Hot-Swapping I/O Modules

I/O modules can be installed or removed while the device is in the normal operating state. *Hot-swapping I/O modules during system initialization is not supported.*

When you insert a bypass I/O module, the bypass I/O module always starts up in bypass mode. A bypass I/O module remains in bypass mode until you remove it from bypass mode through the CLI or SMS. For information about how to use normal mode instead of bypass mode, refer to the SMS or CLI documentation.

## Privacy and Personal Data Collection Disclosure

Certain features available in Trend Micro products collect and send feedback regarding product usage and detection information to Trend Micro. Some of this data is considered personal in certain jurisdictions and under certain regulations. If you do not want Trend Micro to collect personal data, you must ensure that you disable the related features.

The following link outlines the types of data that the Security Management System collects and provides detailed instructions on how to disable the specific features that feedback the information.

<https://success.trendmicro.com/data-collection-disclosure>

Data collected by Trend Micro is subject to the conditions stated in the Trend Micro Privacy Policy:

[https://www.trendmicro.com/en\\_us/about/legal/privacy-policy-product.html](https://www.trendmicro.com/en_us/about/legal/privacy-policy-product.html)

## Legal Notice

© Copyright 2023 Trend Micro Incorporated. All rights reserved.

Trend Micro, the Trend Micro t-ball logo, TippingPoint, and Digital Vaccine are trademarks or registered trademarks of Trend Micro Incorporated. All other product or company names may be trademarks or registered trademarks of their owners.

Publication: August 2023